

致力于电子测试、维护领域!



PicoScope® 9400A Series Sampler-extended real-time oscilloscopes

User's guide

ps9400Aug-1

Contents

1 Welcome	. 6
2 Introduction	. 8
1 Overview	8
2 Minimum PC requirements	8
3 Safety information	9
1 Symbols	9
2 Maximum terminal ratings	. 10
3 Grounding	. 11
4 External connections	. 11
5 Environment	. 12
6 Care of the product	. 12
3 How to use your oscilloscope	13
1 Acquiring, triggering and displaying waveforms	. 13
2 Measuring waveforms	. 17
1 Graticule measurements	. 17
2 Marker measurements	. 18
3 Automated measurements	. 19
4 Histogram measurement	. 20
5 Eye diagram measurements	. 22
6 Mask test	. 23
3 Waveform math	. 25
4 Connecting using LAN or USB interfaces	
1 Select current interface	. 27
2 Configure common LAN Settings	
3 Configure the oscilloscope's LAN settings	
4 Configure other PicoSample 4 software LAN settings	. 30
4 Product information	33
1 What do I get?	. 33
2 Connections	. 34
5 Specifications and characteristics	36
1 Vertical	. 36
2 Horizontal	. 40
3 Acquisition	. 41
4 Trigger	. 43
1 Internal trigger	. 43
2 External direct trigger	. 44
3 External prescaled trigger	. 45
5 Display	. 46
6 Save/Recall	. 47

7 Marker	
8 Measure	
9 Mathematics	
10 Histogram	
11 Eye diagram	
12 Mask test	
13 Inputs/outputs	
14 Power requirements	
15 PC connection	
16 Physical characteristics	
17 Environmental conditions	
6 PicoSample 4 software	60
1 Demo mode	
2 Display area	
3 Drag and zoom	
4 Main menu	
1 File	
2 Edit	
3 View	
4 Setup	71
5 Measurements	
6 Analysis	
7 System	74
8 Utility	
9 Help	
5 Measurement area	
6 Permanent controls	
7 Pop-up keypad	
8 Side menu	
9 Status area	
10 System controls	
1 Clear	
2 Run, Stop and Single	
3 Autoscale	
4 Default setup	
5 Undo, Redo	
6 Сору	
7 Help	
11 Startup	
12 Toolbar	
7 Menu	
1 Channels Menu	

2 Zoom 98 2 Acquire Menu 99 1 Time Base 100 2 Acquisition 105 3 Zoom 112 3 Display Menu 113 1 Style 114 2 Screen 120 3 View 123 4 Color 124 5 Color Palette 126 1 Parameter 120 3 View 123 4 Eye Diagram Menu 128 1 Parameter 130 2 Definition 163 5 Histogram Menu 167 1 Setup 170 2 Window 173 3 Scale 166 6 Marker Menu 176 1 Type 180 2 M1 Position and M2 Position 181 3 M Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 207	1 Channel Setup	
1 Time Base 100 2 Acquisition 105 3 Zoom 112 3 Display Menu 113 1 Style 114 2 Screen 120 3 View 123 4 Color 124 5 Color Palette 126 4 Eye Diagram Menu 128 1 Parameter 130 2 Definition 163 5 Histogram Menu 167 1 Setup 173 3 Scale 176 6 Marker Menu 173 1 Type 180 2 Mindow 173 3 Scale 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 3 Recall User Mask 208	2 Zoom	
2 Acquisition 105 3 Zoom 112 3 Display Menu 113 1 Style 114 2 Screen 120 3 View 123 4 Color 124 5 Color Palette 126 4 Eye Diagram Menu 128 1 Parameter 130 2 Definition 163 5 Histogram Menu 167 1 Setup 170 2 Window 173 3 Scale 167 6 Marker Menu 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 1 Compare with 184 2 Test 185 3 Create Mask 208 9 Save User Mask 208 9 Save User Mask 208 9 Save User Mask	2 Acquire Menu	
3 Zoom 112 3 Display Menu 113 1 Style 114 2 Screen 120 3 View 123 4 Color 124 5 Color Palette 126 4 Eye Diagram Menu 128 1 Parameter 130 2 Definition 163 5 Histogram Menu 167 1 Setup 170 2 Window 173 3 Scale 176 6 Marker Menu 178 1 Type 180 2 MI Position and M2 Position 181 3 M Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 3 Ference Attoin 206 7 Kask 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 <t< td=""><td>1 Time Base</td><td> 100</td></t<>	1 Time Base	100
3 Display Menu 113 1 Style 114 2 Screen 120 3 View 123 4 Color 124 5 Color Palette 126 4 Eye Diagram Menu 128 1 Parameter 130 2 Definition 163 5 Histogram Menu 167 1 Stup 170 2 Window 173 3 Scale 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208	2 Acquisition	105
1 Style 114 2 Screen 120 3 View 123 4 Color 124 5 Color Palette 126 4 Eye Diagram Menu 128 1 Parameter 130 2 Definition 163 5 Histogram Menu 167 1 Setup 170 2 Window 173 3 Scale 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 Select Action 208 9 Save User Mask 208 9 Measur	3 Zoom	112
2 Screen 120 3 View 123 4 Color 124 5 Color Palette 126 4 Eye Diagram Menu 128 1 Parameter 130 2 Definition 163 5 Histogram Menu 167 1 Setup 170 2 Window 173 3 Scale 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 3 Create Mask 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 5 & Select Action 208 7 Erase Mask 208 8 Mathematics Menu 208 9 Save User Mask 208 9 Measure Menu 229 1 Function	3 Display Menu	113
3 View 123 4 Color 124 5 Color Palette 126 4 Eye Diagram Menu 128 1 Parameter 130 2 Definition 163 5 Histogram Menu 167 1 Setup 170 2 Window 173 3 Scale 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 8 Recall User Mask 208 9 Save User Mask 208 9 Save User Mask 208 9 Maesure Menu 202 1 Function 211 2 Scaling <td>1 Style</td> <td> 114</td>	1 Style	114
4 Color 124 5 Color Palette 126 4 Eye Diagram Menu 128 1 Parameter 130 2 Definition 163 5 Histogram Menu 167 1 Setup 170 2 Window 173 3 Scale 176 6 Marker Menu 173 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 8 Mathematics Menu 209 1 Function 201 2 Saling 202 3 Create Mask 208 9 Save User Mask </td <td>2 Screen</td> <td> 120</td>	2 Screen	120
5 Color Palette 126 4 Eye Diagram Menu 128 1 Parameter 130 2 Definition 163 5 Histogram Menu 167 1 Setup 170 2 Window 173 3 Scale 176 6 Marker Menu 176 6 Marker Menu 176 6 Marker Menu 181 3 N Source and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 9 Save User Mask 208 9 Measure	3 View	123
4 Eye Diagram Menu 128 1 Parameter 130 2 Definition 163 5 Histogram Menu 167 1 Setup 170 2 Window 173 3 Scale 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Position and M2 Position 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Frase Mask 208 8 Recall User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232	4 Color	124
1 Parameter 130 2 Definition 163 5 Histogram Menu 167 1 Setup 170 2 Window 173 3 Scale 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 9 Save User Mask 208 9 Masthematics Menu 209 1 Function 211 <	5 Color Palette	126
2 Definition 163 5 Histogram Menu 167 1 Setup 170 2 Window 173 3 Scale 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 8 Recall User Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	4 Eye Diagram Menu	128
5 Histogram Menu 167 1 Setup 170 2 Window 173 3 Scale 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 208 9 Save User Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	1 Parameter	130
1 Setup 170 2 Window 173 3 Scale 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 8 Recall User Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	2 Definition	163
2 Window 173 3 Scale 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 8 Recall User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	5 Histogram Menu	167
3 Scale 176 6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	1 Setup	170
6 Marker Menu 178 1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	2 Window	173
1 Type 180 2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	3 Scale	176
2 M1 Position and M2 Position 181 3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	6 Marker Menu	178
3 M1 Source and M2 Source 182 4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 8 Recall User Mask 208 9 Save User Mask 208 9 Save User Mask 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	1 Туре	180
4 Motion 182 5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 9 Save User Mask 208 9 Save User Mask 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	2 M1 Position and M2 Position	181
5 Reference On 183 6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 9 Save User Mask 208 9 Save User Mask 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	3 M1 Source and M2 Source	
6 Set Reference 183 7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 9 Save User Mask 208 9 Save User Mask 208 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	4 Motion	
7 Mask Test Menu 184 1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 8 Recall User Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	5 Reference On	183
1 Compare with 184 2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 8 Recall User Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	6 Set Reference	
2 Test 185 3 Create Mask 185 4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 8 Recall User Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	7 Mask Test Menu	
3 Create Mask1854 Run Until2075 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples2076 Select Action2087 Erase Mask2088 Recall User Mask2089 Save User Mask2088 Mathematics Menu2091 Function2112 Scaling2293 Zoom2319 Measure Menu2321 Parameter236	1 Compare with	
4 Run Until 207 5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples 207 6 Select Action 208 7 Erase Mask 208 8 Recall User Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	2 Test	
5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples2076 Select Action2087 Erase Mask2088 Recall User Mask2089 Save User Mask2088 Mathematics Menu2091 Function2112 Scaling2293 Zoom2319 Measure Menu2321 Parameter236	3 Create Mask	
6 Select Action 208 7 Erase Mask 208 8 Recall User Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	4 Run Until	207
7 Erase Mask 208 8 Recall User Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples	207
8 Recall User Mask 208 9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	6 Select Action	208
9 Save User Mask 208 8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	7 Erase Mask	208
8 Mathematics Menu 209 1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	8 Recall User Mask	208
1 Function 211 2 Scaling 229 3 Zoom 231 9 Measure Menu 232 1 Parameter 236	9 Save User Mask	208
2 Scaling	8 Mathematics Menu	209
3 Zoom	1 Function	211
9 Measure Menu	2 Scaling	229
1 Parameter 236	3 Zoom	231
	9 Measure Menu	232
2 X Parameters	1 Parameter	236
	2 X Parameters	239

3 Y Parameters	
4 Trace-to-trace Measurements	
5 Counter	250
6 View Defined Parameters	251
7 Clear All Measurements	251
8 Definition	252
10 Save/Recall menu	260
1 Waveform Memory	
2 Disk	
3 Setup	
4 Zoom	271
11 Trigger Menu	272
1 Holdoff Mode	273
2 Holdoff, Min Holdoff, Max Holdoff	273
3 Mode	
4 Settings	
5 Style	275
6 Source	275
7 Level	276
8 Slope	
9 Sensitivity	
10 Hysteresis	
12 Zoom Menu	
1 Zoom Select	
2 Main / Zoom	
3 Zoom Area	
4 Horizontal Factor	
5 Horizontal Position	
6 Vertical Zoom Source	
7 Vertical Factor	
8 Vertical Position	
Index	281

1 Welcome

Thank you for buying a Pico Technology product!

The **PicoScope 9400A Series** SXRTO oscilloscopes from Pico Technology are wide-bandwidth, compact units designed to replace traditional mid- and wide-range benchtop digital storage oscilloscopes costing many times the price.



 Model
 Channels
 Bandwidth

 PicoScope 9404A-33
 4
 33 GHz

 PicoScope 9404A-25
 4
 25 GHz

 PicoScope 9404A-16
 4
 16 GHz

4

Here are some of the benefits provided by your new PicoScope 9400A Series oscilloscope:

- Portability. Take the unit with you and plug it into any Windows PC.
- Performance

PicoScope 9404A-06

- Four electrical channels with user-selectable bandwidth up to 33 GHz (PS9404A-33), 25 GHz (PS9404A-25), 16 GHz (PS9404A-16) or 6 GHz (PS9404A-06)
- Vertical scale 10 mV/div to 250 mV/div (PS9404A-16 and PS9404A-06) or 10 mV/div to 200 mV/div (PS9404A-33 and PS9404A-25)
- DC gain accuracy better than ±1.5% (PS9404A-16 and PS9404A-06), better than ±2.0% (PS9404A-25), or better than ±2.5% (PS9404A-33)
- o 500 MS/s per channel maximum real-time sampling rate with 12-bit ADC resolution

6 GHz

- 5 TS/s (PS9404A-33 and PS9404A-25), 2.5 TS/s (PicoScope 9404A-16) or 1 TS/s (PicoScope 9404A-06) maximum equivalent time sampling rate (0.2 ps, 0.4 ps or 1 ps shortest sampling interval respectively)
- From 10 ps/div (PS9404A-33 and PS9404A-25), from 20 ps/div (PS9404A-16) or from 50 ps/div (PS9404A-06) to 1000 s/div timebase scale with real time, random equivalent time and roll
- o s
- ±0.5 ppm timebase clock accuracy and less than ±2 ps delta time measurement accuracy
- o DC to 2.5 GHz direct trigger, up to 6 GHz divided trigger from any input channel or external trigger input
- Internal or external clock recovery trigger from 6.5 Mb/s to 11.3 Gb/s (PS9404A-33 and PS9404A-25), to 8 Gb/s (PicoScope 9404A-16) and to 5 Gb/s (PicoScope 9404A-06)
- External prescaled trigger up to 20 GHz (PS9404A-33 and PS9404A-25) and up to 16 GHz (PicoScope 9404A-16)
- o RMS trigger jitter less than 1.5 ps, maximum and 1.2 ps, typical
- Connectivity
 - USB 2.0 (HS)
 - \circ LAN
- Programmability
 - \circ ActiveX
- **Powerful built-in measurement capabilities.** High-resolution cursors and automatic pulse, NRZ, RZ and PAM4 eye pattern measurements with statistics, histograms, automated mask test with predefined standard and custom masks, waveform processing.
- **Applications.** Telecom service and manufacturing, digital system design, semiconductor characterization and testing, high-speed digital (pulse) measurements.
- Flexibility. Use it as a digital storage oscilloscope, spectrum analyzer or communications signal analyzer.
- Long-term support. Software upgrades are available to download from our <u>website</u>. You can also call our technical specialists for support. You can continue to use both of these services free of charge for the lifetime of the product.
- Value for money. You don't have to pay twice for all the features that you already have in your PC, as the **PicoScope 9400A Series** oscilloscope contains only the special hardware you need and not the computer.
- **Convenience.** The software makes full use of the large display, storage, user interface and networking built in to your PC.

2 Introduction

2.1 Overview

The **PicoScope 9400A Series** PC Sampler-Extended Real-Time Oscilloscopes (SXRTO) are a wide-bandwidth digital storage oscilloscope for use with personal computers. They are fully USB 2.0 and 3.0 compatible. You can also communicate with all models over their built-in LAN interface.

The **PicoScope 9400A Series** oscilloscopes can be used as digital storage oscilloscopes, spectrum analyzers or communications signal analyzers.

For basic instructions on installing and using your oscilloscope, please refer to <u>How to use your oscilloscope</u> or the printed **Quick Start Guide** supplied with your instrument.

2.2 Minimum PC requirements

For the oscilloscope to operate effectively it must be connected to a computer with these minimum requirements:

Processor, memory	As required by operating system		
Disk space	Software occupies about 50 MB		
Operating system	Windows 7, Windows 8, Windows 10 (32-bit and 64-bit versions) or Windows 11 (64-bit versions)		
Ports	USB 2.0 (high speed). Also compatible with USB 3.0.		

2.3 Safety information

To prevent possible electrical shock, fire, personal injury or damage to the product, carefully read this safety information before attempting to install or use the product. In addition, follow all generally accepted safety practices and procedures for working with and near electricity.

The product has been designed and tested in accordance with the European standard publication EN 61010-1 (Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use) and and EN61010-2-30 (Requirements for Testing and Measuring Circuits). The product left the factory in a safe condition.

The following safety descriptions are found throughout this guide:

A **WARNING** identifies conditions or practices that could result in injury or death.

A **CAUTION** identifies conditions or practices that could result in damage to the product or equipment to which it is connected.

Each of these safety instructions applies to all the **PicoScope 9400A Series** oscilloscopes covered by this User's Guide, unless otherwise specified.

2.3.1 Symbols

These safety and electrical symbols may appear on the product or in this guide.

Symbol	Description
	Chassis terminal
	Earth (ground) terminal.
≟	The terminal can be used to make a measurement ground connection. The terminal is NOT a safety or protective earth.
● 	USB
	Possibility of electric shock
\triangle	Caution Appearance on the product indicates a need to read these safety and operation instructions.
	Do not dispose of this product as unsorted municipal waste



WARNING

This product and accessories are for professional use by trained and qualified technicians only. To prevent injury or death use the product only as instructed and use only accessories that have been supplied or recommended. Protection provided by the products may be impaired if used in a manner not specified by the manufacturer.

ps9400Aug-1

2.3.2 Maximum terminal ratings

Observe all terminal ratings and warnings marked on the product.

The table below and/or markings on the product indicate the full-scale measurement range and overvoltage protection range. The full-scale measurement ranges are the maximum voltages that can be accurately measured by the instrument and the overvoltage protection ranges are the maximum voltages that may be applied without risk of personal injury or damage to the instrument.



WARNING

To prevent electric shock, do not attempt to connect voltages outside the overvoltage protection range.

Input/output	Overvoltage protection range	Full-scale measurement range	
Input channels			
PicoScope 9404A-33 and PicoScope 9404A-25	±1.5 V (DC + peak AC)	±800 mV	
PicoScope 9404A-16, PicoScope 9404A-06	±1.4 V (DC + peak AC)	±1 V	
EXTERNAL trigger input			
All PicoScope 9400A models	±3 V (DC + peak AC)	±1 V	
PRESCALE trigger input			
All PicoScope 9400A models	±3 V (DC + peak AC)	2 V peak to peak	
Other outputs			
RECOVERED OUT - CLK and DATA (optional)		N1/A	
TRIGGER	±2 V (DC + peak AC)	N/A	



WARNING

Signals exceeding the voltage limits in the table below are defined as "hazardous live" by EN 61010. To prevent electric shock, take all necessary safety precautions when working on equipment where hazardous live voltages may be present.

Signal voltage limits of EN 61010				
±60 V DC	33 V AC RMS	±42.4 V pk max.		



WARNING

To prevent injury or death, do not connect the oscilloscope directly to the mains (line power).



CAUTION

To avoid causing permanent damage to the PicoScope and other connected equipment, do not exceed the overvoltage protection range on any terminal.

2.3.3 Grounding



WARNING

The PicoScope's ground connection through the USB cable is for measurement purposes only. The PicoScope does not have a protective safety ground.



WARNING

Never connect the ground input (chassis) to any electrical power source. To prevent personal injury or death, use a voltmeter to check that there is no significant AC or DC voltage between the oscilloscope ground and the point to which you intend to connect it.



CAUTION

To avoid causing permanent damage to the PicoScope, the attached computer and other equipment, do not apply a voltage to the ground input.



CAUTION

To prevent measurement errors caused by poor grounding, always use the high-quality USB cable supplied with the oscilloscope.

2.3.4 External connections



WARNING

To prevent injury or death, only use the Pico approved power cord and adaptor supplied with the product. These are approved for the voltage and plug configuration in your country.

Ext DC power supply: 12 V DC				
PicoScope model	Current			
PicoScope 9404A-33	2.5 A max.			
PicoScope 9404A-25	2.4 A max.			
PicoScope 9404A-16	2.8 A max.			
PicoScope 9404A-06	2.7 A max.			



CAUTION

Take care to avoid mechanical stress or tight bend radii for all connected leads, including all coaxial leads, optical fiber and connectors. Mishandling will cause deformation of sidewalls, and will degrade performance and measurement accuracy.

2.3.5 Environment

This product is for indoor use, in dry locations only. The product's external mains power supply (if required) is for indoor use only.



WARNING

To prevent injury or death, do not use in wet or damp conditions, or near explosive gas or vapor.



CAUTION

To prevent damage, always use and store your PicoScope in appropriate environments.

Temperature, operating	5 to 40 °C
Temperature, storage	-20 to 50 °C
Temperature, for quoted accuracy	15 to 25 °C
Humidity, operating	Up to 85 %RH (non-condensing) at 25 °C
Humidity, storage	Up to 95 %RH (non-condensing)
Altitude	Up to 2000 m
Pollution degree	2 (only non-conductive pollution occurs except that occasionally a temporary conductivity caused by condensation is expected)

2.3.6 Care of the product

The product contains no user-serviceable parts. Repair, servicing and adjustment require specialized test equipment and must only be performed by Pico Technology or an approved service provider. There may be a charge for these services unless covered by the Pico five-year warranty.

Inspect the instrument and all probes, connectors, cables and accessories before use for signs of damage.



WARNING

To prevent injury or death, do not use the product if it appears to be damaged in any way, and stop use immediately if you are concerned by any abnormal operations.

To prevent electric shock, do not tamper with or disassemble the PicoScope, case parts, connectors or accessories.

When cleaning the PicoScope, use a soft cloth and a solution of mild soap or detergent in water. To prevent electric shock, do not allow water to enter the casing, as this will compromise the electronics or insulation inside.



CAUTION

Do not block the air vents at the back or front of the instrument as overheating will damage the oscilloscope.

Do not insert any objects through the air vents as internal interference will cause damage to the oscilloscope.

To prevent dirt ingress, fit dust caps to all unmated connectors, and remove them only during connection.

How to use your oscilloscope 3

For safety information and additional instructions, please refer to the PicoScope 9400A Series Quick Start Guide supplied with your oscilloscope.

Acquiring, triggering and displaying waveforms 3.1

To use the **PicoScope 9400A Series** oscilloscope to measure or monitor waveforms, you need to know how to acquire, select and display those waveforms properly. To help you do so, this section describes how to do the following tasks:

- How to couple waveforms to the oscilloscope channels.
- How to select channels to turn on and off their display.
- How to size and position the selected channel on screen.
- How to use the menus to set vertical (offset, bandwidth) and horizontal (time base, record length and so on) parameters.

This section also describes how to choose the appropriate trigger and acquisition mode for acquiring your waveform, and how to customize the display.

Coupling waveforms to the oscilloscope

Pico Technology produces a variety of probes and cables suitable for connecting various types of signals to the input channels of this product.

The **PicoScope 9400A Series** oscilloscopes ship without probes. Because the oscilloscopes have 50 Ω input impedance and higher bandwidth, we recommend that you order and use the probes listed on the *PicoScope* 9400A Series Data Sheet.

Setting up automatically

The PicoScope 9400A Series oscilloscopes can automatically obtain and display a stable waveform of usable size. They can also be reset to its factory default settings.

Autoscale automatically sets up the front panel controls based on the characteristics of the input signal. It is much faster and easier than a manual control-by-control setup. Autoscale adjusts controls in the Channels, Acquire and Trigger menus.

To autoscale the oscilloscope

Do the following steps to automatically set up the oscilloscope:


Ch1

1. Click the channel selection button (such as Ch1) corresponding to your input channel to make it active.

2.Click the Autoscale Autoscale.. button. If you use **Autoscale** when one or more channels are displayed, the oscilloscope selects the lowest numbered channel for horizontal scaling and triggering. Vertically, all channels in use are individually scaled. If you use Autoscale when no channels are displayed, the oscilloscope will turn on all channels and scale them.

To reset the oscilloscope

Default Setup.. To reset the oscilloscope to its factory default settings, right-click Default Setup then

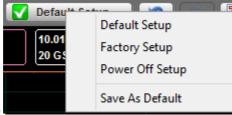

click Factory Setup


Changing vertical scale, offset and position



You can use the vertical **Scale** to change the volts per division setting for any channel to increase or decrease the amplitude of your waveform.



You can use the vertical **Offset** to move your waveform either up or down on the display. Each channel has a ground marker located to the left of the waveform display area which shows you where zero volts is for each channel.

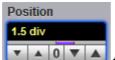

You can use the vertical **Position** to move your waveform either up or down on the display within the ADC's dynamic range.

Sampling modes

There are three sampling modes that acquire the sample points used in reconstructing a waveform: real-time sampling, random equivalent time sampling and roll mode.

Real-time sampling mode


- Use this mode for waveforms with frequency components less than ¹/₄ the sampling rate. At the maximum sampling rate of 500 MS/s you can use this mode for frequencies up to 125 MHz.
- Use this mode to capture waveforms that occur infrequently.
- Use this mode for single-shot waveform events.
- 1. Connect a 125 MHz sine wave having 600 mV pp amplitude to the input of channel 1.

2.	Click Acquire Acquire , then Time Base Time Base Acquisition Zoom , then Real Time
	Sampling Mode
	nn Real Time
	S Random ET
	Roll
	from the Sampling Mode menu.
	nom ne camping mode mend.
	Scale Scale
	100 mV/div 10 ns/div
2	
3.	Select 100 mV/div vertical scale , and Ch1 Source
	Ch1 Ch2 Ch3 Ch4
	as a trigger source.
	Stale
	Style
4.	
	menu.



6. Click Single Single

Capture a single waveform and then stop.

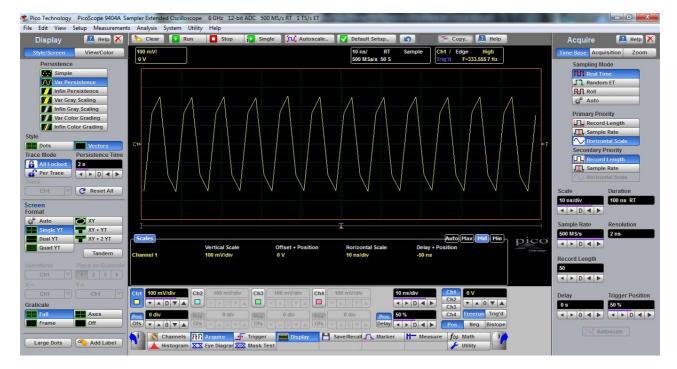

7. If necessary, use linear or sin(x)/x interpolation.


Random equivalent time sampling

Random equivalent-time sampling acquires sample points over several trigger events and requires the input waveform to be repetitive. On each trigger event, the scope acquires more points and combines them with the previously acquired points. This creates a record of the waveform that has an effective sampling rate that is the inverse of the sample spacing.


This sampling mode also works at 500 MS/s sampling rate, but maximum equivalent sampling rate is 5 TS/s (0.2 ps sampling interval, **PicoScope 9404A-33** or **PicoScope 9404A-25**), 2.5 TS/s (0.4 ps sampling interval, **PicoScope 9404A-16**) and 1 TS/s (1 ps sampling interval, **PicoScope 9404A-06**).

- Use this mode for fast, repetitive waveforms.
- Use this mode for waveforms with frequency components greater than ¹/₄ the scope's maximum sample rate.
- Use this mode for making more accurate measurements on repetitive waveforms.
- 1. Connect a 1 GHz sinewave having 600 mV pp amplitude to the input of channel 1.

2.	Click Acquire	, then Time Base	Time Base	Acquisition	Zoom	, then Random ET
	Sampling Mode					
	M Real Time					
	Random ET					
	Roll					
	Auto	from the Sampling N	lode.			

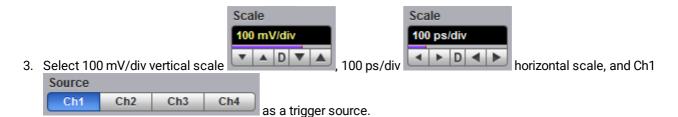

4. Monitor a repetitive 1 GHz sine wave.

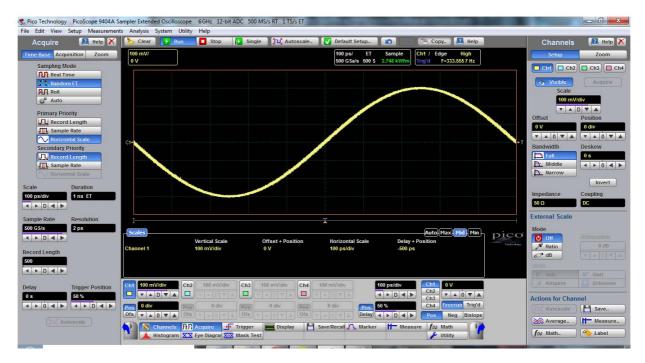

5. Use waveform <u>averaging</u> if level of noise or jitter exceeds what is acceptable for your measurements.

3.2 Measuring waveforms

To make the best use of the **PicoScope 9400A Series** oscilloscope when taking measurements, you need to know how to use all types of measurements it can take. This section describes how to take these measurements.

The types of measurements are:

- **Graticule** for making guick estimates by counting graticule divisions on the screen.
- Marker for measuring the difference (either in time or voltage) between two locations in a waveform record.
- Automated measurements for automatically taking and displaying waveform measurements.
- **Histogram** for displaying and automatically measuring how your vertical and horizontal units vary in the histogram box.
- Masks for mask counting, selecting a mask, or editing a mask.
- Eye diagram measurements for NRZ, RZ and PAM4 waveforms.

3.2.1 Graticule measurements

The **PicoScope 9400A Series** oscilloscopes provide a graticule for measuring the difference (either in time or amplitude) between two points on a waveform record. Graticule measurements provide you with quick visual estimates. For example, you might look at a waveform amplitude and say "it is just over 200 mV." This section briefly describes how to take graticule measurements.

Measure waveform amplitude

To measure the amplitude of a waveform, do the following steps:

- 1. Connect a pulse generator to the input of channel 1.
- 2. Set pulse frequency to 10 MHz, pulse width to 50 ns, rise and fall time to 10 ns, amplitude to 600 mV and offset to –300 mV.
- 3. In PicoScope 4, click Autoscale Autoscale.
- 4. Count the graticule divisions between two features to be measured and multiply by the vertical scale factor.

For example, if you count four major vertical graticule divisions between the minimum and maximum values of a waveform at a scale factor of 150 mV/division, then you can easily calculate your peak-to-peak voltage as:

4 divisions × 150 mV/division = 600 mV.

Measure waveform time

To measure the period of a waveform, repeat the process just described, but count the horizontal divisions and multiply by the horizontal scale factor. For example, if you count three major horizontal graticule divisions for one waveform cycle at a horizontal scale factor of 33.33 ns/division, then you can easily calculate the waveform period as:

3 divisions × 33.33 ns/division = 100 ns, or 10 MHz.

3.2.2 Marker measurements

The **PicoScope 9400A Series** oscilloscopes provide markers that measure the difference (either in time or voltage) between two locations in a waveform record. This section describes markers – how to select their type and mode, how to display them and how to use them to take measurements.

Marker measurements are fast and easy to take. Markers consist of two points on the screen that you position with the variable or with the mouse. You move one marker independently or both markers in tandem (paired), depending on the **Motion** menu. As you position the markers, readouts on the display report and update measurement information.

Motion <u>
↓/→</u>Independent ↓/→ Paired

Marker readouts

The marker readout shows the absolute location of both markers and the difference between them. The readouts differ depending on the marker type you select: X-Marker, Y-Marker or XY-Marker.

The value after "dYM" shows the voltage difference between the markers. The value after "YM" shows the voltage of the marker relative to ground (see figure below). The value after "dXM" shows the time difference between the markers. The value after "XM" shows the time of the selected marker relative to the trigger point. The value after "1/dXM" shows frequency value equivalent to the time difference between the markers.



Marker function

1. To display the marker menu, click Marker Marker

Туре		
Off	↓/ X-Marker	
T. Y-Marker	🗱 XY-Marker	
		menu.

2. Select the type of marker from the Type

+ 🕖 Independent

Paired

Motion


and M2 Position

Set motion and adjust the markers

To select the motion mode and adjust the marker in either mode, do the following:

1. Click **Independent** or **Paired** from the **Motion** menu. **Independent** makes each marker positionable without regard to the position of the other marker. **Paired** makes both markers positionable in tandem; that is, both markers move in unison and maintain a fixed horizontal or vertical distance apart.

- 2. Adjust the markers according to the mode you have selected:
- To adjust either marker in independent mode, use the M1 Position
 M2 Position

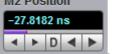

To adjust both markers in paired mode, use the M1 Position



< > D <

M1 Position

M1 Position -32.1212 ns

• To adjust the distance between markers in paired mode, use the M2 Position

3.2.3 Automated measurements

The **PicoScope 9400A Series** oscilloscopes can measure many waveform parameters automatically and show the results on display. Follow the procedure below to set up the oscilloscope to measure waveforms automatically.

Display measurements automatically

To use the automated measurement system, you must have a stable display of your signal. Also, the waveform must have all the features necessary for the measurement you want. For example, a rise time measurement requires at least one rising edge, and a frequency measurement needs at least one complete cycle.

To take automated measurements, proceed as follows:

- 1. Connect a pulse generator to the input of channel 1.
- 2. Set pulse frequency to 10 MHz, pulse width to 50 ns, rise and fall time to 10 ns, amplitude to 600 mV and offset to −300 mV.
- 3. In PicoSample 4, click Autoscale Autoscale.
- 4. Click Measure Measure to display the Measure menu.



5. Click Statistics

in the **Display** menu.

6. Successively click Frequency, Pos Width and Rise Time in the X Parameters menu, then Amplitude in the Y Parameters menu. Observe that the measurement results with statistics appear in the Measurement Area of the screen. The measurement readout includes the notation Ch1, meaning that the measurement is taken on the channel 1 waveform.

Time Base Acquisition Zoom 100 mV/ 20 ns/ ET Sample Ch1 / Edge High 25 GSa/s 500 S 742 W/m Trigid F=333,556 Hz	leasure	🔝 Help 🗙
Time Base Acquisition Zoom 100 mV/ 20 ns/ ET Sample Ch1 / Edge High Param		
		tion Limit Test
1 Real Time	Off 10	Aode Repetitive Single-Shot
Source Source	e	Single
Primary Priority		Measurements
Cl+ Cl+ Cl+	Period Frequency	Neg Cross
III. Sample Rate	Neg Width	Cycles √F Time@Max √ Time@Min
20 ns/div 200 ns ET	Pos DCycle	Pos Jitter pp Pos Jitter rm
Sample Rate Resolution T Y Para	Pos Cross - ameters	Neg Jitter rm
Auto Max Marker Scales Auto Max Mid Min Dico Current Total Wfms Minimum Maximum Mean Std Deviation Dico Dico <td>Minimum 🕇</td> <td>V dc RMS V Cycle dc RMS V ac RMS</td>	Minimum 🕇	V dc RMS V Cycle dc RMS V ac RMS
	Peak-Peak	Cycle ac RMS
Delay Trigner Position Ch1 100 mV/div Ch2 100 mV/div Ch3 100 mV/div Ch4 100 mV/div 20 nsidiv Ch1 0 V	Middle 🕇	Area
	Cycle Mean	
		asurements
	requency	Period
Source		

7. To take a measurement on another channel, select that channel from **Source Ch1** select the measurement.

3.2.4 Histogram measurement

The **PicoScope 9400A Series** oscilloscopes can display histograms constructed from the selected trace waveform data. You can display either a vertical or horizontal histogram. You can display only one type of histogram at a time.

1. Start histogram counting

To start histogram counting click Histogram Histogram, then select the type of axis - Vertical or



Horizontal

Off turns off histogram counting and display.

and then

2. Histogram scaling

Vertical displays a vertical histogram that shows how your vertical units vary in the histogram box. A vertical histogram is displayed starting at the left edge of the graticule. The size of the max. bin is controlled by the



Window/Scale and Scale Type menus and the Scale wariable. If you select Linear, you display the count in each bin. If you select Logarithmic, you display the log of the count in each bin. Logarithmic scaling provides better visual detail for bins with low count.

Horizontal displays a horizontal histogram that shows how time varies in the histogram box. A horizontal histogram is displayed at the bottom of the graticule. The size of the max. bin is also controlled by the




3. Reset histogram counting

To reset the count in all histogram bins to zero, click Clear

4. Display a histogram

To select which waveform is compared against the histogram box, select the histogram source using **Source**

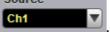

5. Setting histogram limits


The histogram limits select the section of the trace used for histograms. To set the size of the histogram box,

Left Limit	Right Limit
-5 ns	5 ns
Top Limit	Bottom Limit
6.25 mV	-6.25 mV
▼ ▲ D ▼ ▲	

click Window/Scale and then use the left, right, top and bottom limits.

6. Display histogram measurements

a) To display histogram measurements, you first need to obtain a stable display of your waveform. Once you have a stable display, click **Histogram**, Histogram, then select the type of axis – **Vertical** or

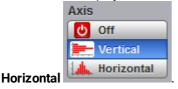



b) Click the Scale Type

menus and select a scale type.

c) Make selections from the Limits menus.

- d) Make selections from the Scale menus.
- e) Control histogram statistics via the histogram measure tab located in the Measurement Area.

Histogram Scale	<u></u>			Auto Max Mid Min
Scale	= 6.4 hits/	Peak Hits = 32 hits	Std Deviation = 26.771 mV	
Offset	= 0 hits	Pk-Pk = 611.72 mV	Mean ± 1 StdDev = 0 %	
Hits in Box	= 1.00077 Mhits	Median = 390.63 µV	Mean ± 2 StdDev = 0 %	
Waveforms	= 1000 Wfms	Mean = -398.61 mV	Mean ± 3 StdDev = 0 %	
Min	= -305.47 mV	Max-Max = 595.31 mV	Max = 306.25 mV	

3.2.5 Eye diagram measurements


The **PicoScope 9400A Series** oscilloscopes can precisely measure NRZ, RZ or PAM4 eye diagrams. Using optional CDR the oscilloscopes provide trigger up to 11.3 Gb/s data rate (**PicoScope 9404A-33** and **PicoScope 9404A-25**), up to 8 Gb/s data rate (**PicoScope 9404A-16**) and up to 5 Gb/s data rate (**PicoScope 9404A-06**).

As an example use the following procedure to make NRZ eye diagram measurements.

1. Connect a data signal to the selected channel (suppose this is the first channel). Use internal clock recovery, if available, as a trigger style.

2.	Click Trigger Trigger
3.	Select Ch1 Ch2 Ch3 Ch4 from the Source menu.
	Style Edge *4 Divider Clock Recovery Int Clock *8 Ext Prescaler
4.	Select Clock Recovery (if available) or alternatively Edge from the Style menu.
5.	Click Autoscale Autoscale
6.	To make eye diagram measurements, click Eye Diagram 🔀 Eye Diagram
7.	Select NRZ
8	Select the necessary parameters from the X NR7 Parameters and Y NR7 Parameters menus

- 8. Select the necessary parameters from the X NRZ Parameters and Y NRZ Parameters menus.
- 9. Control eye diagram statistics via the Measure tab located in the Measurement Area.

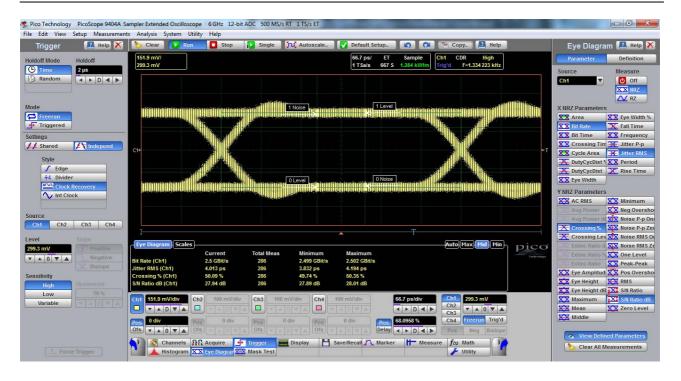

3.2.6 Mask test

The **PicoScope 9400A Series** oscilloscopes provide a portfolio of standard communication masks having data rates up to 10.664 Gb/s (**PicoScope 9404A-16**) and up to 3.125 Gb/s (**PicoScope 9404A-06**) for verifying compliance to electrical standards. The **PicoScope 9404A-33** and The **PicoScope 9404A-25** can be used for data rates higher than 5 Gb/s.

The **PicoScope 9400A Series** oscilloscopes provide a portfolio of standard communications masks for verifying compliance to electrical standards. Masks are available for protocols up to 14.025 Gb/s (-25 and -33 models), up to 10.664 Gb/s (-16 model) or up to 3.125 Gb/s (-06 model).

Below you will find the mask test procedure for the SONET/SDH STM16/OC48 2.48832 Gb/s standard.

1. Connect a data signal to the selected channel (suppose this is the first channel). Use internal clock recovery as a trigger style.

2.	Click Trigger Trigg	er
3.	Select Ch1	Ch2 Ch3 Ch4 from the Source menu.
		Style Edge
		*4 Divider Imple Clock Recovery
4	Select Clock Recovery	(if available) or alternatively

Edge from the Style menu.

- Autoscale.. 5. Click Autoscale The oscilloscope shows 2.5 Gb/s eye diagram. 6. Click Mask Test Mask Test Compare with Ch1 7. Select Ch1 from the Compare with menu. Standard ANSI T1.102 ANSI T1.102 CEI OIF Ethernet Fibre Channel ITU G.703 InfiniBand PCI-Express RapidIO SFF SONET/SDH Serial ATA USB XAUI 8. Select SONET/SDH from the Standard menu. Standard SONET/SDH Mask STM16/OC48 2.48832 Gbps STM0/OC1 51.84 Mbps STM1/OC3 155.52 Mbps STM3/OC9 466.56 Mbps STM4/OC12 622.08 Mbps STM6/OC18 933.12 Mbps STM8/OC24 1.2442 Gbps STM16/OC48 2.48832 Gbps 9. Select STM/OC48 Mask FEC 2666 2.666 Gbps from the SONET/SDH menu.
- 10. Click **Build** . Verify the mask that is built.
 - Margins Margins

Verify the mask

- 11. Click **Margins**, then select the value of the margin with built margins.
- 12. Click **Test** You can read the results listed in the <u>Measurement Area</u>. These values are displayed on tabs. Notice that any acquired data point that falls inside a mask or a mask margin appears in red.

Sico Technology PicoScope 9404A S	ampler Extended Oscilloscope 6 GHz 12-bit AD	500 MS/s RT 1 TS/s ET	STREET, STREET, STREET, ST	CANCER 1	The second second	
File Edit View Setup Measuremen	ts Analysis System Utility Help					
Mask Test 🛛 🔝 Help 🔀	🏷 Clear 📔 Run 🚺 Stop 👔	Single 🚺 Autoscale 🔽 Def	ault Setup 🛐 🧮 Co	opy 🔝 Help	Trigger	🔝 Help 🔀
Mask Test	151.9 mV/ 299.3 mV		7 ps/ ET Sample Sa/s 667 S 407 Wfm	CDR High F=1.334 223 kHz	Holdoff Mode	Holdoff 2 µs
Compare with Ch1 Test		2			Random	
Create Mask					Mode Freerun Triggered Settings	
SONET/SDH Mask STM16/OC48 2.48832 Gbps Margins 60 % C A 0 V A					Figure Clock	Recovery
Run Until		3	T		Source Ch1 Ch2	Ch3 Ch4
Failed Waveforms Failed Samples Samples Select Action Wim Select Action Wim Select Samples Select Samples	Hask Test) Eye Diagram Scales Total Wfms 404 Failed Samples: 2.351 khits in Polygon 1: 0 hits in Polygon 2: 1.232 khits in Polygon 3: 1.119 khits	Mask Hits in Polygon 1: 0 hits in Polygon 2: 0 hits in Polygon 3: 0 hits	Auto Margin = 60 % Margin Hits in Polygon 1: 0 hits in Polygon 2: 1.232 khits in Polygon 3: 1.119 khits	Max Min Picco	Level 299.3 mV V A 0 V A Sensitivity High	Slope Positive Negative Slistope
Erase Mask Recall User Mask Save User Mask	Pos 0 div Ofs V A 0 V A Ofs V A 1 A 1	Ch3 100 mV/div Ch4 100 mV/div Pos 0 div Pos 0 div Ofs - - -	Pos 68.0958 % Ch2 Delay > D < > Pos		Variable	
	Channels \Re Acquire 4 Tr Histogram XX Eye Diagram XX			Utility	Forc	e Trigger

3.3 Waveform math

The **PicoScope 9400A Series** oscilloscopes provide a means for you to mathematically manipulate your waveforms.

To use single waveform math

To perform waveform math, use the **Math** menu $f \otimes Math$. This menu allows you to display, define, and manipulate up to four math functions. The following steps explain how to create a math waveform based on a single source waveform.


- 1. Connect a 1 kHz sine wave having 600 mV pp amplitude to the input of channel 1.
- 2. Click **Autoscale** Autoscale. Note the acquired 1 kHz sine wave.
- 3. Click the Math menu **f** Math , then the Function.



4. Select Ch1 from the Operand 1 menu

Cate	gory			
*÷	Arithmetic	{ X }	Algebra	
≁	Trigonometry	\mathcal{P}	FFT	
Ð	Bit Operation	Σ	Miscellaneou	
f∞	Debug		Formula Edito	
Oper	ator			
+	Add	-	Subtract	
×	Multiply	÷	Divide	
			Difficio	
[x]	Ceil	[×]	Floor	
[x] [X]		[×] [×]		
[×]	Ceil	[×]	Floor	

5. Select Arithmetic from the Category menu the Operator menu.

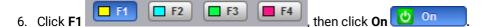

7. Note both the channel 1 waveform and the inverted math waveform.

To use dual waveform math

- 1. Connect a 1 kHz sine wave having 600 mV pp amplitude to both inputs of channel 1 and channel 2 using a power splitter.
- 2. Click **Autoscale Autoscale**. Note the acquired 1 kHz sine wave on both channels.
- 3. Click the Math menu **f** Math , then the Function.
- 4. Select Ch1 from the Operand 1 menu, and Ch2 from the Operand 2 menu.
- 5. Select Arithmetic from the Category menu, then select Add from the Operator menu.
- 6. Click **F1 F**2 **F**3 **F**4, then click **On**
- 7. Note channel 1, channel 2 and the math sum of both waveforms.

3.4 Connecting using LAN or USB interfaces

Factory settings for PicoScope 9400A Series oscilloscopes

MAC address:	See the underside of your scope.
IP address:	192.168.0.221
Subnet Mask:	255.255.255.0
Gateway:	192.168.1.27

To change the LAN interface settings, first <u>Configure Common LAN Settings</u> in the PicoSample 4 software, then <u>Configure the oscilloscope LAN Settings</u>, and then <u>Configure other PicoSample 4 software LAN settings</u>.

3.4.1 Select current interface

3.4.1.1 Algorithm for determining current interface

The **PicoScope 9400A Series** oscilloscope detects the current interface automatically within the first 20 seconds after power is turned on:

- 1. Within the first 7 seconds after power up, the instrument checks the USB connection with the PC. At this time, the power/status LED flashes green with a period of about 0.5 s. If during this time the instrument detects a USB connection, the current interface will be set to USB.
- 2. If the USB interface is not detected during the first 7 seconds, then, for the next 13 seconds, the instrument checks the LAN connection. During this time the power/status LED or lower LED lights up orange. The orange LED on the LAN connector on the back panel also lights up. If the instrument detects a LAN connection during this time, the instrument's current interface will be set to LAN.
- 3. If after 20 seconds the current interface is still undefined, it will be set to USB.

Note: The current interface selected at any of the three stages will remain in the device until the power is turned off.

3.4.1.2 Connecting to USB

- 1. Basic procedure:
 - Turn off the oscilloscope.
 - Connect the oscilloscope to your PC using the USB cable provided.
 - Turn on the oscilloscope.
- 2. Alternative procedure (valid if there is no LAN connection):
 - Turn off the scope.
 - Turn on the scope.
 - Connect the scope to your PC using the USB cable provided.

3.4.1.3 Connecting to LAN

Note. Before switching on the instrument to LAN, make sure that there is no USB connection.

- 1. Basic procedure:
 - Turn off the scope.
 - Connect LAN connector to Local Area Network (LAN).
 - Turn on the scope.
- 2. Alternative procedure:
 - Turn off the scope.
 - Turn on the scope.
 - During first 20 seconds after switching on the instrument, connect it to LAN.

3.4.2 Configure common LAN Settings

The general LAN settings of the PicoSample 4 software should be consistent with your network settings. Discuss these settings with your LAN administrator.

The PicoSample 4 software can select any one from a total of eight **PicoScope 9400A Series** LAN units found on the network.

Common LAN settings include:

- Subnet mask.
- Gateway
- Zone of PicoScope 9400A IP addresses.

After installation, PicoSample 4 software has the following Common LAN Settings:

Subnet mask	255.255.255.0
• Gateway	192.168.0.1
Zone of PicoScope 9400A IP addresses	192.168.0.221 192.168.0.229

To check or change Common LAN Settings, do the following:

- 1. Start the PicoSample 4 software (Demo mode is also suitable).
- 2. Select System > Common LAN Settings from the top menu bar.

PicoScope 9400 Common LAN Settings	×
Please discuss these settings with your network administrator!	
Subnet Mask: 255.255.255.0	
Zone of the Instrument IP Addresses:	
First IP Address: 192.168.0.220	
Last IP Address: 192.168.0.229	
Gateway: 192.168.0.1	
OK Cancel	

3. Set the required Common LAN Settings and click OK.

Configure the oscilloscope's LAN settings 3.4.3

Before connecting the PicoScope 9400A Series oscilloscope to a LAN, it is necessary to enter the correct LAN settings. To do this, follow the instructions below.

- 1. Connect the scope to your PC via USB.
- 2. Run the PicoSample 4 software.
- 3. Select Help > About in the menu bar to open the About PicoScope 9404A-XX dialog box and select Select **TCP/IP Properties:**

bout Pic	coScope 9404A-25
*	Pico Technology PicoScope 9404A-25 Sampler Extended Oscilloscope GU SW Revision: 4.12.0.1 Copyright © 2002-2024 Pico Technology Ltd
	www.picotech.com
Inst	rument Info
TCP /	IP Properties

bout ۶P

4. The TCP/IP Properties dialog opens:

•

TCP / IP Properties	×	
Stored TCP/IP Properties IP Address: 192.168.0.221		
Subnet Mask: 255.255.255.0		
Gateway: 192.168.0.1		
Restore Default Set New TCP/ IP Properties MA	C Address Close	
TCP/IP Properties dialog		

- 5. Compare the current LAN settings with the desired ones. If the oscilloscope's LAN settings are correct, close the dialog.
- 6. Click Set New TCP/IP Properties and check the correctness of the Common LAN Settings in the Confirm box:

Confirm	×		
?	You can set any IP address in the interval from 192.168.0.220 to 192.168.0.229		
	Subnet Mask is 255.255.255.0		
	Gateway is 192.168.0.1		
	If you need another TCP/IP setting:		
	 Cancel this dialog; Open the "System"->"Common LAN Settings" Menu; Set the necessary common LAN settings; Run this dialog again. 		
	OK Cancel		
	Common LAN settings Confirm dialog		

- 7. If the required IP address is within allowed range, and the Subnet Mask and Gateway are correct, click **OK**. Otherwise close all dialogs and <u>Configure common LAN settings</u>.
- 8. Enter the new IP address and click Store.

3.4.4 Configure other PicoSample 4 software LAN settings

Further configuration is done in 2 stages:

- Set up a list of LAN oscilloscopes serviced by PicoSample 4
- Set the startup mode of PicoSample 4

3.4.4.1 Set up a list of LAN oscilloscopes serviced by PicoSample 4

 Set the correct LAN Settings in all PicoScope 9400A Series units that should work with this copy of the PicoSample 4 software.

Note: IP addresses must be different in all **PicoScope 9400A Series** units.

- 2. <u>Connect</u> all these oscilloscopes to the LAN.
- 3. Start PicoSample 4 (Demo mode is also suitable).
- 4. Select System > Scanning LAN Instruments from the top menu bar.

PicoScope 9400 LAN Instruments Scanning	×
Scanning Time: 00:04 (0/10 checked)	Scanning may take a few minutes.
List of LAN Instruments	
	To accelerate this process please reduce the IP addresses margins in System -> Common LAN Settings menu.
	Terminate Scan
Delete Instrument	OK Cancel

- PicoSample 4 starts scanning IP addresses at a specified interval (see <u>Configure Common LAN Settings</u>). The scanning process can take a long time. However, if the IP addresses of all connected **PicoScope 9400A** Series scopes have already appeared in the List of LAN Instruments window, further scanning can be stopped by clicking Terminate Scan.
- 6. Click **OK**.

Note: PicoSample 4 is now configured to work with any LAN device from this list.

3.4.4.2 Set the startup mode of PicoSample 4

Select System> Change Instrument from the top menu bar. The PicoScope 9400 Change Instrument dialog opens.

PicoScope 9400 Change Instrument	2	×	
Current Instrument: USB	Choose Instrument USB LAN_IP=Default (192.168.0.221) AutoDetect Demo	_	
Startup Instrument: AutoDetect			
Chosen Instrument:			
Create special Shortcut Set as Startup	Switch now Cancel	כ	

Using this dialog you can do the following:

- Immediately switch PicoSample 4 to work with the selected device or in a demo mode.
- Set up PicoSample 4 so that it is connected to a specific device at startup.
- Create a special shortcut for PicoSample 4 on your desktop to work with a specific PicoScope 9400.

To do this, follow the following steps:

- 1. Select the desired PicoScope 9400A in the Choose Instrument window.
- 2. Click Switch now for immediate switching of PicoSample 4 to the specified instrument.
- 3. Click **Set as Startup** to set up PicoSample 4 to work with a specific device at startup. It is recommended to select **AutoDetect** if PicoSample 4 is required to work with different instruments at different times.
- 4. Click **Create special Shortcut** to create a special PicoSample 4 shortcut to work with a specified PicoScope **9400A** instrument.

4 Product information

4.1 What do I get?

The PicoScope 9400A Series oscilloscope kits contain:

- PicoScope 9400A Series SXRTO (Sampler-Extended Real-Time Oscilloscope)
- Quick Start Guide
- 12 V DC at 3.34 A AC/DC adaptor
- AC power cord
- USB 2.0 cable, 1.8 m
- Four additional connector savers
- N / SMA / PC3.5 / K wrench
- Storage and carry case

A range of optional accessories is available from Pico. Please see the <u>PicoScope 9400A Series data sheet</u> for details.

PicoSample 4 software is available as a free download from picotech.com/downloads.

4.2 Connections

Standard oscilloscope connectors

The **PicoScope 9404A-33** and **PicoScope 9404A-25** oscilloscopes have 2.92 mm (K) female (compatible with SMA) connectors on all channel inputs.

The **PicoScope 9404A-16** and **PicoScope 9404A-06** oscilloscopes have SMA female connectors on all channel inputs.

External and prescaled trigger input, trigger output and also the optional clock and data recovered outputs have SMA connectors.

The inputs have an impedance of 50 Ω , so they are compatible with low-impedance oscilloscope probes having different attenuation or gain.

Connector diagrams

Front panel



Front panel (from left to right)

- Power/status LED
- Channel 1 Input (CH1)
- Channel 2 Input (CH2)
- Channel 3 Input (CH3)
- Channel 4 Input (CH4)
- External Trigger Input (EXT IN)
- Prescale Trigger Input (PRESCALE IN) is not available on the PicoScope 9404A-06.
- Trigger Output (**OUT**)

Rear panel



Rear panel (from left to right)

- Earth terminal
- USB 2.0 port
- LAN port

- Fan
- Recovered Clock Output (optional)
- Recovered Data Output (optional)
- Power socket: for use with the AC adaptor supplied with the unit

Air vents

There is a low-noise fan inside the unit, which blows air through the holes on the back and front panels.



CAUTION

Do not block the air vents at the back or front of the instrument as overheating will damage the oscilloscope.



CAUTION

Do not insert any objects through the air vents as internal interference will cause damage to the oscilloscope.

5 Specifications and characteristics

Except where otherwise noted, the following specifications describe guaranteed performance within ±2 °C of the most recent autocalibration temperature. All specifications apply after the instrument's temperature has been stabilized after 30 minutes of continuous operation.

Many performance parameters are enhanced through simple automated calibrations driven by time interval or change of temperature.

Specifications marked as typical are not guaranteed, but indicate the performance that most units will exhibit.

For optimum performance, the instrument should have a complete verification of specifications and possible adjustment once every 12 months.

All specifications are subject to change without notice.

Specifications marked with (*) are checked in the Performance Verification.

5.1 Vertical

Number of input channels PicoScope 9404A models	All channels are identical and digitized simultaneously Four channels
Analog bandwidth, −3 dB flatness	These specifications are valid after a 30-minute warm- up period and ± 2 C from firmware calibration temperature.
* Full bandwidth, warranted	
PS9404A-25	DC to 33 GHz DC to 25 GHz DC to 16 GHz DC to 6 GHz
Middle bandwidth	
Narrow bandwidth	
PS9404A-16	N/A DC to 18 GHz. DC to 100 MHz DC to 100 MHz
Passband flatness (±1 dB), typical PS9404A-33 PS9404A-25 PS9404A-16 PS9404A-06	DC to 4 GHz DC to 5 GHz
Calculated rise time (Tr), typical	Calculated from the bandwidth. 10 to 90%: calculated from $Tr = 0.35/BW$.

ps9400Aug-1

	20 to 80%: calculated from Tr = 0.25/BW.
Full bandwidth (10 to 90%)	
PS9404A-2 PS9404A-1	3 ≤10.9 ps 5 ≤14.0 ps 6 ≤21.9 ps 6 ≤58.4 ps
Full bandwidth (20 to 80%)	
PS9404A-1	3 ≤7.8 ps 5 ≤10.0 ps 6 ≤15.6 ps 6 ≤41.7 ps
Middle bandwidth (10 to 90%)	
PS9404A-3 PS9404A-2 PS9404A-1 PS9404A-0	5 N/A 6 ≤700 ps
Middle bandwidth (20 to 80%)	
PS9404A-3 PS9404A-2 PS9404A-1 PS9404A-0	5 N/A 6 ≤500 ps
Narrow bandwidth (10 to 90%)	
PS9404A-3 PS9404A-2 PS9404A-1 PS9404A-0 PS9404A-0	5 ≤19.5 ps 6 ≤3.5 ns
Narrow bandwidth (20 to 80%)	
PS9404A-3 PS9404A-2 PS9404A-1 PS9404A-0	5 ≤13.9 ps 6 ≤2.5 ns
RMS noise	
* Full bandwidth	
PS9404A-2 PS9404A-1	 3 2.95 mV, maximum, 2.8 mV, typical 5 2.9 mV, maximum 2.7 mV, typical 6 2.4 mV maximum, 2.2 mV, typical 6 1.8 mV maximum, 1.6 mV, typical
Middle bandwidth	
PS9404A-3 PS9404A-2	

		0.9 mV maximum, 0.75 mV, typical 0.9 mV maximum, 0.75 mV, typical
Narrow bandwidth	PS9404A-16	N/A 2.5 mV, maximum, 2.3 mV, typical 0.7 mV maximum, 0.6 mV, typical 0.7 mV maximum, 0.6 mV, typical
Scale factors (sensitivity)	PS9404A-25 PS9404A-16	10 mV/div to 200 mV/div 10 mV/div to 200 mV/div 10 mV/div to 250 mV/div 10 mV/div to 250 mV/div
* DC gain accuracy	PS9404A-33	±2.5% of full scale, warranted. ±2.0% of full scale, typical
	PS9404A-25	±2.0% of full scale, warranted. ±1.5% of full scale, typical
	PS9404A-16	±1.5% of full scale, warranted. ±1.0% of full scale, typical
	PS9404A-06	±1.5% of full scale, warranted. ±1.0% of full scale, typical
Position range		±4 divisions from center screen
DC offset range		
	PS9404A-25 PS9404A-16	Adjustable from -800 mV to $+800 \text{ mV}$ Adjustable from -800 mV to $+800 \text{ mV}$ Adjustable from -1 V to $+1 \text{ V}$ Adjustable from -1 V to $+1 \text{ V}$ Coarse increments: 10 mV. Also adjustable in fine increments of 2 mV. With manual or calculator data entry the increment is: 0.01 mV for offset between -99.9 and 99.9 mV , and 0.1 mV for offset between -999.9 and 99.9 mV or $\pm799 \text{ mV}$ for the PS9404A-25 and PS9404A-33 . Referenced to the center of display graticule.
* Offset accuracy	PS9404A-33	±2 mV ±2.0% of offset setting, maximum. ±1 mV ±1% of offset setting, typical
	PS9404A-25	$\pm 2~mV$ $\pm 2.0\%$ of offset setting, maximum. $\pm 1~mV$ $\pm 1\%$ of offset setting, typical
	PS9404A-16	$\pm 2~mV~\pm 1.5\%$ of offset setting, maximum. $\pm 1~mV~\pm 1\%$ of offset setting, typical
	PS9404A-06	$\pm 2~mV~\pm 1.5\%$ of offset setting, maximum. $\pm 1~mV~\pm 1\%$ of offset setting, typical
Operating input voltage		
	PS9404A-33 PS9404A-25	

PS9404A-16 PS9404A-06	
Vertical zoom and position	For all input channels, waveform memories or functions
Vertical factor	0.01 to 100
Vertical position	±800 divisions maximum of zoomed waveform
Channel-to-channel crosstalk (channel isolation) Input frequency DC to 1 GHz Input frequency >1 GHz to 3 GHz Input frequency >3 GHz to ≤5 GHz Input frequency >5 GHz to ≤16 GHz Input frequency >3 GHz to ≤16 GHz Input frequency >16 GHz to ≤25 GHz	≥36 dB (63:1) for 6 GHz and 16 GHz models ≥36 dB (63:1) for 16 GHz models. ≥40 dB (100:1) for 25 GHz models.
Delay between channels	≤10 ps, typical Between any two channels, full bandwidth, equivalent time
ADC resolution	12 bits
PS9404A-25 PS9404A-16	0.4 mV/LSB without averaging 0.4 mV/LSB without averaging 0.5 mV/LSB without averaging. 0.5 mV/LSB without averaging.
PS9404A-25 PS9404A-16	± 1.5 V (DC + peak AC) ± 1.5 V (DC + peak AC) ± 1.4 V (DC + peak AC) ± 1.4 V (DC + peak AC)
* Input impedance	(50 ± 1.5) Ω warranted. (50 ± 1) Ω , typical.
PS9404A-25 PS9404A-16	Reflections for 20 ps rise time: 10% or less Reflections for 20 ps rise time: 10% or less Reflections for 50 ps rise time: 10% or less Reflections for 70 ps rise time: 10% or less
Input coupling	DC

Attenuation	Attenuation factors may be entered to scale the oscilloscope for external attenuators connected to the channel inputs
Range	0.0001:1 to 1 000 000:1
Units	Ratio or dB
Scale	Volt, Watt, Ampere, or Unknown

5.2 Horizontal

Timebase		Internal timebase common to all input channels.
Timebase range	PS9404A-25 PS9404A-16	Full horizontal scale (screen width) is 10 divisions 10 ps/div to 1000 s/div 10 ps/div to 1000 s/div 20 ps/div to 1000 s/div 50 ps/div to 1000 s/div
Real-time sampling		10 ns/div to 1000 s/div
Random equivalent time sampling		
	PS9404A-25 PS9404A-16	10 ps/div to 5 μs/div 10 ps/div to 5 μs/div 20 ps/div to 5 μs/div 50 ps/div to 5 μs/div
Roll		100 ms/div to 1000 s/div.
Segmented		Total number of segments: 2 to 1024. Rearm time between segments: <3 µs (trigger hold-off setting dependent)
Horizontal zoom and position		For all input channels, waveform memories, or functions
Horizontal factor		From 1 to 2000.
Horizontal position		From 0% to 100% non-zoomed waveform.
Timebase clock accuracy		Clock frequency: 500 MHz
Initial set tolerance $@$ 25 °C ±3 °C		±0.5 ppm
Overall frequency stability over oper temperature range	ating	±2 ppm.
Aging over 10 years $@$ 25 °C		±3 ppm

PS9404 PS9404	IA-33 0.2 ps IA-25 0.2 ps IA-16 0.4 ps IA-06 1.0 ps
* Delta time measurement accuracy	$\pm(0.5 \text{ ppm * reading + } 0.1\% \text{ * screen width + } 2 \text{ ps})$
Pre-trigger delay	Record length/current sampling rate maximum at zero variable delay time.
Post-trigger delay	0 to 4.28 s. Coarse increment is one horizontal scale division, fine increment is 0.1 horizontal scale division, manual or calculator increment is 0.01 horizontal scale division.
Channel-to-channel deskew range	± 50 ns range. Coarse increment is 100 ps, fine increment is 10 ps. With manual or calculator data entry the increment is four significant digits or 1 ps.

5.3 Acquisition

Sampling modes	
Real time	Captures all of the sample points used to reconstruct a waveform during a single trigger event.
Random equivalent time	Acquires sample points over several trigger events, requiring the input waveform to be repetitive.
Roll	Acquisition data will be displayed in a rolling fashion starting from the right side of the display and continuing to the left side of the display (while the acquisition is running).
Segmented	Segmented memory optimizes available memory for data streams that have long rearm times between activity. Number of segments: up to 1024. Segments stamped with absolute and delta times.
Maximum sampling rate	
Real time	500 MS/s per channel simultaneously
Random equivalent time	
PS9404A-25 PS9404A-16	Up to 5 TS/s or 0.2 ps trigger placement resolution Up to 5 TS/s or 0.2 ps trigger placement resolution Up to 2.5 TS/s or 0.4 ps trigger placement resolution Up to 1 TS/s or 1.0 ps trigger placement resolution

Record length	
Real-time sampling	From 50 S/ch to 250 kS/ch for one channel, to 125 kS/ch for two channels, to 50 kS/ch for three and four channels.
Random equivalent time sampling	From 500 S/ch to 250 kS/ch for one channel, to 125 kS/ch for two channels, to 50 kS/ch for three and four channels.
Duration at highest sample rate	0.5 ms for one channel, 0.25 ms for two channels, 0.125 ms for three and four channels.
Acquisition modes	
Sample (normal)	Acquires first sample in decimation interval and displays results without further processing.
Average	Average value of samples in decimation interval. Number of waveforms for average: 2 to 4096.
Envelope	Envelope of acquired waveforms. Minimum, Maximum or both Minimum and Maximum values acquired over one or more acquisitions. Number of acquisitions is from 2 to 4096 in ×2 sequence and continuously.
Peak detect	Largest and smallest sample in decimation interval. Minimum pulse width: 1/(sampling rate) or 2 ns @ 50 µs/div or faster for single channel.
High resolution	Averages all samples taken during an acquisition interval to create a record point. This average results in a higher-resolution, lower-bandwidth waveform. Resolution can be expanded to 12.5 bits or more, up to 16 bits.

5.4 Trigger

Trigger sources	Internal from any of four channels, External, External Prescaled.
Trigger mode	
Freerun	Triggers automatically but not synchronized to the input in absence of trigger event.
Normal (triggered)	Requires trigger event for oscilloscope to trigger.
Single	Software button that triggers only once on a trigger event. Not suitable for random equivalent-time sampling
Trigger holdoff mode	By Time or Random
Trigger holdoff range	
Holdoff by time	Adjustable from 500 ns to 15 s in a 1-2-5-10 sequence or in 4 ns fine increments.
Random	This mode varies the trigger holdoff from one acquisition to another by randomizing the time value between triggers. The randomized time values can be between the values specified in the Min Holdoff and Max Holdoff.

5.4.1 Internal trigger

Trigger style	
Edge	Triggers on a rising and falling edge of any source within frequency range DC to 2.5 GHz.
Divided	The trigger source is divided down four times (/4) before being applied to the trigger system. Maximum trigger frequency 6 GHz.
Clock recovery (optional)	Triggers on the rising edge of the recovered clock.
PS9404A-25 PS9404A-16	6.5 Mb/s to 11.3 Gb/s 6.5 Mb/s to 11.3 Gb/s 6.5 Mb/s to 8 Gb/s 6.5 Mb/s to 5 Gb/s
Internal trigger bandwidth and sensitivity	
Low sensitivity	100 mV peak to peak DC to 100 MHz. Increasing linearly from 100 mV peak to peak at 100 MHz to 200 mV peak to peak at 6 GHz. Pulse Width: 80 ps @ 200 mV peak to peak typical.

* High sensitivity	30 mV peak to peak DC to 100 MHz. Increasing linearly from 30 mV peak to peak at 100 MHz to 70 mV peak to peak at 6 GHz. Pulse Width: 100 ps @ 70 mV peak to peak.
Internal trigger level range	-1 V to 1 V in 10 mV increments (coarse). Also adjustable in fine increments of 1 mV.
Internal edge trigger slope	
Positive	Triggers on rising edge.
Negative	Triggers on falling edge.
Bi-slope	Triggers on both edges of the signal.
* Internal RMS trigger jitter	Combined trigger and timing interpolator jitter
Edge and Divided trigger	 1.5 ps + 0.1 ppm of delay, maximum. 1.2 ps + 0.1 ppm of delay, typical. Tested at 2.5 GHz/600 mV peak to peak sine-wave for Edge trigger, and at 6 GHz/600 mV peak to peak sine-wave for Divided trigger.
Clock recovery trigger (optional)	2 ps + 1.0% of unit interval + 0.1 ppm of delay, maximum
Internal trigger coupling	DC

5.4.2 External direct trigger

Trigger style	
Edge	Triggers on a rising and falling edge of any source within frequency range DC to 2.5 GHz.
Divide	The trigger source is divided down four times (/4) before being applied to the trigger system. Maximum trigger frequency 6 GHz.
Clock recovery (optional)	Triggers on the rising edge of the recovered clock.
PS9404A-25 PS9404A-16	6.5 Mb/s to 11.3 Gb/s 6.5 Mb/s to 11.3 Gb/s 6.5 Mb/s to 8 Gb/s 6.5 Mb/s to 5 Gb/s
External direct trigger bandwidth and sensitivity	
Low sensitivity	100 mV peak to peak DC to 100 MHz. Increasing linearly from 100 mV peak to peak at 100 MHz to 200 mV peak to peak at 6 GHz.

	Pulse Width: 80 ps @ 200 mV peak to peak typical.
* High sensitivity	30 mV peak to peak DC to 100 MHz. Increasing linearly from 30 mV peak to peak at 100 MHz to 70 mV peak to peak at 6 GHz. Pulse Width: 80 ps @ 70 mV peak to peak.
External direct trigger level range	-1 V to 1 V in 10 mV increments (coarse). Also adjustable in fine increments of 1 mV.
External direct edge trigger slope	
Positive	Triggers on rising edge.
Negative	Triggers on falling edge.
Bi-slope	Triggers on both edges of the signal.
* External direct RMS trigger jitter	Combined trigger and interpolator jitter
Edge and Divided trigger	 1.5 ps + 0.1 ppm of delay, maximum. 1.2 ps + 0.1 ppm of delay, typical. Tested at 2.5 GHz/600 mV peak to peak sine-wave for Edge trigger, and at 6 GHz/600 mV peak to peak sine-wave for Divided trigger.
Clock recovery trigger (optional)	2 ps + 1.0% of unit interval + 0.1 ppm of delay, maximum
External direct trigger coupling	DC
External prescaled trigger maximum safe input voltage	±3 V (DC+peak AC)
External direct trigger connector	SMA female

5.4.3 External prescaled trigger

For PicoScope 9404A-33, PicoScope 9404A-25 and PicoScope 9404A-16

External prescaled trigger coupling	50 $\Omega,$ AC coupled, fixed level zero volts
* External prescaled trigger bandwidth and sensitivity	Sine wave input
	100 mV peak to peak from 1 GHz to 20 GHz.
PS9404A-33	Increasing linearly from 100 mV peak to peak at 20 GHz to
	600 mV peak to peak at 24 GHz, typical.
PS9404A-25	100 mV peak to peak from 1 GHz to 20 GHz
	100 mV peak to peak from 1 GHz to 16 GHz
PS9404A-06	· ·

* External prescaled RMS trigger jitter	1.5 ps, maximum, 1.2 ps, typical. For trigger input slope > 5 V/ns. Combined trigger and interpolator jitter.
Prescaler ratio	Divided by 8, fixed.
External prescaled trigger maximum safe input voltage	±3 V (DC + peak AC)
External prescaled trigger input connector	SMA female

5.5 Display

Persistence	
Simple	No persistence
Variable Persistence	Time that each data point is retained on the display. Persistence time can be varied from 100 ms to 20 s.
Infinite Persistence	In this mode, a waveform sample point is displayed forever.
Variable Gray Scaling	Five levels of a single color that is varied in saturation and luminosity. Refresh time can be varied from 1 s to 200 s.
Infinite Gray Scaling	In this mode, a waveform sample point displayed as five levels of a single color and displayed forever.
Variable Color Grading	With Color Grading selected, historical timing information is represented by a temperature or spectral color scheme providing "z-axis" information about rapidly changing waveforms. Refresh time can be varied from 1 to 200 s.
Infinite Color Grading	In this mode, a waveform sample point displayed as a temperature of spectral color and displayed forever.
Style	
Dots	Displays waveforms without persistence; each new waveform record replaces the previously acquired record for a channel.
Vector	This function draws a straight line through the data points on the display. Not suited to multi-value signals such as a displayed eye diagram.
Graticule	Full Grid, Axes with tick marks, Frame with tick marks, Off (no graticule).
Format	

Auto	Automatically places, adds or deletes graticules as you select more or fewer waveforms to display.
Single XT	All waveforms are superimposed and are eight divisions high.
Dual YT	With two graticules, all waveforms can be four divisions high, displayed separately or superimposed.
Quad YT	With four graticules, all waveforms can be two divisions high, displayed separately or superimposed. When you select dual or quad screen display, every waveform channel, memory and function can be placed on a specified graticule.
ХҮ	Displays voltages of two waveforms against each other. The amplitude of the first waveform is plotted on the horizontal X axis and the amplitude of the second waveform is is plotted on the vertical Y axis.
ХҮ & ҮТ	Displays both XY and YT pictures. The YT format appears on the upper part of the screen, and the XY format on the lower part of the screen. The YT format display area is one screen and any displayed waveforms are superimposed.
XY + 2YT	Displays both YT and XY pictures. The YT format appears on the upper part of the screen, and the XY format on the lower part of the screen. The YT format display area is divided into two equal screens.
Tandem	Displays graticules to the left and to the right.
Colors	You may choose a default color selection, or select your own color set. Different colors are used for displaying selected items: background, channels, functions, waveform memories, FFTs and histograms.
Trace annotation	The instrument gives you the ability to add an identifying label, bearing your own text, to a waveform display. For each waveform, you can create multiple labels and turn them all on or all off. Also, you can position them on the waveform by dragging or by specifying an exact horizontal position.
5.6 Save/Recall	
Management	Store and recall setups, waveforms and user mask files to any drive on your PC. Storage capacity is limited only by disk space.
File extensions	Waveform files: .wfm for binary format, .txt for verbose format (text),

	.txty for Y values formats (text). Database files: .wdb. Setup files: .set. User mask files: .pcm.
Operating system	Microsoft Windows [®] 7, 8 or 10 (32-bit or 64-bit) or Windows 11 (64-bit)
Waveform save/recall	Up to four waveforms may be stored into the waveform memories (M1 to M4), and then recalled for display.
Save to/recall from disk	You can save or recall your acquired waveforms to or from any drive on the PC. To save a waveform, use the standard Windows Save As dialog box. From this dialog box you can create subdirectories and waveform files, or overwrite existing waveform files. You can load, into one of the Waveform Memories, a file with a waveform you have previously saved and then recall it for display.
Save/recall setups	The instrument can store complete setups in the memory and then recall them.
Screen image	You can copy a screen image into the clipboard with the following formats: Full Screen, Full Window, Client Part, Invert Client Part and Oscilloscope Screen.
Autoscale	Pressing the Autoscale key automatically adjusts the vertical channels, the horizontal scale factors, and the trigger level for a display appropriate to the signals applied to the inputs. The Autoscale feature requires a repetitive signal with a frequency greater than 100 Hz, duty cycle greater than 0.2%, amplitudes greater than 100 mV peak to peak. Autoscale is operative only for relatively stable input signals.
5.7 Marker	

Marker type	X-Marker: vertical bars (measure time). Y-Marker: horizontal bars (measure volts). XY-Markers: waveform markers.
Marker measurements	Absolute, Delta, Volt, Time, Frequency, Slope.
Marker motion	Independent: both markers can be adjusted independently. Paired: both markers can be adjusted together.
Ratiometric measurements	Provide ratiometric measurements between measured and reference values. These measurements give results in such ratiometric units as %, dB, and degrees.

5.8 Measure

Automated measurements	Up to ten simultaneous measurements are supported at the same time.
Automatic parametric	53 automatic measurements available.
Amplitude measurements (17)	Maximum, Minimum, Top, Base, Peak-Peak, Amplitude, Middle, Mean, Cycle Mean, DC RMS, Cycle DC RMS, AC RMS, Cycle AC RMS, Positive Overshoot, Negative Overshoot, Area, Cycle Area.
Timing measurements (18)	Period, Frequency, Positive Width, Negative Width, Rise Time, Fall Time, Positive Duty Cycle, Negative Duty Cycle, Positive Crossing, Negative Crossing, Burst Width, Cycles, Time at Maximum, Time at Minimum, Positive Jitter peak to peak, Positive Jitter RMS, Negative Jitter peak to peak, Negative Jitter RMS.
Inter-signal measurements (13)	Delay (8 options), Phase Deg, Phase Rad, Phase %, Gain, Gain dB.
FFT measurements (5)	FFT Magnitude, FFT Delta Magnitude, THD, FFT Frequency, FFT Delta Frequency.
Measurement statistics	Displays current, minimum, maximum, mean and standard deviation on any displayed waveform measurements.
Method of top-base definition	Histogram, Min/Max, or User-Defined (in absolute voltage).
Thresholds	Upper, middle and lower horizontal bars settable in percentage, voltage or divisions. Standard thresholds are $10-50-90\%$ or $20-50-80\%$.
Margins	Any region of the waveform may be isolated for measurement using left and right margins (vertical bars).
Measurement mode	Repetitive or Single-shot.
Counter	Built-in frequency counter
Source	
PicoScope 9400A models	Internal from any of four channels, External, External Prescaled
Resolution	7 digits
Maximum frequency	Internal or External Direct trigger: 5 GHz. External Prescaled trigger:

	PS9404A-33 PS9404A-25 PS9404A-16 PS9404A-06	20 GHz 16 GHz
Measurement		Frequency, period
Time reference		Internal 250 MHz reference clock
5.9 Mathematics		
Waveform math		Up to four math waveforms can be defined and displayed using math functions F1 to F4
Categories and math operators		
Arithmetic (12)		Add, Subtract, Multiply, Divide, Ceil, Floor, Fix, Round, Absolute, Invert, Common, Rescale.
Algebra (14)		Exponentiation (e), Exponentiation (10), Exponentiation (a), Logarithm (e), Logarithm (10), Logarithm (a), Differentiate, Integrate, Square, Square Root, Cube, Power (a), Inverse, Square Root of the Sum.
Trigonometry (12)		Sine, Cosine, Tangent, Cotangent, Arcsine, Arc cosine, Arctangent, Arc cotangent, Hyperbolic Sine, Hyperbolic Cosine, Hyperbolic Tangent, Hyperbolic Cotangent.
FFT (7)		Complex FFT, FFT Magnitude, FFT Phase, FFT Real part, FFT Imaginary part, Complex Inverse FFT, FFT Group Delay.
Bit Operator (7)		AND, NAND, OR, NOR, XOR, XNOR, NOT.
Miscellaneous (4)		Trend, Linear Interpolation, Sin(x)/x Interpolation, Smoothing.
Formula Editor		You can build math waveforms using the Formula Editor control window.
Operands		Any channel, waveform memory, math function, spectrum or constant can be selected as a source for one of two operands.
FFT		
FFT frequency span		Frequency Span = Sample Rate / 2 = Record Length / (2 × Timebase Range)
FFT frequency resolution		Frequency Resolution = Sample Rate / Record Length
FFT windows		The built-in filters (Rectangular, Hamming, Hann, Flattop, Blackman–Harris and Kaiser–Bessel) allow optimization of frequency resolution, transients, and amplitude accuracy.

FFT measurements	Marker measurements can be made on frequency, delta frequency, magnitude, and delta magnitude. Automated FFT Measurements include: FFT Magnitude, FFT Delta Magnitude, THD, FFT Frequency, and FFT Delta Frequency.
5.10 Histogram	
Histogram axis	Vertical, or Horizontal. Both vertical and horizontal histograms, with periodically updated measurements, allow statistical distributions to be analyzed over any region of the signal.
Histogram measurement set (15)	Scale, Offset, Hits in Box, Waveforms, Peak Hits, Pk- Pk, Median, Mean, Standard Deviation, Mean ± 1 Std Dev, Mean ±2 Std Dev, Mean ±3 Std Dev, Min, Max-Max, Max.
Histogram window	The histogram window determines which part of the database is used to plot the histogram. You can set the size of the histogram window to be any size that you want within the horizontal and vertical scaling limits of the scope.
5.11 Eye diagram	
Eye diagram	PicoScope 9400A Series oscilloscopes can automatically characterize an NRZ and RZ eye pattern. Measurements are based upon statistical analysis of the waveform.
NRZ measurement set (42)	AC RMS, Area, Bit Rate, Bit Time, Crossing %, Crossing Level, Crossing Time, Cycle Area, Duty Cycle Distortion (%, s), Extinction Ratio (dB, %, ratio), Eye Amplitude, Eye Height, Eye Height dB, Eye Width (%, s), Fall Time, Frequency, Jitter (peak to peak, RMS), Max, Mean, Mid, Min, Negative Overshoot, Noise peak to peak (One, Zero), Noise RMS (One, Zero), One Level, Peak-Peak, Period, Positive Overshoot, Rise Time, RMS, Signal-to- Noise Ratio, Signal-to-Noise Ratio dB, Zero Level.
RZ measurement set (43)	AC RMS, Area, Bit Rate, Bit Time, Contrast Ratio (dB, %, ratio), Cycle Area, Extinction Ratio (dB, %, ratio), Eye Amplitude, Eye Height, Eye Height dB, Eye Opening Factor, Eye Width (%, s), Fall Time, Jitter peak to peak (Fall, Rise), Jitter RMS (Fall, Rise), Max, Mean, Mid, Min, Negative Crossing, Noise peak to peak (One, Zero), Noise RMS (One, Zero), One Level, Peak-Peak, Positive Crossing, Positive Duty Cycle, Pulse Symmetry, Pulse Width, Rise Time, RMS, Signal-to-Noise Zero Level

PAM4 measurement set (45)	Eye Width (Upper, Middle and Lower), Eye Skew (Upper, Middle and Lower), Level ISI (3, 2, 1, 0), Level Skew (3, 2, 1, 0), Eq Bit Rate, Symbol Rate, Unit Interval, Eye Height (2-3, 1-2, 0-1), Eye Level (2-3, 1-2, 0-1), Level Mean (3, 2, 1, 0), Level RMS (3, 2, 1, 0), Level PkPk (3, 2, 1, 0), Linearity, Level Deviation, ES2 Level, ES1 level, Level Thickness, Peak to Peak, Overshoot, Undershoot. Optical PAM4 Parameters: Transmit Rise Time, Transmit Fall Time, Average Power, Extinction Ratio, OMA Outer, TDECQ.
5.12 Mask test	
Mask test	Acquired signals are tested for fit outside areas defined by up to eight polygons. Any samples that fall within the polygon boundaries result in test failures. Masks can be loaded from disk, or created automatically or manually.
Mask creation	You can create the following Mask: Standard predefined Mask, Automask, Mask saved on disk, Create new mask, Edit any mask.
Standard mask	Standard predefined optical or standard electrical masks can be created.
SONET/SDH	23 masks
All models	OC1/STMO (51.84 Mb/s) OC3/STM1 (155.52 Mb/s) OC9/STM3 (466.56 Mb/s) OC12/STM4 (622.08 Mb/s) OC18/STM6 (933.12 Mb/s) OC24/STM8 (1.2442 Gb/s) OC48/STM16 (2.48832 Gb/s) FEC 2666 (2.6666 Gb/s)
16 GHz, 25 GHz and 33 GHz models only	STM64/OC192 (9.95328 Gb/s) STM256/OC768 (10 Gb/s) SFP+_Rx_C (10.5188 Gb/s) SFP+_Tx_B (10.5188 Gb/s) XFP_B (10.5188 Gb/s) XFP_C (10.5188 Gb/s) FEC 1066 (10.664 Gb/s)
25 GHz and 33 GHz models only	OTU2 (10.709 Gb/s) FEC 1071 (10.709 Gb/s) OTU2e (11.0957 Gb/s) 10xGB Ethernet Super FEC (12.5 Gb/s) 16FC-MM (14.025 Gb/s) 16FC-SM (14.025 Gb/s) DR_16FC_TEST (14.025 Gb/s) DT_16FC_TEST (14.025 Gb/s)

Fibre Channel	31 masks
All models	FC133 Electrical (132.8 Mb/s) FC133 Optical (132.8 Mb/s) FC266 Electrical (265.6 Mb/s) FC266 Optical (265.6 Mb/s) FC531 Electrical (531.35 Mb/s) FC531 Optical (531.35 Mb/s) FC1063 Electrical (1.0625 Gb/s) FC1063 Optical (1.0625 Gb/s) FC1063 Optical PI Rev13 (1.0625 Gb/s), FC1063E Abs Beta Rx.mask (1.0625 Gb/s) FC1063E Abs Beta Tx.mask (1.0625 Gb/s) FC1063E Abs Delta Rx.mask (1.0625 Gb/s) FC1063E Abs Delta Rx.mask (1.0625 Gb/s) FC1063E Abs Delta Rx.mask (1.0625 Gb/s) FC1063E Abs Delta Tx.mask (1.0625 Gb/s) FC1063E Abs Gamma Rx.mask (1.0625 Gb/s) FC1063E Abs Gamma Rx.mask (1.0625 Gb/s) FC1063E Abs Gamma Rx.mask (1.0625 Gb/s) FC2125 Optical (2.1231 Gb/s) FC2125 Optical PI Rev13 (2.1231 Gb/s) FC2125E Abs Beta Tx.mask (2.125 Gb/s) FC2125E Abs Delta Rx.mask (2.125 Gb/s) FC2125E Abs Delta Tx.mask (2.125 Gb/s) FC2125E Abs Delta Tx.mask (2.125 Gb/s) FC2125E Abs Delta Tx.mask (2.125 Gb/s) FC2125E Abs Gamma Rx.mask (2.125 Gb/s) FC2125E Abs Gamma Rx.mask (2.125 Gb/s) FC2125E Abs Gamma Rx.mask (2.125 Gb/s) FC2125E Abs Gamma Tx.mask (2.125 Gb/s) FC2125E Abs Gamma Tx.mask (2.125 Gb/s)
16 GHz, 25 GHz and 33 GHz models only	FC4250 Optical PI Rev13 (4.25 Gb/s) FC4250E Abs Beta Rx.mask (4.25 Gb/s) FC4250E Abs Beta Tx.mask (4.25 Gb/s) FC4250E Abs Delta Rx.mask (4.25 Gb/s) FC4250E Abs Delta Tx.mask (4.25 Gb/s) FC4250E Abs Gamma Rx.mask (4.25 Gb/s) FC4250E Abs Gamma Tx.mask (4.25 Gb/s) 10x fibre channel (10.5188 Gb/s)
Ethernet	19 masks
All models	100BASE-BX10 (125 Mb/s) 100BASE-BX/LX10 (125 Mb/s) 1.25 Gb/s 1000Base-CX Absolute TP2 (1.25 Gb/s) 1.25 Gb/s 1000Base-CX Absolute TP3 (1.25 Gb/s) GB Ethernet (1.25 Gb/s), 2XGB Ethernet (2.5 Gb/s) 3.125 Gb/s 10GBase-CX4 Absolute TP2 (3.125 Gb/s)
16 GHz, 25 GHz and 33 GHz models only	10Gb Ethernet (9.953 Gb/s) 10GbE (9.953 Gb/s) 10 G Base LRM (10.3125 Gb/s) 100G-SR10 (10.3125 Gb/s) 10GbE 10.3125 (10.3125 Gb/s) 40G-LR4 (10.3125 Gb/s) 40G-SR4 (10.3125 Gb/s) CAUI-TEST (10.3125 Gb/s) XFP-B (10.3125 Gb/s) XFP-C (10.3125 Gb/s) 10Gb Ethernet (10.3125 Gb/s) 10xGb Ethernet (12.5 Gb/s) - 25 GHz and 33 GHz models ONLY.
InfiniBand	21 masks

All models	 2.5G InfiniBand Cable mask (2.5 Gb/s) 2.5G InfiniBand Driver Test Point 1 (2.5 Gb/s) 2.5G InfiniBand Driver Test Point 10 (2.5 Gb/s) 2.5G InfiniBand Driver Test Point 2 (2.5 Gb/s) 2.5G InfiniBand Driver Test Point 3 (2.5 Gb/s) 2.5G InfiniBand Driver Test Point 4 (2.5 Gb/s) 2.5G InfiniBand Driver Test Point 5 (2.5 Gb/s) 2.5G InfiniBand Driver Test Point 6 (2.5 Gb/s) 2.5G InfiniBand Driver Test Point 7 (2.5 Gb/s) 2.5G InfiniBand Driver Test Point 7 (2.5 Gb/s) 2.5G InfiniBand Driver Test Point 8 (2.5 Gb/s) 2.5G InfiniBand Driver Test Point 9 (2.5 Gb/s) 2.5G InfiniBand Driver Test Point 9 (2.5 Gb/s) 2.5G InfiniBand Receiver mask (2.5 Gb/s)
16 GHz, 25 GHz and 33 GHz models only	5.0G InfiniBand Driver Test Point 1 (5 Gb/s) 5.0G InfiniBand Driver Test Point 6 (5 Gb/s) 5.0G InfiniBand Transmitter Pins (5 Gb/s) QDR 10.0 (10 Gb/s)
25 GHz and 33 GHz models only	FDR_Cab_In (14.0627 Gb/s) FDR_Cab_Out (14.0627 Gb/s) FDR_Stress_In (14.0627 Gb/s) FDR_HOST_OUT (14.0845 Gb/s)
XAUI	4 masks
All models	3.125 Gb/s XAUI Far End (3.125 Gb/s) 3.125 Gb/s XAUI Near End (3.125 Gb/s) XAUI-E Far (3.125 Gb/s) XAUI-E Near (3.125 Gb/s)
ITU G.703	14 masks
All models	DS1 100 Ω twisted pair (1.544 Mb/s) 2 Mb 120, 120 Ω twisted pair (2.048 Mb/s) 2 Mb 75, 75 Ω coax (2.048 Mb/s), DS2 110, 110 Ω twisted pair (6.312 Mb/s) DS2 75, 75 Ω coax (6.312 Mb/s) 8 Mb, 75 Ω coax (6.312 Mb/s) 34 Mb, 75 Ω coax (8.448 Mb/s) DS3, 75 Ω coax (8.448 Mb/s) DS3, 75 Ω coax (34.368 Mb/s) DS3, 75 Ω coax (44.736 Mb/s) 140 Mb 0, 75 Ω coax (139.264 Mb/s) 140 Mb 1, 75 Ω coax (139.264 Mb/s) 140 Mb 1 Inv, 75 Ω coax (139.264 Mb/s) 155 Mb 0, 75 Ω coax (155.520 Mb/s) 155 Mb 1, 75 Ω coax (155.520 Mb/s) 155 Mb 1 Inv, 75 Ω coax (155.520 Mb/s)
ANSI T1/102	7 masks
All models	DS1, 100 Ω twisted pair (1.544 Mb/s) DS1C, 100 Ω twisted pair (3.152 Mb/s) DS2, 110 Ω twisted pair (6.312 Mb/s) DS3, 75 Ω coax, (44.736 Mb/s) STS1 Eye, 75 Ω coax, (51.84 Mb/s) STS1 Pulse, 75 Ω coax, (51.84 Mb/s) STS3 Eye, 75 Ω coax, (155.520 Mb/s)

RapidIO	9 masks
All models	RapidIO Serial Level 1, 1.25G Rx (1.25 Gb/s) RapidIO Serial Level 1, 1.25G Tx LR (1.25 Gb/s) RapidIO Serial Level 1, 1.25G Tx SR (1.25 Gb/s) RapidIO Serial Level 1, 2.5G Rx (2.5 Gb/s) RapidIO Serial Level 1, 2.5G Tx LR (2.5 Gb/s) RapidIO Serial Level 1, 2.5G Tx SR (2.5 Gb/s) RapidIO Serial Level 1, 3.125G Rx (3.125 Gb/s) RapidIO Serial Level 1, 3.125G Tx LR (3.125 Gb/s) RapidIO Serial Level 1, 3.125G Tx SR (3.125 Gb/s)
PCI Express	41 masks
All models	R1.0a 2.5G Add-in Card Transmitter Non-Transition bit mask (2.5 Gb/s) R1.0a 2.5G Exp.Card Host Non-Transition bit mask (2.5 Gb/s) R1.0a 2.5G Exp.Card Host Non-Transition bit mask (2.5 Gb/s) R1.0a 2.5G Exp.Card Host Transition bit mask (2.5 Gb/s) R1.0a 2.5G Exp.Card Module Non-Transition bit mask (2.5 Gb/s) R1.0a 2.5G Exp.Card Module Transition bit mask (2.5 Gb/s) R1.0a 2.5G Exp.Card Transmitter Non-Transition bit mask (2.5 Gb/s) R1.0a 2.5G Exp.Card Transmitter Non-Transition bit mask (2.5 Gb/s) R1.0a 2.5G Exp.Card Transmitter Transition bit mask (2.5 Gb/s) R1.0a 2.5G Exp.Card Transmitter Transition bit mask (2.5 Gb/s) R1.0a 2.5G Mobile Transmitter bit mask (2.5 Gb/s) R1.0a 2.5G System Board Transmitter Non-Transition bit mask (2.5 Gb/s) R1.0a 2.5G System Board Transmitter Non-Transition bit mask (2.5 Gb/s) R1.0a 2.5G Transmitter Non-Transition bit mask (2.5 Gb/s) R1.0a 2.5G Transmitter Transition bit mask (2.5 Gb/s) R1.0a 2.5G Transmitter Transition bit mask (2.5 Gb/s) R1.1 2.5G Add-in Card Transmitter Transition bit mask (2.5 Gb/s) R1.1 2.5G Cable Receiver End Non-Transition bit mask (2.5 Gb/s) R1.1 2.5G Cable Receiver End Non-Transition bit mask (2.5 Gb/s) R1.1 2.5G Cable Receiver End Transition bit mask (2.5 Gb/s) R1.1 2.5G Cable Transmitter End Transition bit mask (2.5 Gb/s) R1.1 2.5G Express Module System Transition bit mask (2.5 Gb/s) R1.1 2.5G Express Module Transmitter Path Non- Transition bit mask (2.5 Gb/s) R1.1 2.5G Express Module Transmitter Path Transition bit mask (2.5 Gb/s) R1.1 2.5G Express Module Transmitter Path Transition bit mask (2.5 Gb/s) R1.1 2.5G Express Module Transmitter Path Transition bit mask (2.5 Gb/s) R1.1 2.5G Express Module Transmitter Path Transition bit mask (2.5 Gb/s)

	R1.1 2.5G System Board Transmitter Non-Transition bit mask (2.5 Gb/s) R1.1 2.5G System Board Transmitter Transition bit mask (2.5 Gb/s) R1.1 2.5G Transmitter Non-Transition bit mask (2.5 Gb/s) R1.1 2.5G Transmitter Transition bit mask (2.5 Gb/s)
16 GHz, 25 GHz and 33 GHz models only	 R2.0 5.0G Add-in Card 35 dB Transmitter Non- Transition bit mask (5 Gb/s) R2.0 5.0G Add-in Card 60 dB Transmitter Non- Transition bit mask (5 Gb/s) R2.0 5.0G Add-in Card 35 dB Transmitter Transition bit mask (5 Gb/s) R2.0 5.0G Add-in Card 60 dB Transmitter Transition bit mask (5 Gb/s) R2.0 5.0G Add-in Card 60 dB Transmitter Transition bit mask (5 Gb/s) R2.0 5.0G Mobile Transmitter mask (5 Gb/s) R2.0 5.0G Receiver mask (5 Gb/s) R2.0 5.0G System Board Transmitter Non-Transition bit mask (5 Gb/s) R2.0 5.0G System Board Transmitter Transition bit mask (5 Gb/s) R2.0 5.0G Transmitter Non-Transition bit mask (5 Gb/s) R2.0 5.0G Transmitter Transition bit mask (5 Gb/s) R2.1 5.0G Transmitter Transition bit mask (5 Gb/s)
Serial ATA	24 masks
All models	Ext Length, 1.5G 250 Cycle, Rx Mask (1.5 Gb/s) Ext Length, 1.5G 250 Cycle, Tx Mask (1.5 Gb/s) Ext Length, 1.5G 5 Cycle, Rx Mask (1.5 Gb/s) Gen1, 1.5G 250 Cycle, Rx Mask (1.5 Gb/s) Gen1, 1.5G 250 Cycle, Rx Mask (1.5 Gb/s) Gen1, 1.5G 5 Cycle, Rx Mask (1.5 Gb/s) Gen1, 1.5G 5 Cycle, Rx Mask (1.5 Gb/s) Gen1, 1.5G 5 Cycle, Rx Mask (1.5 Gb/s) Gen1m, 1.5G 5 Cycle, Rx Mask (1.5 Gb/s) Gen1m, 1.5G 250 Cycle, Rx Mask (1.5 Gb/s) Gen1m, 1.5G 250 Cycle, Rx Mask (1.5 Gb/s) Gen1m, 1.5G 5 Cycle, Rx Mask (1.5 Gb/s) Ext Length, 3.0G 250 Cycle Rx Mask (3 Gb/s) Ext Length, 3.0G 250 Cycle Rx Mask (3 Gb/s) Ext Length, 3.0G 5 Cycle, Rx Mask (3 Gb/s) Ext Length, 3.0G 5 Cycle, Rx Mask (3 Gb/s) Gen1, 3.0G 250 Cycle, Rx Mask (3 Gb/s) Gen1, 3.0G 5 Cycle, Rx Mask (3 Gb/s) Gen1, 3.0G 5 Cycle, Rx Mask (3 Gb/s) Gen1m, 3.0G 5 Cycle, Rx Mask (3 Gb/s)
USB	6 masks
All models	USB 2.0 Low Speed (1.5 Mb/s) USB 2.0 Full Speed (12 Mb/s) USB 2.0 High Speed Far (480 Mb/s) USB 2.0 High Speed Near (480 Mb/s) USB 3.0 Gen1 (5 Gb/s)

16 GHz, 25 GHz and 33 GHz models only	USB 3.1 Gen2 10 Gb/s		
SFF	3 masks		
16 GHz, 25 GHz and 33 GHz models only	SFF-8431 Host Receiver Test Signal (10.3125 Gb/s) SFF-8431 Host Receiver Transmit (10.3125 Gb/s) SFF-8431 Module Receiver Output (10.3125 Gb/s)		
CEI_OIF	2 masks		
25 GHz and 33 GHz models only	CEI-11G-LR/MR 11.2 (11.1982 Gb/s) CEI-11G-SR 11.2 (11.1982 Gb/s)		
Mask margin	Available for industry-standard mask testing		
Automask creation	Masks are created automatically for single-valued voltage signals. Automask specifies both delta X and delta Y tolerances. The failure actions are identical to those of limit testing.		
Data collected during test	Total number of waveforms examined, number of failed samples, number of hits within each polygon boundary		

5.13 Inputs/outputs

Trigger output		
Timing	Positive transition equivalent to acquisition trigger point	
Low level	(-0.2 \pm 0.1) V. Measured into 50 Ω	
Amplitude	(900 ± 200) mV. Measured into 50 Ω	
Rise time	10 to 90%: ≤0.45 ns 20 to 80%: ≤0.3 ns	
RMS jitter	2 ps or less	
Output delay	(4 ±1) ns	
Output coupling	DC	
Output connectors	SMA female	
Clock recovery Data output (optional)		
PS9404A-25 PS9404A-16	6.5 Mb/s to 11.3 Gb/s 6.5 Mb/s to 11.3 Gb/s 6.5 Mb/s to 8 Gb/s 6.5 Mb/s to 5 Gb/s	

ps9400Aug-1

Eye amplitude		250 mV peak to peak, typical
P\$ P\$	S9404A-25 S9404A-16	50 ps, typical 50 ps, typical 50 ps, typical 75 ps, typical
RMS jitter		2 ps + 1% of unit interval
Output coupling		AC
Output connector		SMA female
Clock recovery Clock output (optional)		
PS PS	S9404A-25 S9404A-16	Half full rate clock output 3.25 Mb/s to 5.65 Gb/s 3.25 Mb/s to 5.65 Gb/s 3.25 Mb/s to 4 Gb/s 3.25 Mb/s to 3 Gb/s
Amplitude		250 mV peak to peak, typical
Output coupling		AC
Output connector		SMA female

5.14 Power requirements

Power supply voltage	+12 V ±5%
Power supply current, maximum PS9404A-33	2.5 A
PS9404A-25 PS9404A-16	
PS9404A-06	2.7 A
Protection	Auto shutdown on excess or reverse voltage
AC-DC adaptor	Universal adaptor supplied

5.15 PC connection

PC connection

USB 2.0 (high speed). Also compatible with USB 3.0 LAN $\,$

5.16 Physical characteristics

Dimensions	Width: 244 mm, Height: 54 mm, Depth: 233 mm
Net weight PicoScope 9404A mo	dels 1.52 kg

5.17 Environmental conditions

Temperature


Humidity

Operating, normal: +5 °C to +40 °C Operating, for quoted accuracy: +15 °C to +25 °C Storage: -20 °C to +50 °C

Operating: Up to 85 % relative humidity (non-condensing) at +25 °C Storage: Up to 95 % relative humidity (non-condensing)

6 PicoSample 4 software


The PicoSample 4 user interface provides access to commands that control all of the instrument features and functions.

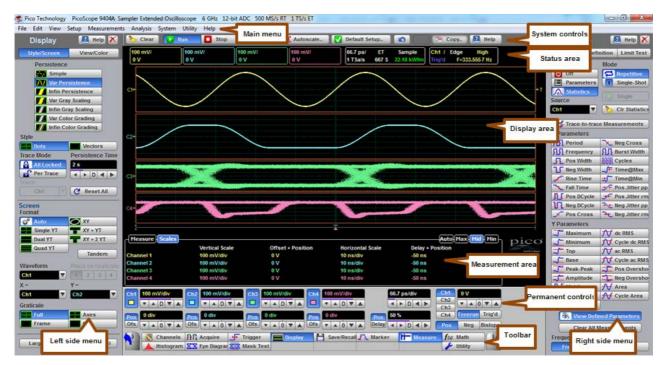

Areas of the PicoSample 4 GUI

6.1 Demo mode

If you start PicoSample 4 without a device connected, you have the option to use a demonstration waveform. Click **Demo** on the **Initialisation** dialog.

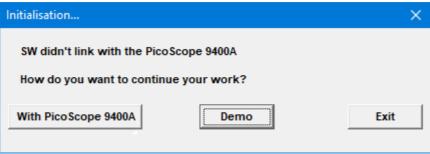

Initialisation... dialog

By default, the software will emulate the **PicoScope 9404A-25**. The model can be changed through the <u>Help</u> control. See <u>System Controls - Help</u> for more information.

You can adjust all of the characteristics of the demonstration waveform displayed using the functions in the **Utility** menu. <u>See Utility Menu - Demo</u> for further information.

6.2 Display area

The following functions are concerned with Display Area:

- Live, reference and math waveforms display here, along with cursors.
- You can drag the waveform to reposition it.
- You can drag across the waveform area to create a box for zooming.
- You can drag the **T** icon to change the trigger level for the selected trigger source.
- You can drag markers to measure waveforms on screen.

6.3 Drag and zoom

You can use the mouse to change the vertical scale and offset, and also the horizontal scale and delay for all input channels, waveform memories or waveform math functions that are currently displayed. Do this by holding down the left mouse button and moving the cursor until the zoom box covers the area of interest. To zoom, release the left mouse button and select a function from the menu. The **PicoScope 9400A** will change the vertical scale and vertical offset and it will change the horizontal scale and horizontal position for all displayed waveforms.

You can cancel the zoom operation by clicking anywhere outside of the zoom box. You can undo the zoom operation by clicking the Undo button.

You can also change the vertical offset on individual channels, waveform memories or waveform math functions by clicking and dragging the waveform or by clicking and dragging the ground marker.

You can change the delay on displayed waveforms by clicking on the waveform and dragging it left or right.

C	÷	

Each channel has its own **Ground Reference Indicator** located to the left of the graticule area. The **Ground Reference Indicator** shows you where zero volts is for each channel. The default marker position is mid-screen. During an **Autoscale**, an offset is applied to vertically center the signal.

6.4 Main menu

File Edit View Setup Measurements Analysis System Utility Help

The **Main Menu** provides access to commands that control all of the instrument features and functions. When you select a feature setup command, the instrument displays the associated side menus, most of which can also be accessed from the <u>Toolbar</u>.

6.4.1 File

The File menu includes the following controls:

Edit	View	Setup	Measure	
Wave	Waveform Memory			
Down	•			
Save V	Navefor	rm	•	
Datab	ase		•	
Setup	s		+	
Open	Default	Setup		
Print t	o Printe	er		
Print .				
Printe	r Setup			
Exit				
	Waves Down Save V Datab Setup Open Print t Print .	Waveform M Download W Save Wavefor Database Setups Open Default Print to Print Print Printer Setup	Download Waveform Save Waveform Database Setups Open Default Setup Print to Printer Print Printer Setup	


The **Waveform Memory** submenu recalls or clears the M1–M4 waveform memories. This submenu includes the following controls:

File	Edit View Setup	Measurements	Analysis System	Ut
	Waveform Memory	•	Visible M1	
	Download Waveform	•	Visible M2	
	Save Waveform	• 1	Visible M3	
	Database	•	Visible M4	
	Setups	•	Visible All	
	Open Default Setup	1	Invisible All	
	Print to Printer		Clear M1	
	Print		Clear M2	
	Printer Setup		Clear M3	
	Exit		Clear M4	
			Clear All Memo	


The **Download Waveform** submenu loads the selected file from a disk into one of the memories M1-M4. This submenu includes the following controls:

File	Edit View	Setup	Measur	ements	Analysi	s System
	Waveform M	Memory	•	top	i Si	ngle 🚺
	Download V	Vaveform	•	1	o Memory	/ M1
	Save Wavef	orm	•	1	o Memory	/ M2
	Database		•	1	o Memory	/ M3
	Setups		•	1	o Memory	/ M4
	Open Defau	lt Setup				
	Print to Prin	ter				
	Print					
	Printer Setu	р				
	Exit					

The **Save Waveform** submenu saves the waveform from the selected source (channel Ch1-Ch4, function F1-F4 or waveform memory M1-M4) to the selected waveform memory (M1-M4), disk or database. This submenu includes the following controls:

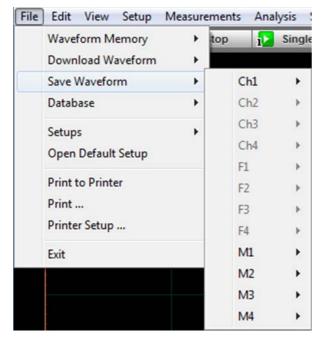


The **Database** submenu downloads, recalls or clears the waveform database. This database consists of all data samples displayed on the screen when the **Display Style** is set to persistence, gray scaling or color grading. It provides the data for the construction of histograms and performing mask tests. This submenu includes the following controls:

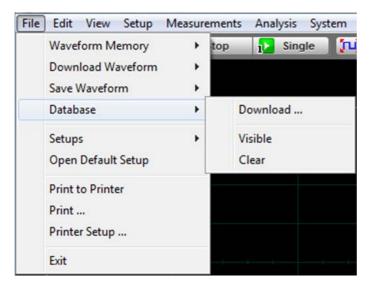

Download opens the Windows **Load Database** dialog and allows you to select a database file to recall from disk to Database Memory (**DB**).

The **Setup** submenu allows you to save and open (recall) setup. This submenu includes the following controls:

Visible makes the waveform database visible or invisible. Clear removes the selected database file from the waveform database.

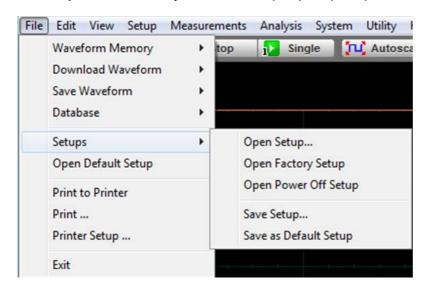

You can use the setup memories when you want to:

- Open Setup: you can recall a setup that you have previously saved on any drive of your PC.
- **Open Factory Setup**: returns the instrument to the manufacturer's default setting. This places the oscilloscope in a known operating condition. You may find it helpful to use the default factory settings when initially setting up the instrument to view signals, or when someone else has used the scope before you. You may also use the default settings to troubleshoot unexpected instrument behavior.
- **Open Power Off Setup:** returns the instrument to the last setting before the power supply was last switched off.
- Save Setup: stores the present front-panel setup to a selected setup memory. To save a current setup for later use, you can use any available drive. Use the standard Windows Setup Files dialog box. You can create subdirectories or new setup files, or overwrite existing setup files from this dialog box. The PicoScope 9400A uses the file extension .set for setup files.
- Save as Default: stores the present front-panel setup as the default setup.

The **Open Default Setup** command returns the instrument to its default settings. This places the oscilloscope in a known operating condition.

File	Edit	View	Setup	Measure	ments
	Wave	form M	>		
	Down	load Wa	>		
	Save V	Navefor	>		
	Datab	ase		>	
	Setup	s	>		
	Open	Default			
	Print t	o Printe	er		
	Print.				
	Printe	r Setup			
	Exit				

You may find it helpful to use this known operating condition when someone else has used the oscilloscope

before you. If you accidentally press **Open Default Setup**, use <u>Undo</u> to return the oscilloscope to the operating condition it was in before **Open Default Setup** was pressed.

The **Print** submenu allows you to select different printer options. This submenu includes the following controls:

🏽 🕸 PicoScope 9400A Print		×
Print Cancel		
Printer NPRINT01/Admin Office Mono A4 HI		
Orientation Portrait Landscape		
Source Full Window Client Part Screen		
Color Inversion		
Margins Min Normal Large		
	Debug	

- **Print**: prints the output file
- **Cancel**: cancels printing of the file
- Printer: selects the printer you want to use
- Orientation: selects page orientation for printing: Portrait or Landscape.
- Invert Colors: this mode is used for better printing of the waveforms on white paper, and greatly reduces the usage of toner.

• Margins: defines the margins when printing: Min, Normal or Large.

Printer Setup is a standard Windows Print Setup dialog:


Print Setup		×
Printer		
<u>N</u> ame:	VPRINT01\Admin Office Mono A4 HF	P M4. ▼ Properties
Status:	Ready	
Type:	HP LaserJet Pro MFP M426-M427 PCL	.6
Where:	main-hp-multifunction	
Comment:		
Paper		Orientation
Si <u>z</u> e:	A4 💌	• Portrait
<u>S</u> ource:	Printer auto select 🗨	A <u>C Landscape</u>
Net <u>w</u> ork		OK Cancel

The Exit command closes PicoSample 4:

	nents
Waveform Memory >	
Download Waveform >	
Save Waveform >	
Database >	
Setups >	
Open Default Setup	
Print to Printer	
Print	
Printer Setup	
Exit	

6.4.2 Edit

The Edit menu includes the following controls:

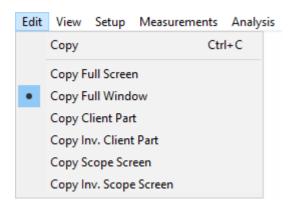


This menu allows you to copy different programming windows to the **Windows Clipboard**. From there, you can paste copied information into such **Windows** programs as **Word**, **Corel Draw**, **Paintbrush** and **Photoshop**.


Use the Copy functions when preparing documentation based on usage of the PicoScope 9400A.

6.4.3 View


The **View** menu allows you to configure various components of the display. It assigns the following items to different parts of the display:

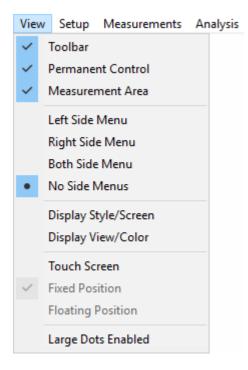


Below are shown several different options from the View menu:

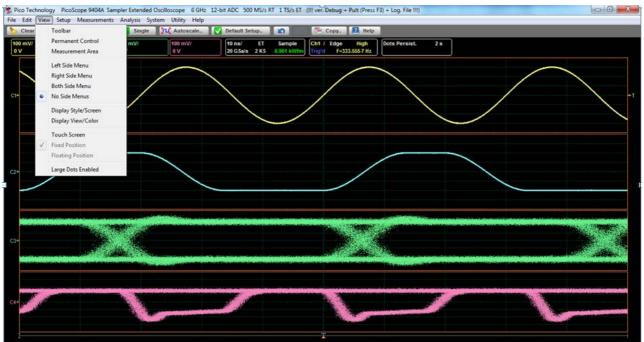

1. All options of the View menu are turned off

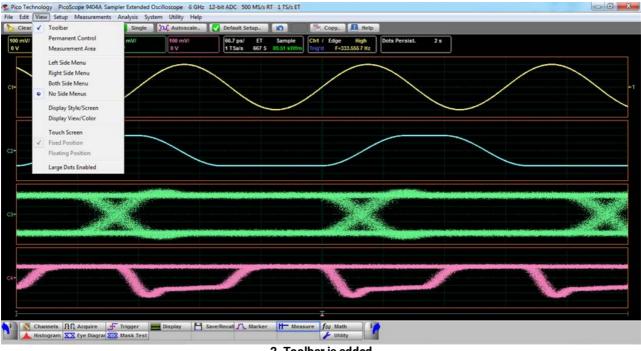


^{2.} Toolbar is added

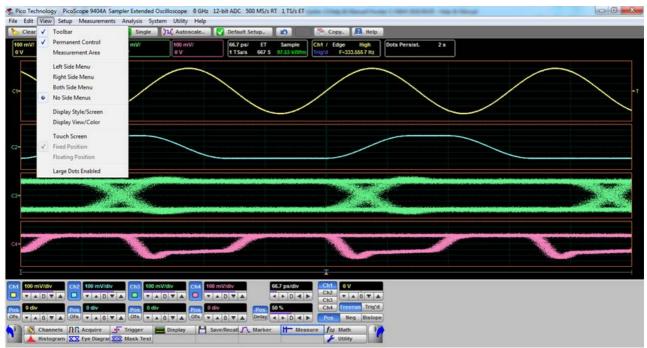


3. Permanent Control is added



4. Measurement area is added

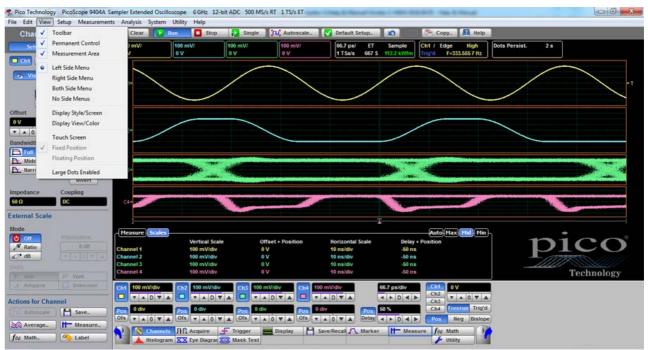

5. Left Side Menu is added

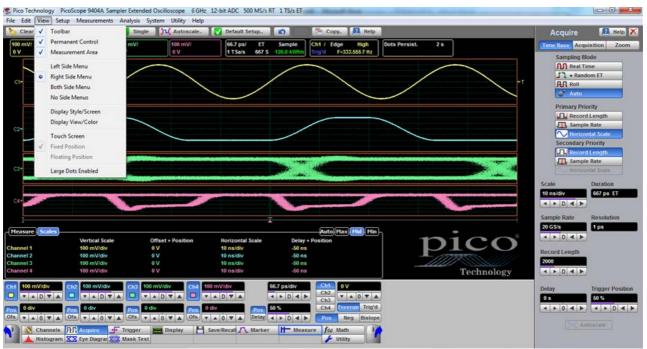

6. Right Side Menu is added

Char 🗸	Toolbar	Clear Run	tility Help	Single Autoscale.	Default Setup	🔊 🧖 Copy	A Help	Acquire	🔝 Help
Set			00 mV/ 100 m		66.7 ps/ ET	Sample Ch1 / Edge	High	Time Base Acc	uisition Zoom
Ch1	Measurement Area	/	0	ov	1 TSa/s 667 S	131.9 kWfm Trig'd F-33	33.5557 Hz	Sampling I	Mode
	Left Side Menu				\frown		\frown	nn Real 1	Time
S Vis	Right Side Menu		/			. /		St - Ran	idom ET
•	Both Side Menu		/		/			R-A Roll	
	No Side Menus							Auto	
et	Display Style/Screen							Primary Pr	
	Display View/Color							Record	and the second
A 0	Touch Screen	/			/				ontal Scale
twidt	Fixed Position							Secondary	
Full	Floating Position							Reco	
Mide							and the second second	Samp	
marre	Large Dots Enabled		and the second	de a faile de Carlos de la contrata	and the second second			In Hora	ontal Scale
	Invert			the second s					
								Scale	Duration
	Coupling		-					10 ns/div	667 ps ET
	Coupling	c+-	~					Contraction of the second seco	667 ps ET
	Coupling	c4-	イ	/		/	~	10 ns/div	667 ps ET
rnal Scale e	Coupling	C4+	~	1	T	Autol Har		10 ns/div	Resolution
rnal Scale e	Coupling DC e	C4-	Vertical Scale	Offset + Position	T Horizontal Scale	Auto Max Delay + Position	He Man picc	10 ns/div	Resolution
e Off Ratio	e Athenation 0 dB	Channel 1	100 mV/div	0 V	10 ns/div	Delay + Position -50 ns	Picc	10 nsidiv	Resolution
rnal Scale e Off Ratio dB	Coupling DC e	Channel 1 Channel 2	100 mV/div 100 mV/div	ev ev	10 ns/div 10 ns/div	Delay + Position -50 ns -50 ns	- piece	10 ns/div	Resolution
e Off Ratio 'dB	Coupling CC e Alternation 0 dB	Channel 1	100 mV/div	0 V	10 ns/div	Delay + Position -50 ns	- piece	10 ns/div C D C D C D Sample Rate 20 GS/2 C D C D Record Length	667 ps ET Resolution 1 ps
e Off Ratio dB	Coupling DC Affectations 0 dB 2 1 1 1 1 1	Channel 1 Channel 2 Channel 3 Channel 4	100 mV/div 100 mV/div 100 mV/div 100 mV/div		10 ns.ldiv 10 ns.ldiv 10 ns.ldiv 10 ns.ldiv	Delay + Position -50 ns -50 ns -50 ns -50 ns		10 ns.div	667 ps ET Resolution 1 ps
nnal Scale e Off Ratio dB s Volt Ampere	Coupling CC Attenuition 0 d0 10 m m 10 m	Channel 1 Channel 2 Channel 3 Channel 4 Chit 100 mV/div	100 mV/div 100 mV/div 100 mV/div 100 mV/div Ch2 100 mV/div	0 V 0 V 0 V 0 V 100 mV/div Ch4	10 nsidiv 10 nsidiv 10 nsidiv 10 nsidiv 100 mVidiv 6	Delay + Position -50 ns -50 ns -50 ns -50 ns 6.7 ps/div Ch5 01		10 ns./div 10 ns./div Sample Rate 20 GS/s Record Length 2000 10 0 0 0	667 ps ET Resolution 1 ps
e Off Ratio dB Volt Ampere	Coupling DC Alternation 0 dB +	Channel 1 Channel 2 Channel 3 Channel 4	100 mV/div 100 mV/div 100 mV/div 100 mV/div		10 ns/div 10 ns/div 10 ns/div 10 ns/div 10 mV/div 10 mV/div	Delay + Position -50 ns		10 nsldiv Image: Sample Rate 20 GS/s Image: Sample Rate 20 GS/s Image: Rate 20 GS/s 20 GS/s <t< td=""><td>667 ps ET Resolution T ps Trigger Positic 50 %</td></t<>	667 ps ET Resolution T ps Trigger Positic 50 %
e Off Ratio dB Volt Ampere	Coupling DC Attenuation 0 dB 	Channel 1 Channel 2 Channel 3 Channel 4	100 mV/div 100 mV/div 100 mV/div 100 mV/div Ch2 100 mV/div Ch2 100 mV/div Ch2 0 0 mV/div	0 V 0 V 0 V 0 V 0 V 0 V 0 V 0 V 0 V 0 V	10 ns/div 10 ns/div 10 ns/div 10 ns/div 10 mV/div 10 mV/div 10 mV/div 10 mV/div 10 ns/div 10 ns/div	Delay + Position -50 ns -50 ns -50 ns -50 ns -50 ns -67 psidiv Ch1 0 V Ch3 V		10 ns./div 10 ns./div Sample Rate 20 GS/s Record Length 2000 10 0 0 0	667 ps ET Resolution T ps Trigger Positie
edance Prrnal Scale fe Off Astic dB Suff Ampere ons for Ch. Autoscale) Average	Coupling Coupling Allgementance 0 dB 	Channel 1 Channel 2 Channel 3 Channel 4	100 mV/div 100 mV/div 100 mV/div 100 mV/div Ch2 100 mV/div Ch2 0 div 0 div 0 div 0 div		10 ns/div 10 ns/div 10 ns/div 10 ns/div 10 mV/div 10 mV/div	Delay + Position -50 ns -50 ns -50 ns -67 psidiv Ch1 Ch2 O%	ative version	10 nsldiv Image: Sample Rate 20 Gs/s Image: Sample Rate 20 Gs/s Image: Sample Rate 20 Gs/s Image: Sample Rate 2000 2000 2000 2000 2000 2000	667 ps ET Resolution T ps Trigger Positie

7. Both Side Menus are added

6.4.3.1 Touchscreen settings

When **View > Touchscreen** is checked, PicoSample 4 displays a larger, touchscreen-friendly keypad whenever you click a numerical control. For example, when you click the **Trigger Level** control in this mode, and when **Floating Position** is also checked, the following repositionable keypad is displayed:




If, instead of **Floating Position**, **Fixed Position** is checked, the keypad appears to the right of the <u>permanent</u> <u>controls</u> and cannot be moved. The permanent controls must be displayed for this option to work.

Other touchscreen-friendly actions, such as drawing a zoom box over the waveform, are always available regardless of the state of the **View > Touchscreen** setting.

6.4.4 Setup

The **Setup** menu assigns the following items to the side menu:

- Channel 1
- Channel 2
- Channel 3
- Channel 4
- Time Base/Acquisition
- Edge Trigger
- Advanced Trigger

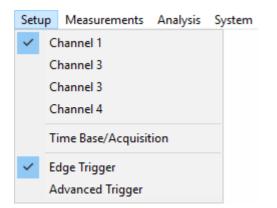

The Setup menu assigns the item to the left side menu if it is opened or if both side menus are opened.

The Setup menu assigns the item to the right side menu if only right side menu is opened.

6.4.5 Measurements


The **Measurements** menu assigns the following items to the side menu:

- Marker
- Measure
- Histogram
- Eye Diagram

Mea	asurements	Analysis
~	Marker	
	Measure	>
	Histogram	>
	Eye Diagra	m >

The Measure menu has three submenus that can be directly assigned to the side menu:

- Parameter
- Definition
- Limit Test

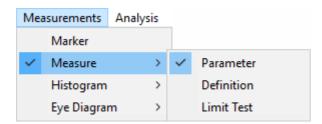

The Histogram menu has two submenus that can be directly assigned to the side menu:

- Setup
- Window/Scale

Mea	surements	Analys	sis		
	Marker				
	Measure		>		
~	Histogram		>	\checkmark	Setup
	Eye Diagrar	m	>		Window/Scale

The Eye Diagram menu has two submenus that can be directly assigned to the side menu:

- Parameter
- Definition

Mea	asurements Ar	nalysis		
	Marker			
	Measure	>		
	Histogram	>		
\checkmark	Eye Diagram	>	~	Parameter
				Definition

6.4.6 Analysis

The Analysis menu assigns the following items to the side menu:

- Mathematics
- Mask Test

The Mathematics menu has two submenus that can be directly assigned to the side menu:

- Function
- Scaling

Ana	alysis	System	Utility	Hel	р
~	Mat	hematics	>	~	Function
	Mas	k Test			Scaling

6.4.7 System

The **System** menu assigns the following items to the side menu:

- Change Instrument
- Common LAN Setting
- Scanning LAN Instrument



Change Instrument opens the Change Instrument dialog:

PicoScope 9400 Change Instruments		×	
Current Instrument: Demo	Choice Instrument: USB AutoDetect Demo		
Startup Instrument: USB			
Choiced Instrument: Create special Shortcut Set as Startup	Switch now Cancel		

This dialog allows you select the instrument that should be assigned to the program. The following options can be used:

- The instrument connected by USB
- The instrument found with AutoDetect mode
- The Demo Mode instrument

Create special Shortcut creates a shortcut to the instrument on your desktop.

Common LAN Settings opens this dialog:

PicoScope 9400A Common LAN Settings	×
Please discuss this settings with your network administrator!	
Subnet Mask: 255.255.255.0	
Zone of the Instrument IP Addresses:	
First IP Address: 192.168.0.220	
Last IP Address: 192.168.0.229	
Gateway: 192.168.0.1	
OK Cancel	

Select the settings appropriate to your LAN after consulting your network administrator.

LAN Instruments Scanning opens this dialog and starts a scan of IP addresses as defined in the Common LAN Settings dialog:

PicoScope 9400A LAN Instruments Scanning	×
Scanning Time: 00:11 (0/10 checked)	The duration of scanning is one or few minutes.
List of LAN Instruments	
	To accelerate this process please reduse the IP addresses margins in System -> Common Lan Settings menu.
	Terminate Scan
Delete Instrument	OK Cancel


After the scan is finished, all found IP addresses will be displayed in the **List of LAN Instruments**. To confirm the scanning results, click **OK**.

PicoScope 9400A LAN PicoScope Instruments Sco	anning ×
Scanning Time: 00:01 (0/10 checked)	
List of LAN Instruments	
	The scanning is terminated by user.
	0 Instruments was found.
Delete Instrument	OK Cancel

6.4.8 Utility

The Utility menu assigns the following items to the side menu:

- Calibrate: Channel 1/2, Channel 3/4 or Timebase calibration routine.
- **Demo:** In demonstration ('Demo') mode, when no scope is plugged in (see <u>Demo mode</u> for more information), five virtual signal generators labeled A to E are available to drive the input channels.
- Adjustment: This opens several menus used for the factory adjustment procedure. It is protected by a password.
- Language: This menu selects the language used in the *PicoScope 9400A User's Guide*. At the present time the only available language is English.

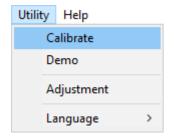

6.4.9 Help

The Help menu has two functions:

Help	
	PicoSample 4 Help
	About

- PicoSample 4 Help activates the context-sensitive built-in information system on the instrument.
- About shows information about the program and the instrument in use. It also allows you to change the instrument model in Demo mode, and to edit the TCP/IP properties of the instrument.

6.5 Measurement area

There are seven tabs that can appear in the **Measurement Area** at the bottom of the oscilloscope display depending on the selected current settings. Click on each of the tab headings to view measurement results.

The list includes the following tabs:

- Scales Tab
- Color Grade Tab
- Marker Tab
- Measure Tab
- Histogram Tab
- Eye Diagram Tab
- Mask Test Tab

The Measurement Area has four height settings: Auto, Maximum, Middle and Minimum.

Auto height provides active amount of rows, Max height provides 10 rows, Mid height provides 5 rows, and Min height provides 2 rows.

Scales				Auto Max Mid Min	
	Vertical Scale	Offset + Position	Horizontal Scale	Delay + Position	
Channel 1	100 mV/div	0 V	10 ns/div	-50 ns	
Channel 2	100 mV/div	0 V	10 ns/div	-50 ns	
Channel 3	100 mV/div	0 V	10 ns/div	-50 ns	
Channel 4	100 mV/div	0 V	10 ns/div	-50 ns	
Function 1	100 mV/div	0 V	10 ns/div	-50 ns	
Function 2	100 mV/div	0 V	10 ns/div	-50 ns	

Measurement Area with auto height

	Vertical Scale	Offset + Position	Horizontal Scale	Auto Max Mid Mir Delay + Position
Channel 1	100 mV/div	0 V	10 ns/div	-50 ns
Channel 2	100 mV/div	0 V	10 ns/div	-50 ns
Channel 3	100 mV/div	0 V	10 ns/div	-50 ns
Channel 4	100 mV/div	0 V	10 ns/div	-50 ns
Function 1	100 mV/div	0 V	10 ns/div	-50 ns
Function 2	100 mV/div	0 V	10 ns/div	-50 ns
Function 3	100 mV/div	0 V	10 ns/div	-50 ns
Function 4	100 mV/div	0 V	10 ns/div	-50 ns
Memory 1	100 mV/div	0 V	10 ns/div	-50 ns
Memory 2	100 mV/div	0 V	10 ns/div	-50 ns

Measurement Area with maximum height

Scales		Auto Max Mid Min		
	Vertical Scale	Offset + Position	Horizontal Scale	Delay + Position
Channel 1	100 mV/div	0 V	10 ns/div	-50 ns
Channel 2	100 mV/div	0 V	10 ns/div	-50 ns
Channel 3	100 mV/div	0 V	10 ns/div	-50 ns
Channel 4	100 mV/div	0 V	10 ns/div	-50 ns

Measurement Area with middle height

Scales				Auto Max Mid	Min
	Vertical Scale	Offset + Position	Horizontal Scale	Delay + Position	
Channel 1	100 mV/div	0 V	10 ns/div	-50 ns	

Measurement Area with minimum height

ps9400Aug-1

6.6 Permanent controls

The **Permanent Controls** are located at the bottom of the display area. They are permanent because they are the most common functions that affect the waveform display. By using the **Permanent Controls** you have a quick reference to vertical, horizontal and trigger selections.

The Permanent Controls are:

- The Channel 1-4 on/off check boxes, scale, position and offset settings.
- The Timebase scale, trigger position and delay settings.
- Trigger source, slope, mode, and level settings.

Right-click on a selected variable and choosing the **Calculator** command, you will obtain a pop-up numeric keypad allowing you to set a precise value.

Each channel has a check box allowing you to turn that channel on or off, and a set of controls allowing you to change the vertical scaling or offset. Only channels that are on are shown in matching colors.

The right-hand side of the permanent controls contains a selection of trigger controls. Trigger slope can be selected between **Pos**itive, **Neg**ative, and **Bislope**, while trigger mode can be selected between **Freerun** and **Trig'd**. You can set a particular trigger level.

Ch1 100 mV/div Ch2 100 mV/div Ch3 100 mV/div Ch4 100 mV/div 10 ns/div	Ch1	0 V
	Ch2 Ch3	T A O T A
Pos 0 div Pos 0 div Pos 0 div Pos 0 div		Freerun Trig'd
	Pos	Neg Bislope

Permanent Controls

6.7 Pop-up keypad

The **Pop-up keypad** allows you to enter numeric values directly. You can use it with any numeric field in PicoSample 4: just right-click on the field and select **Calculator**. You can also type variables directly into numeric fields: first type the number, then finish by typing a single letter - p, n, u, m, X, K, A, G, T. (The meanings of these letters are explained below).

100) mV/	/div	
•		D	
et to			
Min		Mid	Max
4 1 0	5 2	6 3 -	e
р	n	h	m
Т	G	M	K

- 1. Choose the numeric field that you wish to edit.
- 2. Right-click on the field to bring up the context menu.
- 3. Click the Calculator command to bring up the Pop-up keypad.

4. Enter the new value numerically by clicking the number keys, then click one of the multiplier buttons to complete the value. (The **X** button means a multiplier of 1). Finally, click **OK** to update the numeric field:

Special Key Definitions

Min.	Enter the minimum value of selected variable.
Mid.	Enter the middle value of selected variable.
Max.	Enter the maximum value of selected variable.
Fine	Enter the value of selected variable with fine resolution.
Coarse	Enter the value of selected variable with coarse resolution.

Numeric value keypad

Minus (-) Changes the sign of the mantissa (or the sign of the exponent if pressed after the exponent key).

..

Dimension key	pad
p (pico)	Appends an exponent of 10^{-12} to the number you have entered.
n (nano)	Appends an exponent of 10 ⁹ to the number you have entered.
u (micro)	Appends an exponent of 10 ⁻⁶ to the number you have entered.
m (milli)	Appends an exponent of 10^{-3} to the number you have entered.
K (kilo)	Appends an exponent of 10 ³ to the number you have entered.
M (mega)	Appends an exponent of 10^6 to the number you have entered.
	Note: The keyboard shortcut for this key is A , not M .
G (giga)	Appends an exponent of 10 ⁹ to the number you have entered.
T (tera)	Appends an exponent of 10 ¹² to the number you have entered.
Clr (clear)	Clears any numbers you have entered.
Backspace	Use the backspace key to erase the character to the left of the insertion point.
e (Exponent)	The number you enter after pressing this key is an power of 10.

6.8 Side menu

The side menus appear on the left and right sides of the waveform area.

Left-click a button on the toolbar to add the specified menu to the left menu area. Right-clicking sends the menu to the right menu area.

If the toolbar is not visible, display it using the View > Toolbar command on the Main Menu.

Remove a side menu by clicking the **Cancel** button

6.9 Status area

The **Status Area** displays acquisition status, mode, and number of acquisitions, as well as the trigger status, date, time, and quick reference to record length and horizontal parameters.

6.10 System controls



Using the **System Controls**, you control whether the oscilloscope is running or stopped. Other buttons allow you to reset the oscilloscope to its default setup, automatically configure the oscilloscope for the current signals (**Autoscale**), or erase the waveforms from the display.

The System Controls buttons are:

- Clear
- Run
- Stop
- Single
- Autoscale
- Default Setup
- Undo
- Redo
- Copy
- Help

6.10.1 Clear



Clicking the **Clear** button erases all channel waveform data from the graticule area. The following occur when the display graticule is cleared:

- All channel waveform data is erased from the graticule area.
- Functions, spectra and waveform memories are not erased from the display graticule when the clear display feature is executed.
- All associated measurements and measurement statistics are reset (averaging, color-grading, mask test data, limit test data, and histogram results), if enabled.

When the instrument is running

If the instrument is running and receiving triggers, new waveform data is displayed on the next acquisition, averaging is reset; and persistence and color-grading, histograms, the mask testing database and all measurements are recalculated.

When the instrument is stopped

If the instrument is stopped, the display remains cleared of waveform data until the trigger circuit is rearmed and the instrument is triggered. Then the new data is displayed and measurements are recalculated.

6.10.2 Run, Stop and Single



The **Run** button causes the instrument to resume acquiring data. If the instrument is stopped, it starts acquiring data on the next trigger event. If the instrument is already in the run mode, it continues to acquire data on successive trigger events.

If pressing the Run button does not cause waveform data to display on the screen, try the following:


- Make sure a signal is connected to one of the channel and the display for that channel is turned on.
- Make sure the offset does not have the trace clipped off the display.
- Check the trigger setup conditions to make sure the trigger conditions are valid for the signal.
- Set the trigger mode to **Freerun**. **Freerun** forces the instrument to trigger, which may allow you to see enough of the signal so that you can set up the front panel properly.
- Click the Autoscale button.

The **Stop** button causes the oscilloscope to stop acquiring data. You can stop acquisition if you want to freeze the displayed waveform(s) for closer analysis or measurement.

The **Single** button causes the oscilloscope to perform a single waveform acquisition. Each subsequent press of the **Single** button rearms the trigger circuit. A complete acquisition cycle is performed, and any measurements are recalculated.

If all the channels are turned off or if a trigger event is not found, the instrument will not acquire any data.

6.10.3 Autoscale

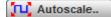

Adjusting an oscilloscope to display a stable trace of usable size and amplitude can be a time-consuming process. The **Autoscale** feature of the **PicoScope 9400A Series** can quickly give you a stable, meaningful trace display.

ps9400Aug-1

The Autoscale button causes the instrument to quickly analyze any waveforms connected to the trigger and channel inputs. Then, it sets up the vertical, horizontal, and trigger controls to best display that signal.

When you click the Autoscale button, you tell the PicoScope 9400A Series oscilloscope to examine the signal and adjust the following controls for optimum display:

- Vertical scale and offset
- Timebase scale and delay
- Trigger level, if appropriate to that trigger source

The PicoScope 9400A scope must have an available trigger source and input. For example, if you are using Ch1 as a trigger input, the trigger signal must be connected to this trigger input.

The Autoscale function can find repetitive signals with:

- Frequency greater than 50 Hz
- Duty cycle greater than 1%
- Vertical amplitude greater than 50 mV peak to peak
- Trigger amplitude as specified

Autoscale is operative only for relatively stable input signals. Autoscale looks for signals on all channels, even if they are turned off. It also searches for a trigger signal on the trigger inputs.

If the Autoscale button is pressed unintentionally, use the Undo button to return the instrument to the settings that existed before.

Default setup 6.10.4

Default Setup..

The Default Setup button returns the instrument to its default settings. This places the oscilloscope in a known operating condition. You may find it helpful to use this known operating condition when someone else has used the oscilloscope before you. If you accidentally press the Default Setup button, use the Undo button to return the oscilloscope to the operating condition it was in before Default Setup was pressed.

Right-click on the button to get four options:

- Default Setup Returns the instrument to its default settings.
- Factory Setup Returns the instrument to default setting of the manufacturer.
- Returns the instrument to the last setting before switching off the power supply. • Power Off Setup
- Save As Default Stores the present settings as the default setup.


6.10.5 Undo, Redo



You may find situations where you have unintentionally selected an unnecessary control. When this happens, you can use the **Undo** button to return the oscilloscope to the previous settings. The depth of undo can be up to 100 steps.

If you later decide you didn't want to undo an action, right-click the button and select Redo

6.10.6 Copy

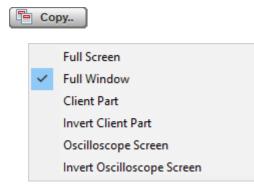

Clicking the **Copy** button copies different programming windows to the **Windows Clipboard**. From there, you can paste copied information into such **Windows** programs as **Word**, **Corel Draw**, **Paintbrush** and **Photoshop**.

Use the **Copy** function when preparing documentation based on usage of the **PicoScope 9400A Series** oscilloscopes.

Right-click the button to get six options:

- Full Screen
- Full Window
- Client Part
- Invert Client Part
- Oscilloscope Screen
- Invert Oscilloscope Screen

6.10.7 Help

🔝 Help

The Help button has two functions:

- Click to activate the context-sensitive built-in information system on the instrument. This changes the pointer into a context-sensitive help icon. You can then click any control to open the manual at the relevant page.
- Right-click to open the PicoScope 9400A Help manual or the About dialog.

These options can also be accessed by clicking Help in the main menu.

About

Help > About	Select Instrument Model
Instrument Info TCP / IP Properties OK	Restart Now OK Cancel
SW Revision: 4,12.0.1 Copyright © 2002-2024 Pico Technology Ltd	Select a device to use from the list below. PicoScope 9404A-25 (Current)
Pico Technology PicoScope 9404A-25 Sampler Extended Oscilloscope GUI	Select Instrument Model
About PicoScope 9404A-25 X	

About and Instrument Info dialogs from the Help menu

Click **About** to view some basic information about the oscilloscope and software that you are currently using. Click the **Instrument Info** button to view information about the connected device.


If you are using PicoSample 4 in **Demo mode**, without an oscilloscope connected (see <u>Demo mode</u> for more information), you can use the **Instrument Info** dialog to change the model of the demonstration device. The dialog shows information about the current demonstration device; click **Change Model** to select a different model. To update the software you will then need to restart PicoSample 4.

anufacturing Informa	ation	and the second	
Model:	PicoScope 9404A-25	Change Model	
Functionality:	25 GHz Sampler extended oscilloscop	e.	
Option:	Clock Data Recovery		
Year:	2018		
Serial Number:	Nr.00001		
FPGA FW Version:	4.2.2		
FW Version:	4.2.2		
SW Version:	4.12.0 (2024, Nov 26)		
Current Interface:	Instrument not connected		

Instrument Info dialog with a demonstration device

6.11 Startup

If you start PicoSample 4 without a device connected, the **Initialisation** dialog will automatically appear with three buttons, as shown below.

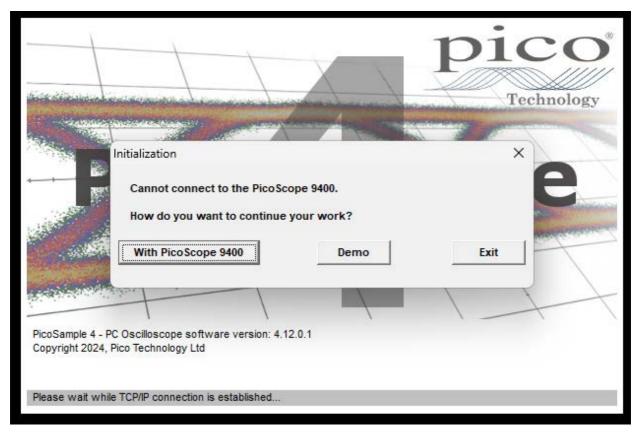

- With PicoScope 9400: Connect a PicoScope 9400A Series oscilloscope and then click this button to continue opening the software.
- **Demo**: Start the software with a demonstration waveform. See <u>Demo Mode</u> for more information.
- Exit: Close the software.

6.12 Toolbar

The Toolbar includes up to 12 buttons located at the bottom of the instrument display.

The Toolbar is used to:

- Set up the oscilloscope operating modes (Channels, Acquire, Trigger, and Display menus)
- Set up and execute waveform measurements (Marker, Measure, Histogram, and Eye Diagram menus)
- Control file management tasks (Save/Recall menu)
- Perform waveform analysis (Math and Mask Test menus)
- Set up and execute instrument calibration, and to use a demo mode (Utility menu)

🚯 Channels 👭 A	cquire 🚽	Trigger	Display	Save/Recall	🔨 Marker	H- Measure	$f \otimes$ Math
🗼 Histogram 🔀 E	ye Diagrar 🔀	Mask Test					🌽 Utility

Clicking on any button of the **Toolbar** with the right mouse recalls the **Right Side Menu**. Clicking on any button of the **Toolbar** with the left mouse recalls the **Left Side Menu**.

7 Menu7.1 Channels Menu

Channels



CAUTION! The input circuits can be damaged by electrostatic discharge. Therefore, avoid applying static discharges to the front panel input connectors. Before connecting any coaxial cable to the connectors, momentarily short the center and outer conductors of the cable together. Avoid touching the front panel input connectors without first touching the case of the instrument. Personnel should be properly grounded, and should touch the case of the instrument before touching any connector. Be sure that the instrument and PC are properly earth-grounded to prevent build-up of static charge. Repair of damage due to misuse is not covered under the warranty!

The Channels menu allows you to set all controls for vertical setups of all live waveforms.


To display the **Channels** menu, click the **Channels** button from the <u>Permanent Controls Area</u>. The controls for each channel are independent. When you select the **Channels** menu, either the **Scale**, **Offset**, **Position**, **Deskew**, or **Attenuation** control is highlighted in the same color as the selected channel, indicating that the function is active.

The Channels menu has two submenus: <u>Setup</u> and <u>Zoom</u>.

Channels I Help X Setup Zoom	Channels Help X Setup Zoom
Ch1 Ch2 Ch3 Ch4	Main / Zoom Zoom Area
Visible Acquire	50 % / 50 % Combined
Scale	25 % / 75 % Separate
100 mV/div	0 % / 100 %
Offset Position	Add Zoom Zone
0 V 1.99 div	
	Zoom Zones
Bandwidth Deskew	Z1 Z2 Z3 Z4
11.11 ns	
Middle	Delete Zoom Zone Z2
Narrow	
Invert	Horizontal Zoom Z2
Impedance Coupling	Horizontal Factor Horizontal Position
50 Ω DC	6.993 28.275 %
External Scale	
Mode Attenuation	
Off 0 dB	Vertical Zoom Z2
<mark>6∕™</mark> dB	Source
Units	Ch1 🔽
Volt W Watt	
A Ampere ? Unknown	Vertical Factor Vertical Position
	2.4615 –4.62 div
Actions for Channel	
(TL) Autoscale Save	
😹 Average 📔 Measure	
for Math	Delete All Zoom Zones

The Channels Menu

7.1.1 Channel Setup

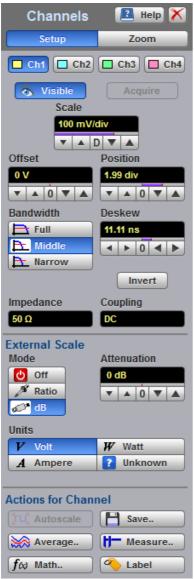

each channel, to control scale, offset, position, bandwidth and deskew, to invert the waveform and to control external scale.

The Channel Setup menu allows you to select and display the waveform of

The Channels Setup Menu

7.1.1.1 Channel Select



The **PicoScope 9400A Series** oscilloscopes have four channels numbered **CH1** to **CH4**. The instrument can simultaneously acquire, display and perform measurements on all channels.

Many of the controls of the **PicoScope 9400A Series**, especially the channel controls, operate on the selected channel. The instrument applies all actions that only affect one channel at a time, such as applying changes to the vertical control settings, to the selected channel. Since it is possible that all traces will be on the screen at the same time, each trace is displayed in a separate color.

Clicking the Ch1, Ch2, Ch3, or Ch4 buttons:

- Toggles it between channels 1 and 4.
- Assigns the function keys to the selected channel.

7.1.1.2 Channel Display

\delta Visible

There are two ways to add selected channels to the display and remove them again:

100 mV/ 0 V

- Use the Visible button.
- Use the Ch1-Ch4 check boxes in the Permanent Controls Area.

Clicking the **Visible** button:

- Turns the display for the selection on or off.
- Changes the label from on to off or vice versa.

Turning the display off does not turn off acquisition of the selected channels. To turn off acquisition of the selected channel, use the <u>Acquire</u> button <u>Acquire</u>.

When the Visible button changes from on to off, while the Acquire button is on, the Status Area for the selected

channel also changes its status from **channel** to **channel** is removed from display but its acquisition is still going on.

This status shows that the

Visible turns on or off the display of the waveform for the chosen channel. When the channel display is on, a waveform is displayed for that channel, unless the offset is adjusted so the waveform is clipped off of the display. Turning a channel's display off turns off the markers, measurement define parameters, histogram window and eye window. However, turning a channel's display off doesn't turn off marker measurements, automatic measurements, histogram measurements, eye-diagram measurements or mask test. Functions and FFTs will also be available for that channel. Turning a channel off increases the display update rate for the channels that remain on.

7.1.1.3 Channel Acquire



Turning the display off with the **Visible** button Visible does not turn off acquisition of the selected channels. To turn off acquisition of the selected channel, use the **Acquire** button.

When the Acquire button changes from on to off, while the Visible button is off, the Status Area for the selected

channel also changes its status from

m to

This status shows that the channel is removed from the display and its acquisition is stopped. Stopping acquisition turns off marker measurements, automatic measurements, histogram measurements, eye-diagram measurements and mask tests for the selected channel. Functions and FFTs based on this channel will be also removed.

7.1.1.4 Channel Scale



You can use the vertical **Scale** controls to change the volts-per-division setting for any channel to increase or decrease the amplitude of your waveform. It determines the portion of the input signal presented to the acquisition system. Adjust the **Scale** to control the portion of the vertical window displayed on screen. The vertical window is always centered around the offset value that is set and not around the ground reference.

As the numeric value of the scale is increased, the displayed waveform decreases in size, and as the numeric value of the scale is decreased, the waveform increases in size.



The Scale control provides graphical scaling only; it has no effect on the vertical acquisition window.



Only waveform traces from input channels can be vertically adjusted with the **Scale** control. It does not affect waveforms saved in memories, or waveform functions.

You can set the vertical sensitivity of the selected channel in one of four ways:


- Use the Scale spin box.
- Use the Ch1-Ch4 spin boxes in the Permanent Controls area.
- Use the Drag and Zoom.
- Use the Pop-up Keypad to enter specific settings.

For the **PicoScope 9404A-16** and **PicoScope 9404A-06** models you can change the vertical scaling from 10 mV/div to 250 mV/div. For the **PicoScope 9404A-33** and **PicoScope 9404A-25** the vertical scale can be changed from 10 mV/div to 200 mV/div. If fine mode is off, the vertical scaling is in a 10-12.5-15-20-25-30-40-50-60-70-80-90-100-125-150-200-250 mV/div sequence. When fine mode is on, you can change the vertical scaling with a 1% fine increments or better. With manual or calculator data entry the increment is 0.1 mV/div.

You can also use <u>Zoom</u> menu to adjust the vertical scale.

The **Scale** changes automatically if the attenuation factor is changed (see <u>Attenuation</u>). The units the scale is displayed in depend on the unit of measure selected with the <u>Units</u> menu. The choices for units are volts, watts, amperes, or unknown. The **Scale** changes automatically if the display graticule mode (single, dual or quad) or the attenuation factor is changed.

7.1.1.5 Channel Offset

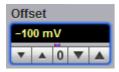

You can use the vertical **Offset** controls to move your waveform either up or down on the display. The **Offset** variable changes the vertical position of a particular channel's waveform on the display screen without modifying the waveform itself. It determines the portion of the input signal presented to the acquisition system.

The advantage of digital offset is that it is calibrated. The offset voltage is the voltage at the center of the graticule area, and the range of offset is ± 1 V. As you vary the offset, the middle voltage level moves relative to zero. This moves the vertical acquisition window up and down on the waveform. With input signals that are smaller than the window, the waveform appears to move in the window. Applying a negative offset moves the vertical range down relative to the DC level of the input signal, moving the waveform up on the display. Likewise, applying a positive offset moves the vertical range up, moving the waveform down on the display.

Set the vertical offset to display the features of interest on your waveform and avoid clipping.

Each channel has its own **Ground Reference Indicator** located to the left of the graticule area. The **Ground Reference Indicator** shows you where zero volts is for each electrical channel.

Б

Waveform data outside the vertical acquisition window is clipped: that is, the data is limited to the minimum and/or maximum boundaries of the vertical acquisition window. This limiting can cause inaccuracies in amplitude-related measurements.



The **Offset** control affects the vertical acquisition window for the selected input channel. It does not affect waveforms saved in memories, or waveform functions.

You can move the trace of the selected channel up or down in one of five ways:

- Use the **Offset** spin box.
- Use the Ch1 Ch4 offset spin boxes from the Permanent Controls Area.
- Use the Drag and Zoom.
- Use the Pop-up Keypad for some specific settings.
- Drag the channel Ground Reference Indicator.

For the **PicoScope 9404A-33** and the **PicoScope 9404A-25** offset can be adjusted from -800 mV to +800 mV. For the **PicoScope 9404A-16** and the **PicoScope 9404A-06** offset can be adjusted from -1 V to +1 V. If fine mode is off, the offset can be changed in 10 mV steps. When fine mode is on, you can change the offset in 2 mV steps. With manual or calculator data entry the increment is 0.01 mV for offset between -99.9 and 99.9 mV, and 0.1 mV for offset between -99.9 and 99.9 mV.

The **Offset** changes automatically if the attenuation factor is changed. The units the offset voltage is displayed in depend on the unit of measure selected with the Scale menu. The choices for units are volts, watts, amperes, or unknown. The **Offset** changes automatically if the display graticule mode (single, dual or quad) or the attenuation factor is changed. During an **Autoscale**, an offset is applied to vertically center the signal.

7.1.1.6 Channel Position



Use the **Position** variable to set the vertical position of the selected channel on the display without changing its offset value. The visual effect is the same as for the **Offset** but the waveform is adjusted at a later time in the signal flow.

The **Position** variable increments and decrements the waveform position by 0.25 division (one minor graticule division), or 0.01 division (0.04 minor graticule division) when fine mode is on. With manual or calculator data entry the increment is three significant digits, for example, 1.99 div.

ps9400Aug-1

Increasing the position value of a waveform causes the waveform to move up, and decreasing the position causes the waveform to move down.

7.1.1.7 Channel Bandwidth



Bandwidth is the range of frequencies that an oscilloscope can acquire and display accurately (that is, with less than ±3 dB attenuation). You can use the **Bandwidth** function to select either full, middle, or narrow bandwidth.

The wider bandwidth option allows the instrument to respond to fast changes in a waveform. The increased bandwidth thus yields the highest measurement fidelity.

More narrow bandwidth offers the best sensitivity by reducing the noise on the input waveform. A lower bandwidth is especially useful for low-level signals that cannot be averaged, such as an eye diagram. If you do not need wide bandwidth, use the middle, or even narrow bandwidth to keep the signal-to-noise ratio at the best possible level.

The Bandwidth does not affect the trigger signal.

- Full. This button selects full bandwidth..
- Middle. This button selects middle bandwidth.
- Narrow. This button selects narrow bandwidth.

7.1.1.8 Channel Deskew



The **Deskew** variable adjusts the skew to change the horizontal position of one active channel with respect to another on the instrument display. The **Deskew** function has ±50 ns range. Coarse increment is 100 ps, fine increment is 10 ps. With manual or calculator data entry the increment is four significant digits or 1 ps.

Use the **Deskew** to compensate the time offset between two or more channels, and also differences in cable or probe lengths. It also allows you to place the triggered edge at the centre of the display when you are using a power divider connected between different channels. Another use for deskew is when you are comparing the shapes of two waveforms rather than the actual timing difference between them: you can use the **Deskew** to overlay one waveform on top of the other.

The **Deskew** function allows you to set the horizontal position of a waveform in one of two ways:

- Use the **Deskew** spin box.
- Use the Pop-up Keypad to enter specific settings.

7.1.1.9 Channel Invert

Invert

Click the Invert to invert selected channel waveform.

7.1.1.10 Channel Input Impedance



The input channels of the **PicoScope 9400A Series** oscilloscopes have 50 Ω input impedance with DC input coupling. This is useful for connecting to probes or circuits that require a 50 Ω termination. For example, you might choose an active probe to measure a very fast ECL, SiGe or GaAs circuit. Such a probe usually has an amplifier near the tip of the probe, which drives the signal through a 50 Ω cable. To minimize any waveform reflections, the scope input impedance must match the cable impedance as closely as possible so you would choose the 50 Ω setting for that channel's input impedance.



CAUTION

To avoid damage to the input of the scope, make sure you do not exceed the channel's maximum rated the following input voltage:

±1.5 V (DC + peak AC) for the PicoScope 9404A-33 and the PicoScope 9404A-25 models.

±1.4 V (DC + peak AC) for the **PicoScope 9404A-16** and the **PicoScope 9404A-06** models.

Using resistive divider probes you can increase the input impedance up to 5 k Ω , and using an active probe you can increase input impedance up to 10 M Ω .

7.1.1.11 Channel Input Coupling



The **PicoScope 9400A Series** oscilloscopes provide only straight-DC coupling to input circuits, with no protection. We specify a maximum vertical non-destructive range that limits signals to a small level of ± 1.4 V (DC + peak AC) or 13 dBm. See Vertical Specifications and Characteristics for exact limits.



CAUTION!

Do not exceed the limit, even momentarily, as the input channel may be damaged.



CAUTION!

The **PicoScope 9400A Series** oscilloscopes have a specified maximum operating input voltage (dynamic range) that, if exceeded, could cause acquisition and measurement errors due to nonlinearity. This limit is equal to ±800 mV range for the **PicoScope 9404A-33** and the **PicoScope 9404A-25** models, also ±1.0 V for the **PicoScope 9404A-16** and the **PicoScope 9404A-06** models. Do not exceed this limit!

For removing the DC component of a particular channel's waveform to view AC waveforms with large DC offsets, use external wide-bandwidth HF blocking capacitors. Use external attenuators if necessary to prevent exceeding the limits just described.

7.1.1.12 Channel External Scale

Aode	Attenuation		
Off Off	0.05 :1		
🎤 Ratio	V A D V A		
d ⊘* dB			
Units			
Units VVolt	₩ Watt		

The **External Scale** functions allow you to set up a channel of the instrument to use external voltage attenuators or probes, current probes, or optical-to-electrical converters. Scaling is automatically adjusted to calculate and display information at the input side of an external device. For example, you may need to reduce the voltage level of a pulse generator that exceeds a channel's maximum input level. If you add a 20 dB attenuator, the voltage is reduced by a factor of 10:1. Although the voltage levels into the channel are within acceptable limits, your source measurements will be 1/10th of the actual source level. External scaling allows you to compensate for the 20 dB attenuation so your measurements reflect the source level prior to attenuation.

The measurement result reflects the actual value at the external device input. Once the number has been entered (1 is the default), the instrument then uses the total attenuation factor in scaling measurement results. Total attenuation is the product of the external attenuation multiplied by the hardware attenuation of the probe (or another external unit) or sampler.

When you enter attenuation, amplification, or conversion information with the External Scale menus, the channel settings change in the following ways:

- The unit values and amplitudes of the markers and vertical measurements reflect the signal at the input of a transducer, probe, attenuator, or amplifier. For example, you can connect an external device such as a photodiode to an electrical channel input and change the scale unit value to read watts, the unit value of the signal at the diode input.
- The maximum and minimum vertical scale settings change by a factor specified by the attenuation value entered.
- Offset minimum and maximum values change by a factor specified by the attenuation value entered.

7.1.1.13 External Scale Mode



You can enter attenuation or gain characteristics of an external device when configuring a channel for external scaling. The **Mode** function lets you select how you want the attenuation factor represented. Click the **Ratio** or the **Decibel** radio buttons to choose either ratio or decibel.

The formula for calculating decibels is: 20 log(Vout/Vin) or 10 log(Pout/Pin)

Decibels versus voltage ratio

dB	Voltage Ratio
3 dB	1.41
6 dB	2.00
10 dB	3.16
20 dB	10
40 dB	100
60 dB	1000
120 dB	1 000 000
-80 dB	0.000 1

Changing the channel attenuation factor does not attenuate the input signal; it only changes the database for generating prompts on the display and calculating the results of the automated waveform measurements. If the input signal must be attenuated, use external attenuators.



External gain is implied when you enter negative decibel values or ratios of less than 1:1 in the **Attenuation** variable. The default attenuation value is 1:1.

7.1.1.14 External Scale Attenuation



The **Attenuation** variable lets you select an attenuation that matches the device connected to the instrument. When the attenuation is set correctly, the instrument maintains the current scale factors if possible. All marker values and voltage, amperage or wattage measurements will reflect the actual signal at the input to the external device.

The channel attenuation factor is used to establish a database for:

- Generating the vertical scale and offset prompts on the display.
- Calculating the automated waveform measurements.
- Y-marker levels.
- Calculating functions.

The attenuation factor can be adjusted from 0.000 1:1 to 1 000 000:1 or from -80 dB to 120 dB.

The **Attenuation** function allows you to set attenuation of the selected channel in one of two ways:

- By using the Attenuation spin box.
- By using the Pop-up Keypad to enter specific settings.

7.1.1.15 External Scale Units



The **External Scale Units** function lets you select a unit of measure that is appended to the channel scale, offset and vertical measurement values. The units are **Volt**, **Watt**, **Ampere**, or **Unknown**.

Use **Volt** for voltage probes or attenuators, **Ampere** for current probes, **Watt** for optical-to-electrical converters, and **Unknown** when there is no unit of measure or when the unit of measure is not one of the available choices.

7.1.2 Zoom

The **Zoom** menu allows you to select one from four zoom areas, to zoom and position any of the selected zoom areas horizontally or vertically.

For more details see Zoom Menu.



7.2 Acquire Menu

Acquire Itelp X	Acquire I Help X
Sampling Mode M Real Time R Random ET R Roll Roll Auto Primary Priority Record Length Sample Rate Horizontal Scale Secondary Priority Record Length Sample Rate Horizontal Scale Scale Scale Duration 10 ns /div Nons RT Sample Rate Sample R	Acquisition Mode Sample Average Min-Max Envelope Min Envelope Min Envelope Min Peak Detect High Resolution Segmented Detect Interval 2 ns Run Until Min Stop Button Curr Stop Button Curr Stop Button
Second Length Solution Delay Solution Sol	# of Acquisitions Select Action

The Acquire Menu

7.2.1 Time Base

Acquire 🛛 🔝 Help 🗙
Time Base Acquisition Zoom
Sampling Mode
M Real Time
S Random ET
Rell
Auto
Primary Priority
Record Length
Sample Rate
Horizontal Scale
Secondary Priority
Record Length
Sample Rate
- V norizontal scale
Scale Duration
10 ns/div 100 ns RT
Sample Rate Resolution
500 MS/s 2 ns
Record Length
50
Delay Trigger Position
0 s 50 %

The Time Base Menu


7.2.1.1 Sampling Mode

Sampling Mode
MA Real Time
Sandom ET
Roll
🗳 Auto

The PicoScope 9400A Series oscilloscopes offer three sampling modes: Real Time, Random Equivalent Time and Roll. Auto enables the oscilloscope to choose the most appropriate sampling mode.

Real Time Sampling Mode

Real Time Sampling captures all of the sample points used to reconstruct a waveform during a single trigger event. It also requires a sample rate that is at least 2.5 times the highest frequency in the waveform or else you will get a distorted or aliased view of your waveform. The following figure shows how a waveform is sampled in real time.

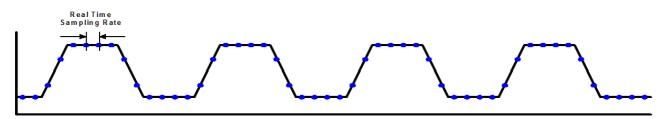


Real Time Sampling

Once the trigger is armed, the oscilloscope starts acquiring data until the trigger event you have specified occurs. Because the **PicoScope 9400A Series** scope acquires data while the trigger is armed, waveform samples before or after the trigger event are in the oscilloscope's acquisition memory. You can configure the **PicoScope 9400A Series** oscilloscopes to acquire only pre-trigger waveform samples, only post-trigger waveform samples, or both pre-trigger and post-trigger waveform samples. The maximum real-time sampling rate of the PicoScope 9400A Series is 500 MHz.

Random Equivalent Time Sampling

The instrument uses equivalent time sampling to extend its sample rate beyond its real-time maximum sampling rate. In this sampling mode the **PicoScope 9400A Series** scope acquires sample points over several trigger events, requiring the input waveform to be repetitive. On each trigger event, the scope acquires more points and combines them with the previously acquired points. This creates a record of the waveform that has an effective sampling rate much higher than real-time sampling rate.

The following figure shows how a waveform is sampled in **Random Equivalent Time** mode. The samples are labeled with different colors to indicate the trigger event when they were acquired. Thus, samples labeled with green were acquired during the first trigger event. Those samples labeled with brown were acquired during the second trigger event, and so on.

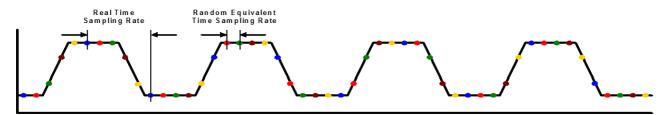

Random Equivalent Time Sampling

The real-time sampling rate used in the **PicoScope 9400A Series** is 500 MHz, while the best hardware time interval resolution in **Random Equivalent Time Sampling** mode is as follows:

- for the PicoScope 9404A-33 and the PicoScope 9404A-25 models up to 5 TS/s or 0.2 ps trigger placement resolution.
- for the PicoScope 9404A-16 models up up to 2.5 TS/s or 0.4 ps trigger placement resolution.
- for the PicoScope 9404A-06 models up to 1 TS/s or 1.0 ps trigger placement resolution.

Roll Mode

When **Roll** is enabled, acquisition data will be displayed in a rolling fashion starting from the right side of the display and continuing to the left side of the display (while the acquisition is running). Roll mode is a triggerless acquisition mode so there is no trigger reference and all trigger features are disabled. New data will continue rolling across the screen while the acquisition is running. If the acquisition is stopped before a full screen of data is acquired, the portion of data that has been acquired will be displayed with a time-zero reference at the right screen edge and the remaining portion of the display will be left blank. If a control change is made while the acquisition is running, the acquisition is halted and restarted and the old data is cleared from the display and measurement statistics.

Use **Roll Sampling Mode** when making manual adjustments to your low-frequency waveforms, when you want to find disturbances in your low-frequency waveforms, or to monitor the power-up cycle of a power supply voltage.

7.2.1.2 Scale and Duration



The **Scale** function is similar to the time/div knob of the timebase on a traditional oscilloscope. *Division* in this instance equals 1/10 of the horizontal axis. Adjusting the horizontal (timebase) scale control expands and compresses the displayed waveform horizontally.

The **Scale** controls horizontal scaling of the waveform. Depending on the models you can set the timebase scale from 10 ps/div to 1000 s/div in one of three ways:

- By using the Scale spin box
- By using the corresponding spin box in the Permanent Controls Area
- By using the Pop-up Keypad to quickly enter numeric data for the timebase scale using the mouse

In **Real Time Sampling Mode** you can set the timebase scale from 10 ns/div to 1000 s/div in a 1-2-5-10 coarse sequence.

In **Random Equivalent Time Sampling Mode** you can set the timebase scale from 10 ps/div to 5 μ s/div (for the **PicoScope 9404A-33** the **PicoScope 9404A-25** models), from 20 ps/div to 5 μ s/div (for the **PicoScope 9404A-16** models). and from 50 ps/div to 5 μ s/div (for the **PicoScope 9404A-06** models), all in a 1-2-5-10 coarse sequence.

In **Roll Sampling Mode** you can set the timebase scale from 100 ms/div to 1000 s/div, adjustable in a 1-2-5-10 coarse sequence.



The horizontal scale you set, and the requirement that all waveforms fit within the 10 horizontal-division display, determines the horizontal duration of the window relative to any waveform, allowing you to scale it to contain a waveform edge, a cycle, or several cycles.

Time Duration (seconds) = 10 div (window size) × Timebase Scale (sec/div)

Time Duration (seconds) = Sample Interval (seconds/sample) × Record Length (samples)

7.2.1.3 Sample Rate and Resolution



The Sample Rate control determines how often the waveform is sampled.

In **Real Time Sampling Mode** the sample rate can be set to a maximum of 500 MS/s. In **Random Equivalent Time Sampling Mode** depending on the model the sample rate can be set to a maximum of 5 TS/s.

Sample Interval (seconds/sample) = Resolution (sec/sample) = 1/Sample Rate (samples/sec)



Resolution is the time interval between sample points taken during acquisition.

Sample Interval (seconds/sample) = Resolution (sec/sample) = 1/Sample Rate (samples/sec)

For real-time oscilloscopes, the sample interval is the reciprocal of the sample rate. It has 2 ns minimum value.

For equivalent-time digitizers, the time interval between successive samples represents equivalent time, not real time. It has 0.2 ps minimum value.

7.2.1.4 Record Length



The number of samples that form a trace is called the record length. For example, if the horizontal (timebase) scale is set up as 10 ns/div, the total displayed sweep time is 100 ns. The more sampled data that is available for analysis or measurements, the greater the record length.

You can select record length with one of these methods:

- By using the **Record Length** control
- By using the <u>Pop-up Keypad</u>

For real-time sampling from 50 S/ch to 250 kS/ch for one channel, to 125 kS/ch for two channels, to 50 kS/ch for three and four channels.

For random equivalent time sampling record length can be selected from 500 S/ch to 250 kS/ch for one channel, to 125 kS/ch for two channels, to 50 kS/ch for three and four channels.

7.2.1.5 Delay



The **Delay** controls the time between the trigger event and the acquisition of data. For both real time and random equivalent time sampling mode delay can be changed from 0 to 4.28 s. Coarse increment is one horizontal scale division, fine increment is 0.1 horizontal scale division, manual or calculator increment is 0.01 horizontal scale division.

7.2.1.6 Trigger Position



The adjustable feature trigger position defines where on the waveform record the trigger occurs. It lets you properly align and measure data within records. The part of the record that occurs before the trigger is the pre-trigger portion. The part that occurs after the trigger is the post-trigger portion. The amount of pre-trigger and post-trigger information available depends on the sweep speed selected and memory depth.

Displaying pre-trigger information can be valuable when troubleshooting. For example, if you are trying to find the cause of an unwanted glitch in your test circuit, it might trigger on the glitch and make the pretrigger period large enough to capture data before the glitch. By analyzing what happened before the glitch, you may uncover clues about its source.

7.2.2 Acquisition

Acquire 🛛 🔝 Help 🔀		
Time Base Acquisition Zoom		
Acquisition Mode Image Average Image Image		
Detect Interval		
2 ns		
Run Until Stop Button Car Acquisitions		
# of Acquisitions Select Action		

The Acquisition Menu

7.2.2.1 Acquisition Mode

Acquisition Mode
Л Sample
😹 Average
Min-Max Envelope
处 Min Envelope
Max Envelope
ראל Peak Detect
<u> III</u> High Resolution
Segmented

Acquisition Mode lets you choose how the oscilloscope will create points in the waveform record.

The PicoScope 9400A Series uses eight basic acquisition modes.

- **Sample** (default mode) acquires one sample point per trigger and displays results without further processing. It is available in Real time, Random ET and Roll modes.
- Average calculates the average values for each record point over many waveform records. It is available in Real-time and Random ET modes.
- Min-Max, Min and Max Envelope uses the highest and lowest samples across several waveform records. These are available in Real-time and Random ET modes.
- **Peak Detect** this mode alternates between saving the highest sample in one acquisition interval and the lowest sample in the next acquisition interval. It is available in Real-time mode only.
- **High Resolution** this mode averages all samples taken during an acquisition interval to create a record point. This average results in a higher-resolution, lower-bandwidth waveform. This mode only works with Real-time mode.
- Segmented acquires a number of captures, one for each trigger event, all stored in a single buffer. It is available in Real-time mode only.

Acquisition modes do not affect the data sampling itself. However, they do affect the analysis of the sampling, and therefore the way the oscilloscope combines the samples into a data point value.

Sample acquisition mode

This is the default mode, which is useful for acquiring fast signals. The oscilloscope saves the samples during each acquisition interval (it is the time covered by the waveform record divided by the record length).

🐜 Average

Average acquisition mode

Pressing **Average** lets you acquire and display a waveform that is the combined result of several acquisitions. The oscilloscope acquires data as in the **Sample** mode and then averages it according to the number of acquisitions that you specify. Each point in a record is numerically averaged with the same point in all other records. This reduces the random noise of a displayed waveform and provides a cleaner display, improves resolution of the displayed waveform, and increases measurement repeatability, all due to a more stable displayed waveform. The noise sources can average to zero over time while the underlying waveform is preserved. The effective resolution of the displayed waveform is repetitive and has a stable trigger point. However, averaging reduces the throughput of the instrument. Also, the waveform is less responsive to changes, especially when you select a high number of averages. The vertical resolution can be also improved by using averages.



Use the **Clear Display** button to reset the averaging process.

Menu



Note that averaging is particularly useful for single-valued waveforms such as pulses or sine waves. Multi-valued waveforms, such as eye-diagrams, are not improved with averaging because the eye "collapses" to the average value between logic level one and logic level zero.

The PicoScope 9400A Series uses so-called stable averaging. This is the algorithm:

$$A_{n} = A_{n-1} + \frac{x_{n} - A_{n-1}}{2^{k}}$$

where:


- is the current acquisition's number
 is the current acquisition's number
- is the current acquisition's cumulative average
 is the previous acquisition's cumulative average
- An-1 is the previous acquisition's cumulative a
- k_{k} is the number of averages

As the number of acquisitions increases, the number of averages k increases and the size of the correction term (2^k) decreases. Although the display becomes less noisy after each acquisition, the first acquisition has the greatest effect, and succeeding acquisitions have less effect as the correction term becomes smaller. For example, a change that occurs during the second acquisition shows up on the screen much sooner than one that occurs during the sixteenth. Whenever you adjust a control that affects the display, the scope starts a new averaging sequence to ensure that you will see the change immediately.

Signal-to-Noise Improvement Ratio with Averaging

Selected Number of Averages	Signal-to-Noise Improvement Ratio		
	Linear	dB	
2	1.41	3.0	
4	1.98	5.9	
8	2.75	8.8	
16	3.84	11.7	
32	5.24	14.6	
64	7.51	17.5	
128	10.60	20.5	
256	14.90	23.4	
512			

When you select the Average mode, you can enter the number of averages with the Average N

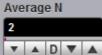

variable. The number of averages can be specified from 2 to 4096 in multiples of two by one

of these methods:

• By using the **Average N** control

By using the <u>Pop-up Keypad</u> for some specific settings



The waveform is less responsive to changes if a large number of averages is specified.

Min-Max Envelope

於 Max Envelope

Min-Max, Min and Max Envelope acquisition modes

- Min-Max Envelope mode
- Max Envelope mode
- Min Envelope mode

Clicking one of the envelope radio buttons (**Min-Max Envelope**, **Max Envelope** or **Min Envelope**) lets you acquire and display a waveform showing the extreme values of several acquisitions over a period of time. Thus, the oscilloscope detects peaks. You can specify a number of acquisitions over which to accumulate and display the min/max data. The oscilloscope compares the min/max values from the current acquisition with those stored from previous acquisitions up to the specified number of acquisitions. An enveloped waveform then shows the maximum excursions of the individual waveform records. This often results in a thicker waveform trace that shows the variations of the signal. Use this mode to reveal the noise band around the signal.

Because it degrades the timing information in the data by a factor of 2, **Envelope** mode is typically not suitable for FFT analysis. In addition, this mode can obscure the statistical distribution of the samples that occurred between the minimum and maximum values. However, you can create a display of this distribution by using the persistence display modes to view only peak values sampled over a period of time.



The **Envelope** mode requires a stable trigger for time correlation.

Min-Max Envelope. This radio button tells the oscilloscope to acquire and display the variation of both extremes - maximum and minimum.

Max Envelope. This radio button tells the oscilloscope to acquire and display the variation of maximum values.

Min Envelope. This radio button tells the oscilloscope to acquire and display the variation of minimum values.

When you select Min-Max Envelope, Max Envelope or Min Envelope mode you can enter the number of



variable. The number of acquisitions can be specified from acquisitions with the Envelope N 2 to 4096 in multiples of two or continuously using one of these methods:

- By using the **Envelope N** spin box
- By using the Pop-up Keypad

Envelope and Average modes operate after the oscilloscope has taken two or more acquisitions. For example, each Average mode averages the corresponding data points from two or more waveforms, not the waveform as a whole. Envelope mode builds an envelope from the peak minimum and maximum values of each point on a succession of waveforms.

Side effect of averaging and enveloping. Averaging improves the accuracy of some software measurements, because the measurements are taken from averaged data. However, some measurements can be adversely affected by averaging or enveloping. For example, if you take a rise time measurement of a signal with horizontal jitter, the averaged trace will indicate an inaccurately slow reading. Be cautious when taking software measurements of averaged or enveloped traces. Use statistical measurements on the unaveraged signal to take an accurate rise time measurement on a signal with jitter.

Peak Detect

Peak Detect acquisition mode

This mode alternates between saving the highest sample in one acquisition interval and the lowest sample in the next acquisition interval. This mode is available in Real-time mode only.

III High Resolution

High Resolution acquisition mode

In High Resolution mode the oscilloscope creates a record point by averaging all samples taken during an acquisition interval. The results in a higher-resolution, lower-bandwidth waveform. This mode only works with real-time sampling. A key advantage of High Resolution mode is its potential for increasing vertical resolution regardless of the input signal. The table below indicates that you can obtain up to 16 significant bits with High Resolution mode.

Resolution	Maximum Sampling Rate	Bandwidth
12.5 bits	250 MS/s	110 MHz
13 bits	125 MS/s	55 MHz
13.5 bits	62.5 MS/s	27.5 MHz
14 bits	31.25 MS/s	13.8 MHz
14.5 bits	15.625 MS/s	6.9 MHz
15 bits	7.81 MS/s	3.4 MHz
15.5 bits	3.91 MS/s	1.7 MHz
16 bits	1.95 MS/s	0.85 MHz

Segmented

Segmented mode

Available in Real Time Timebase mode only.

Segmented mode splits the capture memory into the specified number of parts, called segments. Each segment starts when a trigger event occurs and finishes when the segment is full. Each segment has its own timestamp, which records when the trigger occurred

The # of Segments control specifies the number of segments to collect. The number can be anything from 1 to Max # Segments (the latter being calculated by PicoSample 4 according to the capture settings):

# of Segments		S	Max # Segments		
10					512
		D	V		

The View Multiple Segments control specifies how the segment data is displayed:

View Multiple Segments
C Off
Overlay Only
◆ Overlay and selected

Off - Displays only the latest segment that was captured.

Overlay Only – Displays the specified range of segments from **First Segment** to **Last Segment** as a single overlay. The combined waveform is drawn as a heat map with rarely visited points shown in cool colors and frequently visited points in hot colors. The live waveform is drawn on top in the channel's normal color.

Overlay and selected – Displays the specified range of segments as in **Overlay Only** mode, with an additional layer showing the **Selected Segment**.

Find Segment..

The **Find Segment** button starts the **Segment Finder** utility. This is a binary search tool that helps you to find an anomalous waveform segment quickly by dividing the segment range in half repeatedly. On each iteration, you inspect the display and tell the utility whether or not the anomalous waveform feature (such as a glitch or dropout) is visible.

If you have 512 segments, for example, this utility enables you to find an anomaly in only 9 steps rather than an average of 256 steps if you searched through the segments one by one.

If the **Find Segment** button is greyed out, the oscilloscope is probably still capturing data. Press the **Stop** button and the **Find Segment** button should then be enabled.

Time Table..

The **Time Table** button displays a table of segment timestamps relative to the real-time clock. The table's three columns are:

Segment – The segment number.

Trigger Time, s - The time at which the segment was triggered.

d Trigger Time, s – The delta time between this segment and the previous one.

7.2.2.2 Run Until

Run Until		
Stop Button		
🖧 Acquisitions		

The **Run Until** control allows you to determine when the acquisition of data stops.

- Stop Button. If this is selected, you must press the <u>Stop</u> button to stop the acquisition of data.
- Acquisitions. If this is selected, acquisition is stopped when the specified number of acquisitions is reached. You can set this number using the <u># of Acquisitions</u> control.

Menu

7.2.2.3 # of Acquisitions



Sets the number of acquisitions. After the selected number of acquisitions is reached, the acquisition is stopped.

7.2.2.4 Action



After the **Run** key is pressed, the oscilloscope makes the specified number of acquisitions, all of which will be saved to the memory. The **Action** control allows you to specify what the instrument does after acquisition is stopped. One of two actions can be selected.

Веер

Beep produces an audio tone.

Save Wfms


Save Wfms opens the **Save Waveform As** dialog, which allows you to choose one of three file formats for the saved waveform. These are:

- Binary format, with .wfm extension
- Verbose format, with .txt extension
- Y values format, with .txty extension

7.2.3 Zoom

The **Zoom** menu allows you to select one from four zoom areas, to zoom and position any of selected zoom area horizontally or vertically.

For more details see <u>Zoom Menu</u>.

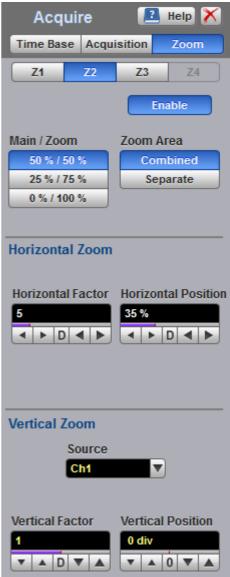

The Zoom Menu

7.3 Display Menu


🔜 Display

The **Display** menu controls most of the features that determine how the acquired data is displayed on the screen. You can configure any of the **PicoScope 9400A** for persistence or color-graded display style, select the graticule settings, define the waveform display area for single or multiple waveform displays, and change the color of most of the items that are displayed on the screen.

Display	🖪 Help X	Display	🖪 Help X
Style/Screen	View/Color	Style/Screen	View/Color
Persistence		View	
Simple	sistence	Toolbar	Permanent
🗾 Infin Pe	rsistence	Side Menu	
🚺 🖌 Var Gra	y Scaling	Left	Right
	ay Scaling	Both	None
	or Grading		
	olor Grading	Color	
Style		Item	Transparency
Dots	Vectors	Mask Template	78
Trace Mode	Persistence Time		
All Locked		Set Color	X Set On Top
Тгасе		Default Colors	
Ch1 🛡	C Reset All	Current	MI 🚺
Screen Format		Color Palette	
Auto	⊘ XY	Source	
Single YT	T XY + YT	Ch1 🔽	
Dual YT	XY + 2 YT	FOX 400%	
Quad YT		50% - 100%	Set Color
	Tandem	25% - 50%	Set Color
Waveform	Place on Graticule		
Ch1 🔻	1 2 3 4	12.5% - 25%	Set Color
X =	Y = Ch2	6.25% - 12.5%	Set Color
Ch1 V		0.25% - 12.5%	Sercolor
Graticule		0% - 6.25%	Set Color
Full	Axes		
Frame	Off	Vefa	ult Colors
Large Date	Add Label		d Label
Large Dots	Add Laber	Ad	d Label

The Display menu

7.3.1 Style

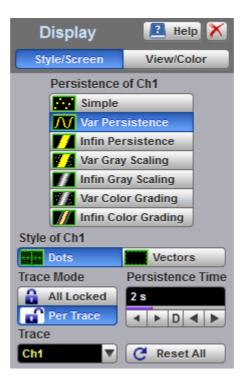

The Display Style menu

7.3.1.1 Persistence

Persi	istence
	Simple
N	Var Persistence
	Infin Persistence
V A	Var Gray Scaling
1	Infin Gray Scaling
11	Var Color Grading
	Infin Color Grading

The Persistence menu determines how the data is displayed. There are seven choices for drawing waveforms:

- Simple.
- Variable Persistence.
- Infinite Persistence.
- Variable Gray Scaling.
- Infinite Gray Scaling.
- Variable Color Grading.
- Infinite Color Grading.

Simple display

The **Simple** style displays waveforms without persistence: each new waveform record replaces the previously acquired record for a channel. Data points are plotted on the display as fast as possible. When the waveform record length is small, the throughput of the instrument is fast enough that you can use the **Vector** style without noticing much decrease in throughput.

Display Persistence

The **Persistence** function determines how long a data point is kept on the display before being erased. Normally, a waveform is displayed only for one trigger event. When the next trigger event occurs, the previous waveform is erased and the newly acquired waveform is drawn on the display. Persistence is a display memory function; therefore acquired waveforms are written only to display memory. Acquisition memory is where the current waveform data is stored. Therefore, only the last acquired waveform is held in acquisition memory. Display memory is what is seen on the display graticule.

Persistence style applies to all waveforms. Use display persistence to control how waveform data ages. By adding persistence, you can see a visual history of a waveform's acquisitions over time. Setting the persistence to minimum allows for easiest viewing of variations in the acquired waveforms. Setting the persistence to infinite allows for a complete view of everything measured in the waveform. For example, you can see the accumulated peak-to-peak noise of a waveform over time, which may appear significantly different than in only one acquisition. You can see timing jitter, the variance of the waveform from the trigger event, by accumulating acquisitions on the display. By adding persistence, viewing a waveform's extremes over time is much easier.

You can have averaging and persistence on at the same time because when averaging is on, the averaging is done before the data is sent to the display. Use the <u>Acquisition</u> menu to control averaging.

Waveform persistence is used only in the Display Area.

Use waveform persistence in the **Eye Diagram** and **Mask Test** menus. The **Eye Diagram** and **Mask Test** measurement algorithms are based on the statistical accumulation of the data.

The PicoScope 9400A Series uses two persistence settings:

- Variable Persistence
- Infinite Persistence

Variable Persistence

The **Variable Persistence** style accumulates the waveform-record points on screen and displays them for a specific time. The oldest waveform data continuously fades from the display as new waveform records are acquired.

By selecting the **Variable Persistence** display style, you can vary the persistence time from minimum of 100 ms to 10000 s. When the persistence is set to minimum, all data points are kept on the display for 100 ms. After 100 ms all the previous data points are erased from the display, and new data points are written to the display. The longer the persistence time, the longer each data point is left on the display before it is erased from the display. You can change the persistence time with the **Persistence Time** variable.

A minimum persistence setting is used when the input signal is changing and you need immediate feedback. You can use the minimum persistence mode to view the fastest display update rate. For example, if you are rapidly probing a source, you may find that more persistence is useful for observing long-term changes in a signal or observing signals with low repetition rates. More persistence is useful when you are observing long-term changes in the signal or low signal repetition rates.

If you are adjusting the amplitude or frequency of a signal source, you may find that more persistence (variable or infinite) is useful for observing long-term changes in a signal or observing signals with low repetition rates. If you are adjusting signal parameters, such as scale or delay, you will find that minimum persistence is useful due to the fast update rate.

When the waveform acquisition is stopped, the last acquired data points are left on the display.

If one of the following occurs when the instrument is in the variable persistence mode, the displayed waveform is redrawn and any accumulated waveforms are cleared:

- The Clear button is pressed
- An Autoscale button is executed
- A **Default Setup** button is executed
- The instrument is turned off

Infinite Persistence

When you select the **Infinite Persistence** display style, all the data points are kept on the display for an endless period of time, or until you change some control. Waveform data builds up as new data records are acquired. You can use infinite persistence for worst-case characterization of signal noise, jitter and drift, or to see a waveform's envelope, look for timing violations, and find infrequent events.

With infinite persistence, all sampled data points are left on the display until one of the following occurs:

- The Clear button is pressed
- An Autoscale button is executed
- A Default Setup button is executed
- The instrument is turned off

Gray Scaling

This mode is similar to persistence mode. The only difference is that the accumulated points are drawn in one color that is varied in saturation and luminosity (in other words, different shades of the same color). You can use the gray-scaling database with histograms, mask testing, statistical measurements, and eye diagrams. You can also use color grading to provide more visual information about the waveforms.

The **Gray Scaling** function uses a database the same size of the graticule area. Behind each pixel is a 16-bit counter. Each time a pixel is hit by data, the counter for that pixel is incremented. Each color used for the color grade mode represents a range of data counts. As the total count increases, the range of hits represented by each color also increases. The maximum count for each counter is 65 535.

There are five levels used in the gray-scaled mode. Each shade shows the number of hits per pixel over the graticule area, and represents a range of counts that depends on the total number of hits. As the total count increases, the range of hits represented by each shade also increases. The shades are fixed and cannot be changed.

You can use the gray-scaling persistence style to display waveforms that use the instrument measurement database. This database consists of all data samples displayed on the screen. The measurement database provides the data for the construction of histograms and performing mask tests.

If the gray-scaling persistence style is left active for a long period of time, the waveform will become saturated with the shades that represent the highest density of data counts.



Use gray-scaling in the **Eye Diagram** and **Mask Test** menus. The **Eye Diagram** and **Mask Test** measurement algorithms are based on the statistical accumulation of the data that the **Gray Scaling** mode uses internally.

Variable Gray Scaling

In the **Variable Gray Scaling** display style, the screen is not refreshed after every acquisition; instead, the screen is refreshed at a specified, selectable rate. You can vary the refresh time from minimum of 1 s to 200 s. You can change the refresh time with the **Refresh Time** variable.

If one of the following occurs when the instrument is in the **Variable Gray Scaling** display style, the displayed waveform is redrawn and any accumulated waveforms are cleared:

- The Clear button is pressed
- An Autoscale button is executed
- A Default Setup button is executed
- The instrument is turned off

Infinite Gray Scaling

When you select the **Infinite Gray Scaling** display style, all the data points are kept on the display. With the **Infinite Gray Scaling** display style, all sampled data points are left on the display until one of the following occurs:

- The Clear button is pressed
- An Autoscale button is executed
- A Default Setup button is executed
- The instrument is turned off

You can use infinite gray-scaling for worst-case characterization of signal noise, jitter and drift, or to see a waveform's envelope, look for timing violations, and find infrequent events.

Color Grading

This mode is similar to persistence mode. The only difference is that the accumulated points are color-graded (shaded with different colors) to indicate the density of the points, and a color-graded database is built. You can use the color-graded database with histograms, mask testing, statistical measurements, and eye diagrams. You can also use color grading to provide more visual information about the waveforms.

The **Color Grading** function uses a database the same size as the graticule area. Behind each pixel is a 16-bit counter. Each time a pixel is hit by data, the counter for that pixel is incremented. Each color used for the color grade mode represents a range of data counts. As the total count increases, the range of hits represented by each color also increases. The maximum count for each counter is 65 535.

There are five colors used in the color-graded display. Each color shows the number of hits per pixel over the graticule area, and represents a range of counts, which depends on the total number of hits. As the total count increases, the range of hits represented by each color also increases. The colors can be changed from the **Color Palette** menu.

You can use the color grade persistence mode to display waveforms that use the instrument measurement database. This database consists of all data samples displayed on the screen. The measurement database provides the data for the construction of histograms and performing mask tests.

If the color grade persistence style is left active for a long period of time, the waveform will become saturated with the color that represents the highest density of data counts. The **Color Palette** menu displays the color levels and the range of counts the color represents. Click the **View/Color** button to view the color levels.



Use gray-scaling in the **Eye Diagram** and **Mask Test** menus. The **Eye Diagram** and **Mask Test** measurement algorithms are based on the statistical accumulation of the data that the **Gray Scaling** mode uses internally.

The PicoScope 9400A Series has two color-grading settings:

- Variable Color Grading
- Infinite Color Grading

Variable Color Grading

In the **Variable Color Grading** display style the screen is not refreshed after every acquisition; instead, the screen is refreshed at a specified, selectable rate. You can vary the refresh time from minimum of 1 s to 200 s using the **Refresh Time** variable.

If one of the following occurs when the instrument is in the Variable Color Grading display style, the displayed waveform is redrawn and any accumulated waveforms are cleared:

- The Clear button is pressed
- An Autoscale button is executed
- A Default Setup button is executed
- The instrument is turned off

Infinite Color Grading

When you select the **Infinite Color Grading** display style, all the data points are kept on the display. With the **Infinite Color Grading** display style, all sampled data points are left on the display until one of the following occurs:

- The Clear button is pressed
- An **Autoscale** button is executed
- A Default Setup button is executed
- The instrument is turned off

You can use infinite color grading for worst-case characterization of signal noise, jitter and drift, and to see a waveform's envelope, look for timing violations, and find infrequent events.

7.3.1.2 Style




The Style menu determines how waveform dots are displayed. There are two choices: Dots or Vectors.

The Dots style displays waveforms with dots.

The **Vector** style draws a straight line through the data points on the display. This is also known as **Connect Waveform Dots**. The **Vector** style gives an analog look to a digitized waveform and makes it possible to see steep edges on waveforms such as square waves. If you use the **Vector** style the approximate unaliased oscilloscope bandwidth is:

Bandwidth = Effective Sample Rate / 10

In this configuration, a waveform can alias if its highest frequency component exceeds 1/10 the sample rate. On waveforms where there are only a few dots representing the acquired data points, such as when the record length is small, you may find it easier to have a sense of what the waveform looks like.

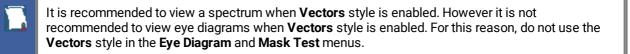

7.3.1.3 Persistence Time / Refresh Mode



Persistence Time

The Persistence Time variable works when the Variable Persistence display is selected in the Style menu.

Persistence time is the amount of time for which a waveform sample appears on the display. In the **Variable Persistence** display style, a waveform sample point is displayed from 100 ms to 10000 s. The default setting is 2 s.

This mode most closely simulates the phosphorescent persistence of an analog scope. Use variable persistence to view infrequent events and rapidly changing waveforms and watch the evolution of the waveform.

Refresh Time

The **Refresh Time** variable works with both the **Variable Gray Scaling** and the **Variable Color Grading** display styles. It controls how often the screen is updated with new data. The range is 1 to 200 s.

7.3.1.4 Trace Mode



The **PicoScope 9400A Series** gives you the choice of constraining all input channels to the same display style, or setting these for each trace individually.

- All Locked Set the same display style for all traces.
- Per Trace Set up traces individually.

7.3.1.5 Trace



Selects a trace to set **Display Style**. Is active only when **Per Trace** is selected from the **Trace Mode**.


7.3.1.6 Reset All



Click Reset All to return all traces to their default persistence settings.

7.3.2 Screen

The Screen menu lets you define the display area in different ways.

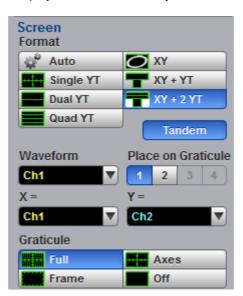

The Screen Menu

7.3.2.1 Format

Screen Format	Tandem
💣 Auto	📿 XY
Single YT	T XY + YT
Dual YT	T XY + 2 YT
Quad YT	

The Format menu determines how the instrument draws the waveforms on the display. The following formats are used in the **PicoScope 9400A Series**.

Auto

Auto automatically places, adds or deletes graticules as you select more or fewer waveforms to display.

Single YT

The **Single YT** format is the normal time (on the horizontal axis) versus voltage (on the vertical axis) format. The entire display area is one screen and any displayed waveforms are superimposed on top of each other.

Dual YT

The **Dual YT** format is the normal time (on the horizontal axis) versus voltage (on the vertical axis) format, but with the display area divided into two equal screens.

Quad YT

The **Quad YT** format is the normal time (on the horizontal axis) versus voltage (on the vertical axis) format, with the display area divided into four equal screens.

XY

The **XY** format displays voltages of two waveforms against each other, and draws the **Source 1** versus **Source 2** display of the two selected sources. **Source 1's** amplitude is plotted on the horizontal X axis and the **Source 2's** amplitude is plotted on the vertical Y axis.

XY+YT

The **XY** + **YT** format displays both **XY** and **YT** pictures. The **YT** format appears on the upper part of the screen, and the **XY** format on the lower part of the screen. All waveforms in the **YT** format area are superimposed on top of each other.

XY + 2 YT

The XY + 2 YT format displays both YT and XY pictures. The YT format appears on the upper part of the screen, and the XY format on the lower part of the screen. The YT format display area is divided into two equal screens.

You can use the **XY** formats to compare frequency and phase relationships between two signals. The **XY** format can also be used with transducers to display strain versus displacement, flow versus pressure, volts versus current, or voltage versus frequency.

7.3.2.2 Waveform



With the **Waveform** function you can set the waveform that will be placed on the graticule by the **Place on Graticule** menu.

The waveform source can be selected from:

- Channels
- Functions
- Waveform memories
- Spectra

Any waveform selected with the **Waveform** function is placed on the graticule chosen with the **Place on Graticule** menu.

7.3.2.3 Place on Graticule



With the **Place on Graticule** menu you can place a waveform, selected by the **Waveform** function, on any possible graticule.

You can place any waveform selected as source to any graticule. For example, you can place the **M1** waveform memory on the fourth graticule, or the **F1** function on the first graticule.

7.3.2.4 X= and Y=



X=

The X= control selects the waveform source related to the horizontal X axis. You can set the X= source to:

- Channels
- Functions
- Waveform memories
- Spectra

Y=

The Y= selects the waveform source related to the vertical Y axis. You can set the Y= source to:

- Channels
- Functions
- Waveform memories
- Spectra

7.3.2.5 Graticule




The **PicoScope 9400A Series** has a 10 by 8 display graticule grid, which you can turn on or off. The **Graticule** menu selection is:

- Full. The Full background is a complete graticule with ten horizontal major divisions and eight vertical major divisions. Vertically one minor division is one-quarter of a major division; and horizontally, one minor division is one-fifth of a major division. There is also a cross-hair style measurement scale.
- Axes. Displays the outside border with an external measurement scale and an additional cross-hair style measurement scale.
- Frame. Displays the outside border with a measurement scale. Major and <u>minor</u> divisions are based on the vertical and horizontal measurement settings.
- Off. Turns the background graticule off. The displayed waveforms and waveform's information is not turned off.

7.3.3 View

The View menu turns on or off the different display areas of the GUI.

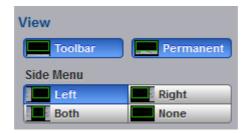



7.3.3.1 Toolbar

Toolbar

Turns on or off the display the Toolbar.

You can return the Toolbar to the GUI by clicking View/Toolbar in the Main Menu.

7.3.3.2 Permanent Controls

Permanent

Permanent turns on or off the display of permanent controls.

You can return the permanent controls to the GUI by clicking View/Permanent Controls in the Main Menu.

Side Menu	
Left	Right
Both	None None

Side Menu turns on or off the display of Left Side Menu, Right Side Menu or both Side Menus.

You can return any of the Side Menus to the GUI by clicking View/Side Menu in the Main Menu.

7.3.4 Color

The **Color** menu allows you to define the display colors and transparency of many display elements. For example, you can change the color of an input waveform channel for better visibility.

0
V A D V A
X Set On Top

The Color Menu

7.3.4.1 Item




Item allows you to choose from the list of display elements. You can modify the color of the channels, functions, display memories, spectra, histogram, graticule, or screen. The color of the selected display element can be changed with the **Set Color** button.

7.3.4.2 Set Color



Clicking Set Color recalls the Windows Color dialog:

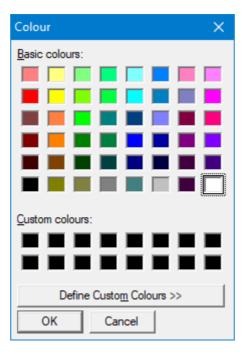

You can change the color of every item selected from the Item drop-down list box.

7.3.4.3 Set On Top

X Set On Top

Click the **Set On Top** if you want to superimpose the display element selected from the **Item** list over all another display elements.

7.3.4.4 Transparency



You can change the transparency of several display elements selected from the Item menu. They are:

- Histogram
- Mask

The Transparency control increases or decreases the transparency effect.

7.3.4.5 Current

🛃 Current

Clicking Current returns the selected display element to the factory default color.

7.3.4.6 All

🛃 All

Clicking All returns all display elements to the factory default colors.

ps9400Aug-1

Menu

7.3.5 Color Palette

Color Palette Source	
Ch1	
50% - 100%	Set Color
25% - 50%	Set Color
12.5% - 25%	Set Color
6.25% - 12.5%	Set Color
0% - 6.25%	Set Color
🛃 Def	ault Colors

The Color Palette menu has a list of five colors used in the color grade display.

The Color Palette Menu

7.3.5.1 Source



You may set the source for the color palette to any of the following:

- Channels
- Functions
- Waveform memories
- Spectra

7.3.5.2 Color Palette

The **Color Palette** menu defines the five colors used in the color grade display. The algorithm used in the **PicoScope 9400A Series** depends on the maximum number of hits for any pixel in the display. An example of the assignment of colors is shown in the table below. Maximum in the table represents the maximum number of hits in any bin, which for this algorithm must be at least 16.

A sample assignment of colors to hit density:

Hit density	Default color	Color
50% to 100%	White	50% - 100%
25% to 50%	Yellow	25% - 50%
12.5% to 25%	Rose	12.5% - 25%
6.25% to 12.5%	Light Blue	6.25% - 12.5%
0% to 6.25%	Green	0% - 6.25%

et Color I	to recall the Windows C	Color dialog:
	Colour	
	Basic colours:	
	Custom colours:	
		Hu <u>e</u> : D <u>R</u> ed:

Click Set Color Set Color to recall the Windows Color dialog:

Define Custom Colours >>

Cancel

7.3.5.3 Default Colors

OK

Default Colors

Clicking Default Colors returns all five colors used in the color-graded display to the factory default.

4

255

Green: 9

Blue: 9

Sat: 240

Lum: 124

Add to Custom Colours

Colour/Solid

7.4 Eye Diagram Menu

🔀 Eye Diagran

The Eye Diagram menu allows you to perform eye diagram measurements.

Eye Diagra	m 🔳 Help 🗡	Eve Diagra	ım 🖪 Help X
Parameter	Definition		
Meas	ure	Parameter	Definition
0	Off XX NRZ	Define Paramete	rs
Source	RZ E PAM4		
Ch1		Eye Boundary 1	Eye Boundary 2
		40 %	60 %
X NRZ Parameters			
XX Area	Eye Width %		
XX Bit Rate	X Fall Time	Threshold	s
Bit Time	XX Frequency	XX 10%-	50%-90%
Crossing Tim	→ Jitter P-p	XX 20%-	50%-80%
Cycle Area	→ Jitter RMS	💄 User	Defined
DutyCycDist %		Unner Threehold	Lawse Theoremaid
<u> </u>	Rise Time	Upper Threshold	Lower Threshold
Eye Width	ļ	80 %	20 %
Y NRZ Parameters	;		
XX AC RMS	XX Minimum		
X Avg Power	XX Neg Oversho		
Avg Power di	XIX Noise P-p One	Statistics	
🔀 Crossing %	XX Noise P-p Zer	Statistics	
Crossing Lev	XIX Noise RMS Or	Statistics	
Extinc Ratio d	XXX Noise RMS Ze		
Extinc Ratio %	XX One Level	Mode	Waveforms
Extinc Ratio	XX Peak-Peak	Normal	8
Eye Amplitud	XX Pos Oversho	Window	
XX Eye Height		Exponential	
XX Eye Height dB		Wfms in	Cycle
XX Maximum	S/N Ratio dB	64 Wfms	
XX Mean	ZZ Zero Level		
XX Middle			
View Defin	ed Parameters		
Clear All N	leasurements		

The Eye Diagram menu

1

The measurement algorithms for **Eye Parameters** will only work when an eye diagram, and not a pulse, is present on the screen.

want to perform eye measurements, it is necessary that you first produce an eye diagram by triggering the instrument with a synchronous clock signal. Measurements made on a pulse waveform while in the **Eye Diagram** menu will fail.

Once the **Eye Diagram** measure menu has been selected, the measurement database is enabled. This database consists of all data samples displayed on the screen. The measurement database provides the data for the construction of histograms, generation of mask tests, and a visual representation of the eye via the color-graded display mode.



Once you are in the **Eye Diagram** menu, perform an **Autoscale**. This will ensure that an optimum eye diagram is displayed on the graticule. An optimum eye diagram consists of a full display of the eye in addition to portions of the waveform preceding and following the eye.

Data is acquired, histograms are built, and absolute maximum and minimum voltage/power levels as well as relative maximum (one) and minimum (zero) voltage/power levels are determined. The crossing points of the eye are located, the threshold levels are calculated, and then, depending on the specific measurement(s) activated, the requested parametric measurements are calculated.

Eye measurements are made in a fashion similar to many of the automatic measurements built into the instruments such as **Rise** and **Fall Time**, **Peak-Peak**, and **Frequency**. Up to ten parametric measurements can be active whenever valid data exists. These measurements can include any of the eye measurements under the **X NRZ**, **Y NRZ**, **X RZ**, **Y RZ**, **X PAM4**, **Y PAM4** or **Optic PAM4** parameter menus

Eye measurements can be performed on a persistence or color-graded database.

7.4.1 Parameter

Eye Diagra	m 🖪 Help 🔀		
Parameter	Definition		
Meas	ure		
U	Off XX NRZ		
Source	RZ E PAM4		
Ch1			
X NRZ Parameters	;		
XX Area	Eye Width %		
XX Bit Rate	X Fall Time		
Bit Time	Frequency		
XX Crossing Tim			
Cycle Area	→ Jitter RMS		
DutyCycDist 9			
DutyCycDist	Rise Time		
Eye Width	J		
Y NRZ Parameters			
XX AC RMS	XX Minimum		
X Avg Power	XX Neg Oversho		
Avg Power dl			
Crossing %	Noise P-p Zer		
Crossing Lev	XTX Noise RMS Or		
Extinc Ratio d			
Extinc Ratio %			
Extinc Ratio	XX Peak-Peak		
XX Eye Amplitud			
XX Eye Height			
	XI S/N Ratio		
XX Maximum	XI S/N Ratio dB		
	XX Zero Level		
Middle			
\delta View Defin	S View Defined Parameters		
🏷 Clear All Measurements			

The Eye Diagram Parameter menu

7.4.1.1 Source



The **Source** control selects the source you are measuring. The measurement read-outs of parameters will have the same color as the selected source.

7.4.1.2 Measure

Measure	
Off 🕑	XX NRZ
Z RZ	PAM4

Off

Clicking the **Off** radio button stops running the test. The Eye Window, which has a green color, disappears.



The **Eye Boundaries** provide the time boundaries within which signal parameters for eye diagrams are measured.

NRZ

Clicking the NRZ radio button in the Measure menu starts the instrument calculating the One Level, Zero Level, Left Crossing and Right Crossing for NRZ types of signal. After the calculations are finished the Eye Window, which has a green color, will appear.



NRZ (Non-Return to Zero)

A type of signal coding that ensures, in any one bit period, that the signal is turned on for the entire duration of a logical one pulse and turned off (or nearly off) for the entire duration of a logical zero pulse.

RZ

Clicking the **RZ** radio button in the **Measure** menu starts the instrument calculating the **One Level**, **Zero Level**, **Left Crossing** and **Right Crossing** for RZ types of signal. After the calculations are finished the Eye Window, which has a green color, will appear.



RZ (Return to Zero)

A type of signal coding that ensures, in any one bit period, that the signal is turned on for the first half of a logical one pulse and turned off (or nearly off) for the second half of the logical one pulse. As with NRZ coding, the signal is turned off (or nearly off) for the entire duration of a logical zero pulse.

PAM4

Clicking the **PAM4** radio button in the **Measure** menu starts automatic clock recovery, threshold detection and prepares the waveform for analysis with minimal preprocessing applied. It also starts the instrument calculating levels (3, 2, 1, 0), right crossing and left crossing. After the calculations are finished, the **Eye Window** (which has a green color) will appear.



PAM4 (Pulse Amplitude Modulation 4)

This is a multilevel signal modulation format. Each signal level can represent 2 bits of logic information. PAM4 is a branch of the pulse amplitude modulation technology, which is a mainstream signal transmission technology following non-return-to-zero (NRZ).

Measurements Results

The instrument displays the results of eye diagram measurements in the **Measurement Area** of the GUI. These values are displayed on tabs.

Eye Diagram Scales						Auto Max Mid Min
	Current	Cycles/Wfms	Minimum	Maximum	Mean	Std Deviation
Bit Rate (Ch1)	1.249 GBit/s	7 / 476	1.248 GBit/s	1.249 GBit/s	1.248 GBit/s	506.9 kBit/s
Jitter RMS (Ch1)	10.41 ps	7 / 476	10.14 ps	10.54 ps	10.34 ps	130.7 fs
Crossing % (Ch1)	50.17 %	7 / 476	49.35 %	50.23 %	50.03 %	310.8 m%
Eye Amplitude (Ch1)	600 mV	7 / 476	599.9 mV	600 mV	600 mV	34.39 μV

The tabs only appear as the selected measurements are performed. For example, if you perform a **Bit Rate** measurement on channel 1, only this tab will appear on the display.

The measurement database and the graticule display will clear when you perform the following events:

- Switch between operating modes in the Display menu
- Change vertical and horizontal scale and position
- Click on the Clear Display button

The **Eye Diagram Measure tab** displays a maximum of ten measurements at one time. The measurements are listed in the order in which they were performed.

The Measure tab displays the following measurement statistics for each measurement:

- Current The current value measured in the measurement database.
- Total Meas The total number of acquired measurement cycles.
- Minimum The minimum current value measured in the measurement database.
- **Maximum** The maximum current value measured in the measurement database.

The measurement statistics reported will vary depending on the mode of operation selected.

7.4.1.3 X NRZ Eye Parameters

X NRZ Parameters		
XX Area	Eye Width %	
XX Bit Rate	🔀 Fall Time	
Bit Time	Frequency	
Crossing Tim	🔆 Jitter P-p	
Cycle Area	🔆 Jitter RMS	
🔀 DutyCycDist %	XX Period	
🔀 DutyCycDist	🔀 Rise Time	
Eye Width		

The list of X NRZ Eye Parameters includes fifteen eye parameters.



You can perform up to ten simultaneous measurements on one displayed waveform.

The measurement algorithms for **X NRZ Eye Parameters** will only work when an NRZ eye diagram, and not an RZ or PAM4 eye diagram or a pulse is present on the screen. Eye measurements are based on statistical data that is acquired and stored in the measurement database. The algorithms are dependent upon histogram means calculated from the measurement database. Therefore, if you want to perform eye measurements, it is necessary that you first produce an eye diagram by triggering the instrument with a synchronous clock signal. Measurements made on an RZ or PAM4 eye diagram or a pulse waveform while in the NRZ Eye Parameters menu will fail.



The **NRZ Area** is a measure of the area under the curve for the NRZ waveform within the full display window. The area measured above ground is positive; the area measured below ground is negative.

The **NRZ Area** is determined as follows:

$$NRZ_Area = \frac{\Delta t}{N} \sum_{n=1}^{N} VertPos(s_n)$$

over all N samples s1...N in the measured region (full display window) of duration Δt .

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Bit Rate NRZ Bit Rate

NRZ Bit Rate is the inverse of bit time (1/bit time). The bit time is a measure of the horizontal opening of an eye diagram at the crossing points of the eye.

To compute bit time (bit period), the crossing points of the eye are first located. Then a vertically thin measurement window is placed horizontally through the crossing points. The data within this measurement window is analyzed. This measurement window is created to be extremely small so that the width of the crossing points is not affected by the rise time and fall time of the waveform.

Once the bit period has been determined, the inverse value is calculated to determine the bit rate.

Also see NRZ Bit Time.

Bit Time NRZ Bit Time

NRZ Bit Time is a measure of the horizontal opening of an eye diagram at the crossing points of the eye.

NRZ Bit Time can be determined as:

where *Tcross2* and *Tcross1* are the means of the histogram of the two consecutive eye crossings (**Right Crossing** and **Left Crossing**).

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Crossing Tim NRZ Crossing Time

NRZ Crossing Time is a measure of the horizontal position of the leftmost eye crossing.

Data is sampled on a horizontal slice at the eye crossing, and the mean of the horizontal histogram returns the crossing time.

ps9400Aug-1

NRZ Crossing Time can be determined as:

NRZ Crossing Time = Tcross1 + Tdelay

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.



NRZ Cycle Area is a measure of the area under the curve for the first NRZ bit time within the measurement region. Area measured above ground is positive; area measured below ground is negative.

The NRZ Cycle Area is determined as follows:

$$NRZ _CycleArea = \frac{\Delta t}{N} \sum_{n=1}^{N} VertPos(s_n)$$

over all *N* samples $S_{1...N}$ within the measured region (eye window) of duration Δt between Left Crossings and Right Crossings. Neither slope nor direction is configurable.

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.



NRZ Duty Cycle Distortion is a measure of the time between the falling edge and the rising edge of the eye pattern at the middle threshold (50% level).

The instrument constructs a histogram that records the time at which the rising edge and falling edge cross the middle threshold. If the falling edge and the rising edge intersect precisely at the middle thresholds, there is no duty cycle distortion. **NRZ Duty Cycle Distortion** is measured by histogram analysis at the crossing points and middle threshold.

The algorithm for calculating **NRZ Duty Cycle Distortion** is dependent upon the edge that crosses the threshold first. Therefore, the falling edge may occur prior to the rising edge. Ideally, both the rising and falling edges intersect precisely at the 50% threshold level. That results in no duty cycle distortion.

NRZ Duty Cycle Distortion can be displayed in two formats: time or percent. In the time format (**DutCycDis s**), the actual time between the median falling edge and the median rising edge at the middle thresholds is determined. In the percentage format (**DutCycDis %**), the time difference is determined as a percentage of the full bit time.

The NRZ Duty Cycle Distortion is determined as follows:

$$NRZ _ DutyCycleDistortion = Trise_{50\,percent} - Tfall_{50\,percent}$$
$$NRZ _ DutyCycleDistortion = \frac{Trise_{50\,percent} - Tfall_{50\,percent}}{BitPeriod}$$

Eye Width

Eve Width %

NRZ Eye Width and NRZ Eye Width %

NRZ Eye Width is a measure of the horizontal opening of an eye diagram. Ideally, the eye width would be measured between the crossing points of the eye. A horizontal time histogram is constructed to determine the mean location at the crossing points, as well as statistical distribution of the crossing points. As would be expected, noise and jitter will cause a large variance in the location of the crossing points and result in the closure of the eye.

ps9400Aug-1

The eye width is determined using the time difference between the 3 σ (standard deviation) points of the crossing point histograms (**Eye Width** measurement).

NRZ _ EyeWidth =
$$(T_{gaus2} - 3\sigma_{gaus2}) - (T_{gaus1} - 3\sigma_{gaus1})$$

You can choose to view eye width as a ratio of the time difference between the 3 σ points of the crossing point histograms relative to the time between adjacent crossing points (bit period). The eye width can then be expressed in percent of the bit period (**Eye Width** % measurement).

$$NRZ _ EyeWidth _\% = \frac{(T_{cross2} - 3\sigma_{cross2}) - (T_{cross1} - 3\sigma_{cross1})}{T_{cross2} - T_{cross1}}$$

Fall Time NRZ Fall Time

NRZ Fall Time is a measure of the mean transition time of the data on the downward slope of an eye diagram. The data crosses through the following three thresholds: the upper, middle, and lower thresholds, as well as through the eye crossing points.

A histogram is first constructed to find the mean location of the crossing points relative to the one level and zero level. Histograms are then constructed at each of the three threshold levels (for example, the 10%, 50% and 90% points on the transition). The instrument analyzes each histogram to determine the histogram mean at which the data crosses the separate threshold levels.

Once the scanning of the waveform is complete, and the instrument has identified the mean location for each threshold crossed, then fall time can be computed.

The instrument has two standard threshold levels for which fall time may be measured. The default setting is between the 20% and 80% points on the transition, and the second setting is between the 10% and 90% points on the transition. The 20% to 80% transition is recommended for devices with significant pulse distortion. Also, user defined threshold levels can be selected. You can define the threshold settings that you want by going to the <u>Define Parameters/Thresholds</u> menu.

If the fall time relative to the time per division is a small value, the data acquired at the threshold levels on the falling edge will not yield accurate measurement results. (The falling edge will appear very steep on the display screen).

If the falling edge of your eye diagram is steep, increase the timebase (horizontal scale) on the display so that the falling edge covers at least half a graticule division. The instrument will be able to discern the data at the threshold levels, producing more accurate results.

Frequency NRZ Frequency

NRZ Frequency is defined as half of the inverse of the time interval between two consecutive eye crossing points (i.e. the reciprocal of the **Period**). It would be the frequency of a digital signal of a 0-1-0-1... stream.

The NRZ Frequency is determined as follows:

$$NRZ _ Frequency = \frac{1}{2(T_{ares2} - T_{ares1})}$$

where T_{cross1} and T_{cross2} are the means of the histograms of the two crossings.

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Jitter P-p

NRZ Jitter peak-to peak and NRZ Jitter RMS

NRZ Jitter is a measurement of the time variance of the crossing points. Horizontal time histograms are constructed to determine the location of the crossing points. An iterative process is used to narrow the histogram window to precisely determine the crossing points and the variance. The measurement window is kept extremely small so that the width of the crossing points is not influenced by the rise time and fall time of the waveform. The amount of jitter on the waveform is directly related to the width of the crossing points.

NRZ Jitter can be displayed in one of two formats: peak-to-peak (NRZ Jitter peak to peak measurement) or RMS (NRZ Jitter RMS measurement). Both values are based on the standard deviation of the crossing point position.

NRZ Jitter peak-to peak is equal to the full width of the histogram at the eye crossing point:

NRZ Jitter peak to peak = 6σ (crossing)

NRZ Jitter RMS is defined as one standard deviation from the histogram mean at the eye crossing point:

NRZ Jitter RMS = 1σ (crossing)

Period NRZ Period

NRZ Period is twice the time interval between two consecutive eye-crossing points. It would be the period of a digital signal of a 0-1-0-1... stream.

NRZ Period can be defined as:

```
NRZ Period = 2(Tcross2 - Tcross1) = 2(NRZ_BitTime)
```

where T_{cross1} and T_{cross2} are the means of the histograms of the two crossings of the eye diagram (**Right Crossing** and **Left Crossing**).

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Also see NRZ Bit Time.

Rise Time NRZ Rise Time

NRZ Rise Time is a measure of the mean transition time of the data on the upward slope of an eye diagram. The data crosses the lower, middle, and upper thresholds, as well as the eye crossing points.

A histogram is first constructed to find the mean location of the crossing points relative to the one level and zero level. Histograms are then constructed at each of the three threshold levels (for example, the 10%, 50%, and 90% points on the transition). The instrument analyzes each histogram to determine the histogram mean at which the data crosses the separate threshold levels.

Once the scanning of the waveform is complete, and the instrument has identified the mean location for each threshold crossed, then rise time can be computed.

NRZ Rise Time = (Time at the Upper Threshold Crossing) – (Time at the Lower Threshold Crossing)

The instrument has two standard threshold levels for which fall time may be measured. The default setting is from the 10% to the 90% point on the transition, and the second setting is from the 20% to the 80% point on the transition. The 20% to 80% transition is recommended for devices with significant pulse distortion. Also, user defined threshold levels can be selected. You can define the threshold settings that you want by going to the <u>Define Parameters/Thresholds</u> menus.

If the rise time relative to the time per division is a small value, the data acquired at the threshold levels on the falling edge will not yield accurate measurement results. (The rising edge will appear very steep on the display screen).

If the rising edge of your eye diagram is steep, increase the timebase (horizontal scale) on the display so that the rising edge covers at least half a graticule division. The instrument will be able to discern the data at the threshold levels, producing more accurate results.

7.4.1.4 Y NRZ Eye Parameters

Y NRZ Parameters		
🔀 AC RMS	XX Minimum	
XI Avg Power	XX Neg Oversho	
Avg Power dl	XIX Noise P-p One	
🔀 Crossing %	🔀 Noise P-p Zer	
🔀 Crossing Lev	🗙 Noise RMS Or	
Extinc Ratio d	🙀 Noise RMS Ze	
Extinc Ratio %	XX One Level	
Extinc Ratio	XX Peak-Peak	
XX Eye Amplitud	XX Pos Oversho	
🔀 Eye High	🔀 RMS	
XX Eye High dB	S/N Ratio	
🔀 Maximum	S/N Ratio dB	
🔀 Mean	Zero Level	
XX Middle		

The list of **Y NRZ Eye Parameters** includes twenty-seven eye parameters.



You can perform up to ten simultaneous measurements on one displayed waveform.

The measurement algorithms for **Y NRZ Eye Parameters** will only work when an NRZ eye diagram, and not an RZ eye diagram, a PAM4 eye diagram or a pulse, is present on the screen. Eye measurements are based on statistical data that is acquired and stored in the measurement database. The algorithms are dependent upon histogram means calculated from the measurement database. Therefore, if you want to perform eye measurements, it is necessary that you first produce an eye diagram by triggering the instrument with a synchronous clock signal. Measurements made on an RZ eye diagram, PAM4 eye diagram or a pulse waveform while in the **X NRZ Eye Parameters** menu will fail.

XX AC RMS

NRZ AC RMS

NRZ AC RMS is a measure of the root mean square amplitude, minus the DC component, of the selected waveform.

The NRZ AC RMS is defined as follows:

$$NRZ _ AC _ RMS = \sqrt{\frac{\sum_{i=1}^{N} \left\langle [VertPos(s_n) - mean[VertPos(s)] \right\rangle^2}{N}}$$

where s is the set of N samples s1...N within the measured region.

When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

🔀 Crossing %

Crossing Lev NRZ Crossing percentage and NRZ Crossing Level

NRZ Crossing percentage is a measure of the location of the eye crossing points relative to the separation between the **One Level** (V_{one}) and the **Zero Level** (V_{zero}).

Typically, it is desirable to have the crossing points located midway between V_{one} and V_{zero} . In this case the crossing percentage would be 50% according to the following formula:

NRZ Crossing percentage = $100 (V_{cross} - V_{zero}) / (V_{one} - V_{zero})$

NRZ Crossing Level is the mean signal level at the eye crossing point:

NRZ Crossing Level = mean[VertPos(s)]

where s is the set of samples in a vertical slice at the eye crossing point.

 V_{cross} is the more prevalent vertical location or amplitude of the crossing points. A horizontal histogram over the entire display is used to determine the time location of the crossing points. Narrow vertical histograms are then used to determine the vertical location of V_{cross} . The mean derived from the horizontal and vertical histogram results in V_{cross} .

Eye Amplitud NRZ Eye Amplitude

NRZ Eye Amplitude is the difference between the logic 1 level and the logic 0 level histogram mean values of an eye diagram.

A histogram is constructed using the sampled portion of the eye diagram within the eye window. This histogram is composed of data points from the upper and lower halves of the eye diagram. The instrument analyzes the histogram and determines the mean values of the logic 1 and logic 0 levels.

The eye amplitude is determined as follows:

NRZ Eye Amplitude = One Level - Zero Level

Eye High Eye High dB NRZ Eye Height and NRZ Eye Height dB

NRZ Eye Height is a measurement of the vertical opening of an eye diagram. An ideal eye opening would be measured from the one level to the zero level. However, noise on the eye will cause the eye to close. The eye height measurement determines eye closure due to noise.

Similarly to the extinction ratio measurements, a vertical histogram is calculated on the data. *Vone* and the high-level distribution are determined, and similar patterns are determined for the low levels. The *Vone* and *Vzero* levels are the relative means of the histograms. The noise is measured through the histograms as three standard deviations (σ) from both the one level and zero level into the eye opening.

The eye height can be defined in one of the two following formats:

$$NRZ _ EyeHeight = (V_{one} - 3\sigma_{one}) - (V_{zero} + 3\sigma_{zero})$$

XX Maximum NRZ Maximum

NRZ Maximum is a measure of the maximum vertical value of the waveform that is sampled within the eye window.

The NRZ maximum eye amplitude is determined as follows:

NRZ Maximum = max[VertPos(s)]

where s is the set of samples within the eye window.

When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

🗙 🗙 Mean

NRZ Mean is a measure of the arithmetic mean of the selected waveform within the eye window.

The NRZ mean is determined as follows:

NRZ Mean

$$NRZ_Mean = mean[VertPos(s)] = \frac{1}{N} \sum_{i=1}^{N} VertPos(s_i)$$

over all samples *s1...N* within the eye window.

When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Middle NRZ Middle

NRZ Middle is a measure of the middle level between the maximum and minimum vertical values of the eye window.

The NRZ middle is determined as follows:

where Max and Min are the maximum and minimum measurements. See also NRZ Max and NRZ Min.

When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Minimum NRZ Minimum

NRZ Minimum is a measure of the minimum vertical value of the selected waveform of the eye window.

The NRZ minimum eye amplitude is determined as follows:

NRZ Minimum = max[VertPos(s)]

where *s* is the set of samples within the eye window.

When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

NRZ Neg Oversho NRZ Negative Overshoot

NRZ Negative Overshoot is a measure of the ratio of the minimum value of the measured signal to its amplitude, expressed as a percentage. The waveform is scanned for the minimum value within the eye window, while the amplitude is measured in the **Eye Aperture**.

The NRZ Negative Overshoot is determined as follows:

$$NRZ _ NegativeOvershoot = \frac{Vzero - V\min}{Vone - Vzero} \times 100$$

where Vmin is the signal minimum, and Vone and Vzero are the logical 1 and 0 levels.

When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

🗙 Noise P-p On

Noise P-p Zei NRZ Noise peak to peak One and NRZ Noise peak to peak Zero

NRZ Noise peak to peak One is a measurement of the maximum range of the amplitude variance sampled within a fixed-width vertical slice located at the center of the **Eye Aperture** at the **One Level**.

NRZ Noise peak to peak Zero is a measurement of the maximum range of the amplitude variance sampled within a fixed-width vertical slice located at the center of the **Eye Aperture** at the **Zero Level**.

NRZ Noise peak to peak One is determined as follows:

NRZ Noise peak to peak One = One peak to peak

NRZ Noise peak to peak Zero is determined as follows:

NRZ Noise peak to peak Zero = Zero peak to peak

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Noise RMS O

Noise RMS Ze NRZ Noise RMS One and NRZ Noise RMS Zero

NRZ Noise RMS is a measurement of the unit standard deviation of the amplitude variance sampled within a fixed-width vertical slice located at the center of the **Eye Aperture** at the **High** (logical 1) or **Low** (logical 0) levels.

NRZ RMS = High σ

NRZ RMS = Low σ

The **Eye Aperture** is adjustable and defaults to 20% of the NRZ bit time. This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Cone Level NRZ One Level

NRZ One Level is a measure of the mean value of the logical 1 of an eye diagram.

A histogram is constructed using the sampled portion of the eye diagram within the eye window. This histogram is composed of data points from only the upper half of the eye diagram. The instrument analyzes the histogram and determines histogram mean.

The **One Level** is determined as follows:

All data at the zero level is disregarded.

The standard deviation that is reported on the instrument display as part of the measurement results is derived from the statistical analysis of the one level measurement result. It is not the same as the standard deviation derived from the histogram analysis of the signal.

RZ Peak-Peak NRZ Peak-Peak

NRZ Peak-Peak is a measure of the difference between the maximum and minimum vertical values of the selected waveform within the eye window.

The NRZ Peak-Peak is determined as follows:

NRZ Peak-Peak = Max - Min

where Max and Min are the maximum and minimum measurements. See also NRZ Max and NRZ Min.

When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

RRZ Pos Overshor NRZ Positive Overshoot

NRZ Positive Overshoot is a measure of the ratio of the maximum value of the measured signal to its amplitude, expressed as a percentage. The waveform is scanned for the maximum value within the eye window, while the amplitude is measured in the **Eye Aperture**.

The NRZ Positive Overshoot is determined as follows:

$$NRZ _ PositiveOvershoot = \frac{V \max - Vone}{Vone - Vzero} \times 100$$

where Vmax is the signal maximum, and Vone and Vzero are the logical 1 and 0 levels.

When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

XX RMS

NRZ RMS is a measure of the true root mean square amplitude of the selected waveform within the eye window.

The NRZ RMS is determined as follows:

$$NRZ _ RMS = \sqrt{\frac{\sum_{n=1}^{N} [VertPos(s_n)]^2}{N}}$$

over all *N* samples within the measured region; i.e., one standard deviation of the amplitude, i.e., RMS amplitude.

When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

ps9400Aug-1

SIN Ratio dB NRZ Signal to Noise and NRZ Signal to Noise dB

NRZ Signal to Noise is a ratio of the signal difference between one level and zero level relative to the noise present at both levels. Signal to Noise is similar in construction to a Q-factor measurement. However, noise levels contributed by the instrument cannot be removed, and therefore a slightly pessimistic Q-factor measurement may result.

To define the signal, histograms are constructed using the sampled portions of the eye diagram within the eye window boundaries. One histogram is composed of data points from only the upper half of the eye diagram (one level). The second histogram is composed of data points from the lower half of the eye (zero level). The instrument analyzes the histograms and determines the histogram means and standard deviations. The noise is defined as 1σ (standard deviation) of the histogram at the one and zero levels.

The RZ Signal to Noise is determined as follows:

$$NRZ _Signal - to - Noise _Ratio = \frac{Vone - Vzero}{\sigma_{one} + \sigma_{zero}}$$

This measurement does not remove the effect of noise generated by the instrument. If the noise on the signal being tested is of a magnitude similar to that of the instrument or smaller, the signal-to-noise measurement error will be significant.

Zero Level NRZ Zero Level

NRZ Zero Level is a measure of the mean value of the logical 0 of an eye diagram.

A histogram is constructed using the sampled portion of the eye diagram within the eye window. This histogram is composed of data points from only the lower half of the eye diagram. The instrument analyzes the histogram and determines histogram mean.

The RZ Zero Level is determined as follows:

All data at the one level is disregarded.

The standard deviation that is reported on the instrument display as part of the measurement results is derived from the statistical analysis of the zero level measurement result. It is not the same as the standard deviation derived from the histogram analysis of the signal.

7.4.1.5 X RZ Eye Parameters

X RZ Parameters	
Area	A Jitter RMS Fa
A Bit Rate	🕰 Jitter RMS Ris
🕰 Bit Time	∠ Veg Crossing
🕰 Cycle Area	🔼 Pos Crossing
🚺 Eye Width	🕰 Pos Duty Cycl
🚺 Eye Width %	粒 Pulse Symme
🕰 Fall Time	VISE Width
▲ Jitter P-p Fall	▲ Rise Time
My Jitter P-p Rise	

The list of X RZ Eye Parameters includes seventeen eye parameters.

You can perform up to ten simultaneous measurements on one displayed waveform.

The measurement algorithms for **X RZ Eye Parameters** will only work when an RZ eye diagram, and not an NRZ or PAM4 eye diagram or a pulse, is present on the screen. Eye measurements are based on statistical data that is acquired and stored in the measurement database. The algorithms are dependent upon histogram means calculated from the measurement database. Therefore, if you want to perform eye measurements, you must first produce an eye diagram by triggering the instrument with a synchronous clock signal. Measurements made on an NRZ or PAM4 eye diagram or a pulse waveform while in the **X RZ Eye Parameters** menu will fail.

Area RZ Area

RZ Area is a measure of the area under the curve for the RZ waveform within the full display window. Area measured above ground is positive; area measured below ground is negative.

The RZ Area is determined as follows:

$$RZ_Area = \frac{\Delta t}{N} \sum_{n=1}^{N} VertPos(s_n)$$

over all N samples s1...N within the measured region (full display window) of duration Δt .

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Bit Rate RZ Bit Rate

The **RZ Bit Rate** is a measure of the inverse of the bit time (1/bit time or 1/period) of the RZ eye rising edges. The bit time is a measure of the time between the 50% rising edges of two consecutive eyes.

To compute bit time (period), the 50% heights of consecutive eyes are first determined. Then a vertically thin measurement window is placed horizontally through the 50% levels. The data within this measurement window is analyzed. The measurement window is created to be extremely small so that the measurement is not affected by the fall or rise time of the waveforms.

Once the bit period has been determined, the inverse value is calculated to determine the RZ bit rate:

$$RZ_BitRate = \frac{1}{RZ_BitTime} = \frac{1}{2(T_{RightCross} - T_{LeftCross})}$$

where *TRightCross* and *TLeftCross* are the mean of the histogram of the two consecutive crossings on the rising slope at the mid-reference level.

See also RZ Bit Time.

Bit Time RZ Bit Time

The **RZ Bit Time** is a measure of the time interval between two consecutive rising edges. The crossing times are computed as the mean of the histogram of the data slice at the mid-reference level.

The RZ Bit Time is determined as follows:

$$RZ _BitTime = T_{RightCross} - T_{LeftCross}$$

where *TRightCross* and *TLeftCross* are the mean of the histogram of the two consecutive crossings on the rising slope at the mid-reference level.

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

RZ Bit Time also is called RZ Bit Period.

Cycle Area RZ Cycle Area

RZ Cycle Area is a measure of the area under the curve for the RZ waveform within the eye window. Area measured above ground is positive; area measured below ground is negative.

The RZ Cycle Area is determined as follows:

$$RZ _ CycleArea = \frac{\Delta t}{N} \sum_{n=1}^{N} VertPos(s_n)$$

over all N samples s1...N in the measured region (eye window) of duration Δt between two consecutive edges of the rising slope at the **Mid** reference level.

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Eye Width

RZ Eye Width is a measure of the horizontal opening of an RZ eye diagram. The amount of jitter or noise that may appear on the waveform is measured to determine the actual horizontal opening of the eye.

To compute eye width, the 50% height of the eye is first determined. Then a vertically thin measurement window is placed horizontally through the 50% levels, and the data within this measurement window is analyzed. This measurement window is created to be extremely small so that the measurement is not affected by the rise time and fall time of the waveform.

The RZ eye width is determined using the time difference between the 3σ (standard deviation) points of the 50% level histograms.

$$RZ _EyeWidth = (T_{Fall 50\%} - 3\sigma) - (T_{Bes0\%} - 3\sigma)$$

The RZ eye width can also be expressed as the ratio of the 30 time difference between edges to the bit time (bit period) of the eye pulses:

$$RZ _EyeWidth _\% = \frac{(T_{Fall 50\%} - 3\sigma) - (T_{Bx = 50\%} + 3\sigma)}{BitTime}$$

A Fall Time R7 Fall

RZ Fall Time

ps9400Aug-1

Menu

RZ Fall Time is a measure of the mean transition time of the data on the downward slope of an RZ eye diagram. The data crosses through the following three thresholds: upper, middle, and lower.

A histogram is first constructed to find the mean locations of the eye one level and zero level. Histograms are then constructed at each of the three threshold levels (for example, the 20%, 50%, and 80% points on the transition). The instrument analyzes each histogram to determine the histogram mean at which the data crosses the separate threshold levels. Once the scanning of the waveform is complete, and the instrument has identified the mean location for each threshold crossed, then fall time can be computed.

RZ Fall Time = (Time at Lower Threshold Crossing) – (Time at Upper Threshold Crossing)

The default setting for the threshold levels is the 20% to 80% points on the transition. These levels give more consistent results for eyes with distortion at the top or bottom. You can define the threshold settings that you want in the <u>Define Parameters</u> menu.

If the fall time relative to the time/division is a small value, the data acquired at the threshold levels on the falling edge will not yield accurate measurement results. (The falling edge will appear very steep on the display screen).

If the falling edge of your eye diagram is steep, increase the timebase (horizontal scale) on the display so that the falling edge covers at least half a graticule division. The instrument will be able to discern the data at the threshold levels, producing more accurate results.

EX Jitter P-p Fall A Jitter RMS Fa RZ Jitter peak to peak, Fall and RZ Jitter RMS, Fall

RZ Jitter peak to peak, Fall and **RZ Jitter RMS, Fall** are the measures of signal instability relative to its ideal position in time.

To compute jitter peak-to-peak, the standard deviation is measured at a 50% level of the first measurable falling edge. The measurement window is kept extremely small so that the width at the 50% level is not influenced by the slope of the waveform. The histograms are then analyzed to determine the amount of RMS jitter, which is defined as 1σ (standard deviation) from the histogram mean.

The RZ peak-to-peak jitter is the full width of the histogram at the eye 50% level:

RZ Jitter peak to peak, Fall = 6σ (crossing)

The RZ RMS jitter is defined as one standard deviation from the histogram mean at the eye crossing point:

RZ Jitter RMS, Fall = 1σ (crossing)

Itter P-p Rise MI Jitter RMS Rise RZ Jitter peak to peak, Rise and RZ Jitter RMS, Rise

RZ Jitter peak to peak, Rise and **RZ Jitter RMS, Rise** are the measures of signal instability relative to its ideal position in time.

To compute jitter peak-to-peak, the standard deviation is measured at a 50% level of the left measurable rising edge. The measurement window is kept extremely small so that the width at the 50% level is not influenced by the slope of the waveform. The histograms are then analyzed to determine the amount of RMS jitter, which is defined as 1σ (standard deviation) from the histogram mean.

The RZ peak-to-peak jitter is the full width of the histogram at the eye 50% level:

RZ Jitter peak to peak, Rise = 6σ (crossing)

The RZ RMS jitter is defined as one standard deviation from the histogram mean at the eye crossing point:

RZ Jitter RMS, Rise = 1σ (crossing)

Weg Crossing RZ Negative Crossing

RZ Negative Crossing is a measure of the time of a negative crossing, defined as the mean of the histogram of the data sampled at the 50% reference level.

The **RZ Negative Crossing** is determined as follows:

RZ Negative Crossing = TCrossNeg

where *TCrossNeg* is the mean of the histogram of a negative crossing.

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Pos Crossing RZ Positive Crossing

RZ Positive Crossing is a measure of the time of a left positive crossing, defined as the mean of the histogram of the data sampled at the 50% reference level.

The RZ Positive Crossing is determined as follows:

RZ Positive Crossing = TCrossPos

where *TCrossPos* is the mean of the histogram of a positive crossing.

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Pos Duty Cyc RZ Positive Duty Cycle

RZ Positive Duty Cycle is a measure of the ratio of the RZ positive pulse width to the RZ bit time.

The RZ Positive Duty Cycle is determined as follows:

$$RZ_DutyCycle = \frac{T_{Fall 50\%} - T1_{Rise 50\%}}{T2_{Rise 50\%} - T1_{Rise 50\%}} = \frac{RZ_PositivePulseWidth}{RZ_BitTime}$$

Where *T1Rise50%*, *T1Fall50%* and *T2Rise50%* are the mean of the histogram of the first three consecutive crossings at the 50% reference level.

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Pulse Symme RZ Pulse Symmetry

RZ Pulse Symmetry measures to what extent the RZ pulse is symmetrical around the peak at the 50% reference level. The pulse peak is the center of the interval, sized to **Eye Aperture**, which yields the maximum mean vertical value.

The RZ Pulse Symmetry (%) is determined as follows:

$$RZ _PulseSymmetry, \% = 100 \frac{T_{Peak} - T_{Rise50\%}}{T_{FailS0\%} - T_{Rise50\%}}$$

where *TRise50%* and *TFall50%* are the time crossings of the RZ pulse of the 50% reference level, and *TPeak* is the time coordinate of the pulse peak.

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Pulse Width RZ Pulse Width

RZ Pulse Width is the time measured between histogram means of the 50% rising and 50% falling edges of an RZ eye diagram.

The pulse width is determined as follows:

RZ Pulse Width = TFall50% - TRise50%

where *TFall50%* and *TRise50%* are the time crossings of the RZ pulse at the 50% reference level.

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

A Rise Time RZ Rise Time

RZ Rise Time is a measure of the mean transition time of the data on the upward slope of an RZ eye diagram. The data crosses through the lower, middle, and upper thresholds.

A histogram is first constructed to find the mean locations of the eye one level and zero level. Histograms are then constructed at each of the three threshold levels (for example, the 20%, 50%, and 80% points on the transition). The instrument analyzes each histogram to determine the histogram mean at which the data crosses the separate threshold levels. Once the scanning of the waveform is complete, and the instrument has identified the mean location for each threshold crossed, then fall time can be computed:

RZ Rise Time = (Time at the Upper Threshold Crossing) – (Time at the Lower Threshold Crossing)

The default setting for the threshold levels is between the 20% and 80% points on the transition. These levels give more consistent results for eyes with distortion at the top or bottom. You can define the threshold settings that you want in the <u>Define Parameters</u> menu.

If the rise time relative to the time per division is a small value, the data acquired at the threshold levels on the falling edge will not yield accurate measurement results. (The rising edge will appear very steep on the display screen).

If the rising edge of your eye diagram is steep, increase the timebase (horizontal scale) on the display so that the rising edge covers at least half a graticule division. The instrument will be able to discern the data at the threshold levels, producing more accurate results.

7.4.1.6 Y RZ Eye Parameters

Y RZ Parameters			
AC RMS	🙀 Maximum		
Avg Power	// Mean		
Avg Power de	// Middle		
🕂 Contrast Ratio	📐 Minimum		
🕂 Contrast Ratio	🕂 Noise P-p One		
🕂 Contrast Ratio	AV Noise P-p Zer		
Extinction Rat	찬 Noise RMS Or		
Extinct Ratio o	A Noise RMS Z€		
Extinct Ratio 9	🙀 One Level		
Z Eye Amplitud	V Peak-Peak		
🙀 Eye High	// RMS		
🙀 Eye High dB	AT S/N		
Z Eye Opening	Zero Level		

The list of Y RZ Eye Parameters includes twenty-six eye parameters.

You can perform up to ten simultaneous measurements on one displayed waveform.

The measurement algorithms for **Y RZ Eye Parameters** will only work when an RZ eye diagram, and not an NRZ or PAM4 eye diagram or a pulse, is present on the screen. Eye measurements are based on statistical data that is acquired and stored in the measurement database. The algorithms depend upon histogram means calculated from the measurement database. Therefore, if you want to perform eye measurements, it is necessary that you first produce an eye diagram by triggering the instrument with a synchronous clock signal. Measurements made on NRZ eye diagrams or PAM4 eye diagrams or a pulse waveform while in the **X RZ Eye Parameters** menu will fail.

AC RMS RZ AC RMS

RZ AC RMS is a measure of the root mean square amplitude, minus the DC component, of the waveform within the eye window.

The RZ AC RMS is determined as follows:

$$RZ_AC_RMS = \sqrt{\frac{\sum_{i=1}^{N} \langle [VertPos(s_n) - mean[VertPos(s)] \rangle^2}{N}}$$

where *S* is the set of *N* samples *s*1...*N* within the measured region.

This measurement requires the use of a waveform database. When this measurement is turned on, it will automatically set the measurement system to use a waveform database if available.

Contrast Rativ Contrast Rativ Contrast Rativ Contrast Rativ **RZ Contrast Ratio** is a measure of the ratio of the one level at the centre of the eye diagram to the one level (after removal of the zero level contribution) found midway between eye diagram peaks. This measurement indicates how well the logic 1 levels return to the logic zero level. Like the RZ extinction ratio measurement, contrast ratio relies on determining and removing the dark level components from the measurement calculation. In order to perform an accurate contrast ratio measurement, you should first perform an extinction ratio calibration in order to minimize the dark level contribution.

RZ Contrast Ratio also is called RZ Suppression Ratio.

RZ Contrast Ratio measurement is made in a section of the eye referred to as the **Eye Boundaries**, and at the centre of the zero level between pulses. The default value for **RZ Eye Boundaries** is the central 5% peak to peak of the **Bit Time**, or 47.5% (**Eye Boundary 1**) and 52.5% (**Eye Boundary 2**).

Histograms are constructed using the sampled portions of the eye diagram within the eye window boundaries, and within equivalent eye window boundaries positioned between eye diagram peaks. The one level histogram mean is composed of data points taken from the upper half of the eye window located within the eye diagram, the zero level histogram is composed of data points taken from the lower half of the eye window located within the eye diagram, and the remaining histogram is composed of data points taken from the lower half of the eye window located within the eye diagram, and the remaining histogram is composed of data points taken from the lower half of the eye window located between peaks. The instrument analyzes the histogram data, removes the zero level data from the between peaks histogram, then determines the ratio of the one level mean and the one level mean between peaks.

The accuracy of the contrast ratio measurement can be affected by offsets, including the dark level, generated within the instrument electronics, typically following the photodiode. When these offsets occur, they add to the incoming signal. This will change the values of the one and zero levels. When the contrast ratio measurement is computed, the result may appear much smaller or larger than the true value, depending on the value of the offset. To minimize contrast ratio measurement errors due to offsets, an extinction ratio calibration is recommended. This procedure allows the instrument to identify any internal signals present and remove them during the contrast ratio calculations. After the calibration is performed, a more accurate contrast ratio measurement can be executed.

With a valid extinction ratio calibration, the contrast ratio measurement can be computed and displayed in one of the three following formats:

$$NRZ _ContrastRatio = \frac{OneLevel - DarkLevel}{OneLevel(between _ peaks) - DarkLevel}$$
$$NRZ _ContrastRatio(dB) = 101 \circ g_{10} [\frac{OneLevel - DarkLevel}{OneLevel(between _ peaks) - DarkLevel}]$$
$$NRZ _ContrastRatio(\%) = \frac{OneLevel(between _ peaks) - DarkLevel}{OneLevel - DarkLevel} \times 100$$

where: *One Level* = One level histogram mean at eye window, *One Level (between peaks)* = Histogram mean calculated from subtraction of zero level histogram from the between peaks histogram (see figure below).

Eye Amplitud RZ Eye Amplitude

RZ Eye Amplitude is a measure of the difference between the logic 1 level and the logic 0 level histogram mean values of an RZ eye diagram. It differs from eye height in that it does not account for the noise on the signal.

RZ Eye Amplitude measurement is made in a section of the eye referred to as the **Eye Boundaries**, and at the centre of the zero level between pulses. The default value for **RZ Eye Boundaries** is the central 5% peak to peak of the **Bit Time**, or 47.5% (**Eye Boundary 1**) and 52.5% (**Eye Boundary 2**).

A histogram is constructed using the sampled portion of the eye diagram within the eye window. This histogram is composed of data points from the upper and lower halves of the eye diagram. The instrument analyzes the histogram and determines the mean values of the logic 1 and logic 0 levels.

The eye amplitude is determined as follows:

RZ Eye Amplitude = One Level - Zero Level



RZ Eye Height is a measure of the vertical opening of an RZ eye diagram. An ideal eye opening would be measured from the one level to the zero level, but noise on the eye causes the eye to close. The eye height measurement determines eye closure due to noise.

RZ Eye High measurement is made in a section of the eye referred to as the **Eye Boundaries**, and at the centre of the zero level between pulses. The default value for **RZ Eye Boundaries** is the central 5% peak to peak of the **Bit Time**, or 47.5% (**Eye Boundary 1**) and 52.5% (**Eye Boundary 2**).

In order to make an accurate RZ eye height measurement, histograms are constructed to characterize both the one and zero levels and their noise levels within the eye window boundaries. The one and zero levels are the relative means of the histograms. The noise is measured through the histograms as three standard deviations (σ) from both the one level and zero level into the eye opening.

The eye height is determined as follows:

$$RZ _ EyeHeight = (OneLevel - 3\sigma_{one}) - (ZeroLevel + 3\sigma_{zero})$$
$$RZ _ EyeHeight(dB) = -101 \circ g_{10} \frac{(ZeroLevel + 3\sigma_{zero})}{(OneLevel - 3\sigma_{one})}$$

Eye Opening RZ Eye Opening Factor

RZ Eye Opening Factor is similar to eye height. It measures the actual eye opening relative to an ideal noise-free eye. While the eye height measurement uses 3σ for the noise contribution, the eye opening measurement uses 1σ .

The **RZ Eye Opening Factor** measurement is made in a section of the eye referred to as the **Eye Boundaries**, and at the centre of the zero level between pulses. The default value for **RZ Eye Boundaries** is the central 5% peak to peak of the **Bit Time**, or 47.5% (**Eye Boundary 1**) and 52.5% (**Eye Boundary 2**).

The eye opening factor is determined as follows:

$$RZ _ EyeOpeningFactor = -\frac{(OneLevel - \sigma_{one}) - (ZeroLevel + \sigma_{zero})}{OneLevel - ZeroLevel}$$

🔽 Maximum 🛛 🥫 🖓

RZ Maximum

RZ Maximum is a measure of the maximum vertical value of the waveform that is sampled within the eye window.

The RZ maximum eye amplitude is determined as follows:

RZ Maximum = max[VertPos(s)]

where *s* is the set of samples within the eye window.

When this measurement is turned on, it automatically sets the measurement system to use a waveform database if available.

A Mean RZ Mean

RZ Mean is a measure of the arithmetic mean of the waveform that is sampled within the eye window.

The RZ Mean is determined as follows:

$$RZ_Mean = mean[VertPos(s)] = \frac{1}{N} \sum_{i=1}^{N} VertPos(s_i)$$

over all samples *si...N* within the eye window.

When this measurement is turned on, it automatically sets the measurement system to use a waveform database if available.

Middle RZ Middle

RZ Middle is a measure of the middle level between the **Max** and **Min** vertical values of the waveform that is sampled within the eye window.

The RZ Middle is determined as follows:

where Max and Min are the maximum and minimum measurements.

When this measurement is turned on, it automatically sets the measurement system to use a waveform database if available.

Minimum RZ Minimum

RZ Minimum is a measure of the minimum vertical value of the waveform that is sampled within the eye window.

The RZ minimum eye amplitude is determined as follows:

where s is the set of samples in the measured region. Minimum has no settable references.

When this measurement is turned on, it automatically sets the measurement system to use a waveform database if available.

Noise P-p On

Noise P-p Zer RZ Noise peak to peak, One and RZ Noise peak to peak, Zero

RZ Noise peak to peak, One is a measure of the maximum range of the data distribution sampled within a fixed **RZ Eye Boundaries** slice located at the center of the **Eye Aperture** at the **One Level**.

RZ Noise peak to peak, Zero is a measure of the maximum range of the data distribution sampled within a fixed **RZ Eye Boundaries** slice located at the center of the **Eye Aperture** at the **Zero Level**.

The RZ Noise peak to peak is determined as follows:

$$RZ$$
 _ Noise, $P - p = \max[VertPos(s)] - \min[VertPos(s)]$

where s is the set of samples within a fixed width vertical slice located at the center of the eye aperture at either the **High** or the **Low** level (settable: **RZ Noise peak to peak, One**, and **RZ Noise peak to peak, Zero**).

The **RZ Noise peak to peak, One** and **RZ Noise peak to peak, Zero** measurements are made in a section of the eye referred to as the **Eye Boundaries**, and at the centre of the zero level between pulses. The default value for **RZ Eye Boundaries** is the central 5% peak to peak of the **Bit Time**, or 47.5% (**Eye Boundary 1**) and 52.5% (**Eye Boundary 2**).

This measurement requires the use of a waveform database. When this measurement is turned on, it automatically sets the measurement system to use a waveform database if available.

Noise RMS Or

NRZ Noise RMS is a measurement of the single standard deviation of the data distribution sampled within a fixed-width vertical slice located at the center of the **Eye Aperture** at the **High** (logical 1) or **Low** (logical 0) levels.

The RZ Noise RMS is determined as follows:

RZ RMS = High σ RZ RMS = Low σ

The **Eye Aperture** is adjustable and defaults to 5% of the RZ pulse width. The **High** or **Low** selection for noise control in the **Measurement Setup** dialog instructs the measurement to be performed on the logical 1 or 0 levels.

This measurement requires the use of a waveform database. When this measurement is turned on, it automatically sets the measurement system to use a waveform database if available.

One Level RZ One Level

RZ One Level is a measure of the mean value found at the peak of the eye diagram logical 1.

The **RZ One Level** measurement is made in a section of the eye referred to as the **Eye Boundaries**, and at the centre of the zero level between pulses. The default value for **RZ Eye Boundaries** is the central 5% peak to peak of the **Bit Time**, or 47.5% (**Eye Boundary 1**) and 52.5% (**Eye Boundary 2**).

A histogram is constructed using the sampled portion of the eye diagram within the eye window. This histogram is composed of data points from only the upper half of the eye diagram. The instrument analyzes the histogram and determines the histogram mean.

The RZ One Level is determined as follows:

RZ One Level = Histogram Mean

Peak-Peak

RZ Peak-Peak

RZ Peak-Peak is a measure of the difference between the maximum and minimum vertical values of the waveform.

The **RZ Peak-Peak** is determined as follows:

RZ Peak-Peak = Max – Min

where Max and Min are the maximum and minimum measurements.

🕰 RMS

RMS RZ RMS

RZ RMS is a measure of the true root mean square of the waveform that is sampled within the eye window.

The RZ RMS is determined as follows:

$$RZ _ RMS = \sqrt{\frac{\sum_{n=1}^{N} [VertPos(s_n)]^2}{N}}$$

which is the RMS amplitude over all N samples *s1...N* within the measured region (eye window); or one standard deviation of the amplitude.

When this measurement is turned on, it automatically sets the measurement system to use a waveform database if available.

RZ Signal to Noise

RZ Signal to Noise is a measure of the ratio of the signal difference between one level and zero level relative to the noise present at both levels. Signal-to-noise is similar in construction to a Q-factor measurement. However, noise levels contributed by the instrument cannot be removed, and therefore a slightly pessimistic **Q-factor** measurement may result.

RZ Signal to Noise ratio is computed as:

$$RZ_Signal-to-Noise_Ratio=\frac{OneLevel-ZeroLevel}{\sigma_{me}+\sigma_{zero}}$$

The **RZ One Level** and **Zero Level** measurements are made in a section of the eye referred to as the **Eye Boundaries**, and at the centre of the zero level between pulses. The default value for **RZ Eye Boundaries** is the central 5% peak to peak of the **Bit Time**, or 47.5% (**Eye Boundary 1**) and 52.5% (**Eye Boundary 2**).

To define the signal, histograms are constructed using the sampled portions of the eye diagram within the eye window boundaries. One histogram is composed of data points from only the upper half of the eye diagram (one level), and the second histogram is composed of data points from the lower half of the eye (zero level). The instrument analyzes the histograms and determines the histogram means and standard deviations. The noise is defined as 1σ (standard deviation) from the histogram means for the one and zero levels.

Zero Level RZ Zero Level

RZ Zero Level is a measure of the mean value of the logical 0 at a time position found directly below the peak of the eye diagram logical 1.

The **RZ Zero Level** measurement is made in a section of the eye referred to as the **Eye Boundaries**, and at the centre of the zero level between pulses. The default value for **RZ Eye Boundaries** is the central 5% peak to peak of the **Bit Time**, or 47.5% (**Eye Boundary 1**) and 52.5% (**Eye Boundary 2**).

A histogram is constructed using the sampled portion of the eye diagram within the eye window. This histogram is composed of data points from only the upper half of the eye diagram. The instrument analyzes the histogram and determines the histogram mean.

The **RZ Zero Level** is determined as follows:

RZ Zero Level = Histogram Mean

X PAM4 Eye Parameters 7.4.1.7

X PAM4 Parameters
Upper Eye Width
Middle Eye Width
Lower Eye Width
Upper Eye Skew
Middle Eye Skew
XXX Lower Eye Skew
XX Lvl 3 Min ISI
Lvl 2 Min ISI
Lvl 1 Min ISI
Lvl 0 Min ISI
Lvl 3 Skew
Lvl 2 Skew
Lvl 1 Skew
Lvi 0 Skew
Eq. Bit Rate
Symbol Rate
Unit Interval

The list of X PAM4 Eye Parameters includes 17 eye parameters.

You can perform up to ten simultaneous measurements on one displayed waveform.

The measurement algorithms for X PAM4 Eye Parameters will only work when a PAM4 eye diagram, and not an NRZ or RZ eye diagram or a pulse, is present on the screen. Eye measurements are based on statistical data that is acquired and stored in the measurement database. The algorithms are dependent upon histogram means calculated from the measurement database. Therefore, if you want to perform eye measurements, you must first produce an eye diagram by triggering the instrument with a synchronous clock signal. Measurements made on an RZ or NRZ eye diagram or a pulse waveform while in the X PAM4 Eye Parameters menu will fail.

Upper Eye Width PAM4 upper eye width

PAM4 Upper Eye Width is a measure of the horizontal opening of the upper eye in a PAM4 eye diagram. The amount of jitter or noise that may appear on the waveform is measured to determine the actual horizontal opening of the upper eye.

To compute upper eye width, the midpoint of the eye (T_{mid}) is determined first. T_{mid} is the midpoint of the maximum horizontal eye opening of the middle eye.

A width measurement is taken at the mid point of the upper eye height, at the time determined by T_{mid}. Thus, the width measurement is not taken at the widest point of the upper eye.

 $PAM4_{EveWidth.upper} = (T_{Tmid1} - 3\sigma_{Tmid1.upper}) - (T_{Tmid2} - 3\sigma_{Tmid2.upper})$

Middle Eye Width PAM4 Middle Eye Width

PAM4 Middle Eye Width is a measure of the horizontal opening of the middle eye in a PAM4 eye diagram. The amount of jitter or noise that may appear on the waveform is measured to determine the actual horizontal opening of the middle eye.

To compute middle eye width, the midpoint of the eye (T_{mid}) is determined first. T_{mid} is the midpoint of the maximum horizontal eye opening of the middle eye.

A width measurement is taken at the mid point of the middle eye height, at the time determined by T_{mid} . Thus, the width measurement is taken at the widest point of the middle eye.

$$PAM4_{EyeWidth,middle} = (T_{Tmid1} - 3\sigma_{Tmid1,middle}) - (T_{Tmid2} - 3\sigma_{Tmid2,middle})$$

Lower Eye Width PAM4 Lower Eve Width

PAM4 Lower Eye Width is a measure of the horizontal opening of the upper eye in a PAM4 eye diagram. The amount of jitter or noise that may appear on the waveform is measured to determine the actual horizontal opening of the lower eye.

To compute lower eye width, the midpoint of the eye (T_{mid}) is determined first. T_{mid} is the midpoint of the maximum horizontal eye opening of the middle eye.

A width measurement is taken at the mid point of the lower eye height, at the time determined by T_{mid} . Thus, the width measurement is not taken at the widest point of the lower eye.

The width is determined by the 3 σ (standard deviation) points of the crossing point histograms.

 $PAM4_{EyeWidth,Lower} = (T_{Tmid1} - 3\sigma_{Tmid1,lower}) - (T_{Tmid2} - 3\sigma_{Tmid2,lower})$

Middle Eye Skew PAM4 Upper Eye Skew

PAM4 Upper Eye Skew is a measure of the center time of the upper eye relative to the average center time of all three eyes.

To compute upper eye width, the center of all three eyes is determined. The center is calculated as the time at the measured eye height (see PAM4 Eye23 Height). The mean center time is calculated. The skew is calculated as

$$Skew_{upper} = T_{Center,upper} - T_{center,mean}$$

Middle Eye Skew PAM4 Middle Eye Skew

PAM4 Middle Eye Skew is a measure of the center time of the middle eye relative to the average center time of all three eyes.

To compute middle eye width, the center of all three eyes is determined. The center is calculated as the time at the measured eye height (see PAM4 Eye12 Height). The mean center time is calculated. The skew is calculated as

 $Skew_{middle} = T_{Center,middle} - T_{center,mean}$

DAM4 Lower Eye Skew PAM4 Lower Eye Skew

PAM4 Lower Eye Skew is a measure of the center time of the lower eye relative to the average center time of all three eye openings.

To compute lower eye width, the center of all three eyes is determined. The center time is calculated as the time at the measured eye height (see PAM4 Eye01 Height). The mean center time is calculated. The skew is calculated as

 $Skew_{lower} = T_{Center,lower} - T_{center,mean}$

Menu

XX	Lvl 3 Min ISI
88	Lvl 2 Min ISI
88	Lvl 1 Min ISI
**	LvI 0 Min ISI

PAM4 LvI 3 Min ISI, PAM4 LvI 2 Min ISI, PAM4 LvI 1 Min ISI and PAM4

Lvl 0 Min ISI

PAM4 LvI 3 Min ISI is a measure of the time at which the Inter-Symbol Interference (ISI) of the 3 level is lowest. It is calculated as the time at which **Level3 RMS** is smallest.

PAM4 Lvl 2 Min ISI is a measure of the time at which the ISI of the 2 level is lowest. It is calculated as the time at which Level2 RMS is smallest.

PAM4 Lvl 1 Min ISI is a measure of the time at which the ISI of the 1 level is lowest. It is calculated as the time at which Level1 RMS is smallest.

PAM4 LvI 0 Min ISI is a measure of the time at which the ISI of the 0 level is lowest. It is calculated as the time at which Level0 RMS is smallest.

 $T_{minISI,x} = T_{minRMS,x}$

Where $T_{minRMS,x}$ is the time of the minimum amplitude variation of the level x within the window enclosed by T_{cross1} and T_{cross2}

	Lvl 3 Skew	
88	Lvi 2 Skew	
	Lvl 1 Skew	
X X	LvI 0 Skew	

PAM4 LvI 3 Skew, PAM4 LvI 2 Skew, PAM4 LvI 1 Skew and PAM4 LvI

0 Skew

PAM4 LvI 3 Skew is a measure of the minimum ISI time of the 3 level relative to the mean center time of all three eye openings.

PAM4 Lvl 2 Skew is a measure of the minimum ISI time of the 2 level relative to the mean center time of all three eye openings.

PAM4 Lvl 1 Skew is a measure of the minimum ISI time of the 1 level relative to the mean center time of all three eye openings.

PAM4 LvI 0 Skew is a measure of the minimum ISI time of the 0 level relative to the mean center time of all three eye openings.

The minimum ISI time is calculated as above. The center time is calculated as the time at the measured eye height.

Level $skew_x = T_{minISI,x} - T_{center,mean}$

Where x is the level being measured (3, 2, 1, 0) and $T_{minISIx}$ is the LvI Min ISI for level x.

Eq. Bit Rate

PAM4 Eq. Bit Rate

PAM4 Equivalent Bit Rate is a measure of the speed of data transmission, including that each sample period transmits two bits of data. The unit is bits per second (b/s).

Once the symbol rate has been determined, the value is doubled to determine the equivalent bit rate.

$PAM4 eq.bit rate = 2 \times PAM4 symbol rate$

Symbol Rate

PAM4 Symbol Rate

PAM4 Symbol Rate is the inverse of unit interval (1/unit interval). For more information, see PAM4 unit interval. The unit of symbol rate is baud per second (Bd/s).

Once the unit interval has been determined, the inverse value is calculated to determine the Symbol Rate.

$$PAM4$$
 symbol rate = $\frac{1}{PAM4 unit interval}$

HI Unit Interval PAM4 Unit Interval

PAM4 Unit Interval is a measure of the horizontal opening of an eye diagram at the transition points of the eye.

To compute unit interval, the transition points of the eye are first located. The crossing time is calculated as the average time of all transitions. Then a vertically thin measurement window is placed horizontally through all transition points. This window is created to be extremely small so that the width of the crossing points is not affected by the rise time and fall time of the waveform.

PAM4 Unit Interval can be determined as:

PAM4 unit interval = $T_{cross2} - T_{cross1}$

Where T_{cross1} and T_{cross2} are the means of the histogram of the two consecutive eye crossings (Right Crossing and Left Crossing).

7.4.1.8 Y PAM4 Eye Parameters

Y PAM4 Parameters			
Eye23 Height	22 Level0 RMS		
Eye12 Height	Level3 Pk-Pk		
Eye01 Height	Level2 Pk-Pk		
Eye23 Level	Evel1 Pk-Pk		
Eye12 Level	22 Level0 Pk-Pk		
Eye01 Level	Linearity		
素行 Level3 Mean	Lvl Deviation		
素売 Level2 Mean	<mark>≩‡‡</mark> ES2 Lvl		
	ES1 Lvl		
▲ Level0 Mean	Lvl Thickns		
Level3 RMS	Peak-Peak		
Evel2 RMS	- Overshoot		
Level1 RMS	<u>\</u> Undershoot		

The list of **Y PAM4 Eye Parameters** includes twenty-six eye parameters.



You can perform up to ten simultaneous measurements on one displayed waveform.

The measurement algorithms for **Y PAM4 Eye Parameters** will only work when a PAM4 eye diagram, and not an RZ or NRZ eye diagram or a pulse, is present on the screen. Eye measurements are based on statistical data that is acquired and stored in the measurement database. The algorithms are dependent upon histogram means calculated from the measurement database. Therefore, if you want to perform eye measurements, it is necessary that you first produce an eye diagram by triggering the instrument with a synchronous clock signal. Measurements made on NRZ or RZ eye diagrams or a pulse waveform while in the **Y PAM4 Eye Parameters** menu will fail.



ve01 Height PAM4 Eye23 Height, PAM4 Eye12 Height and PAM4 Eye01 Height

PAM4 Eye Height is a measure of the vertical opening of the eyes of a PAM4 eye diagram. An ideal eye opening would be measured from one level to the level immediately above: 0 level to 1 level, 1 level to 2 level or 2 level to 3 level. However, noise will cause the eyes to close. The **eye height** measurement determines eye closure due to noise.

To calculate the **Eye height**, a vertical histogram is calculated on the data. The 3 level and 3 level distribution are determined, with similar patterns for 2, 1 and 0 levels. The levels (3, 2, 1 and 0) are the relative means of the histograms. The noise is measured through the histograms as three standard deviations (σ) from the relevant level into the eye opening.

The eye height is calculated as follows:

$$Eye23Height = (V_{three} - 3\sigma_{three}) - (V_{two} - 3\sigma_{two})$$

 $Eye12Height = (V_{two} - 3\sigma_{two}) - (V_{one} - 3\sigma_{one})$

 $Eye01Height = (V_{one} - 3\sigma_{one}) - (V_{zero} - 3\sigma_{zero})$

Where V_{three} , V_{two} , V_{one} and V_{zero} are the **Level Mean** for of levels 3, 2, 1 and 0 respectively, and σ_{three} , σ_{two} , σ_{one} and σ_{zero} are the **Level RMS** for levels 3, 2, 1 and 0 respectively.

Eye23 Level Eye12 Level Eye01 Level PAM4 Eye23 Level, PAM4 Eye12 Level and PAM4 Eye01 Level

PAM4 Eye Level is a measure of the vertical position of the eyes of a PAM4 eye diagram.

The Eye Level is determined as follows:

$$Eye23 \ Level = \frac{V_{two} + V_{three}}{2}$$

$$Eye12 \ Level = \frac{V_{one} + V_{two}}{2}$$

$$Eye01 \ Level = \frac{V_{zero} + V_{one}}{2}$$

Where V_{three} , V_{two} , V_{one} and V_{zero} are the **Level Mean** of levels 3, 2, 1 and 0 respectively.

* 7.1.1	Level3 Mean
⊾÷î Î	Level2 Mean
	Level1 Mean
* ***	Level0 Mean

Levelo Mean PAM4 Level3 Mean, PAM4 Level2 Mean, PAM4 Level1 Mean and PAM4 Level0 Mean

PAM4 Level Mean is a measure of the mean level sampled within a fixed-width vertical slice located at the center of the **Eye Aperture** at the 3, 2, 1 and 0 levels.

A histogram is constructed using the sampled portion of the eye diagram within the eye window. The histogram can be split algorithmically into four groups. The mean of each group is then the **level mean**, V.

V_{three} = Histogram mean_{top}

 $V_{two} = Histogram mean_{uppermiddle}$

 $V_{one} = Histogram mean_{lower middle}$

 $V_{zero} = Histogram mean_{bottom}$

88	Level3 RMS
88	Level2 RMS
88	Level1 RMS
22	Level0 RMS

PAM4 Level3 RMS, PAM4 Level2, RMS PAM4 Level1 RMS and PAM4 Level0 RMS

PAM4 Level RMS is a measure of the unit standard deviation of the amplitude variance sampled within a fixedwidth vertical slice located at the center of the **Eye Aperture** at the 3, 2, 1 and 0 levels.

A histogram is constructed using the sampled portion of the eye diagram within the eye window. The histogram is split algorithmically into four groups. The RMS of each group is then the **level RMS**, σ .

 $\sigma_{three} = Histogram RMS_{top}$

 $\sigma_{two} = Histogram RMS_{upper middle}$

 $\sigma_{one} = Histogram RMS_{lowermiddle}$

 $\sigma_{zero} = Histogram RMS_{bottom}$

Level3 Pk-Pk Level2 Pk-Pk Level1 Pk-Pk Level1 Pk-Pk

Level0 Pk-Pk PAM4 Level3 Pk-Pk, PAM4 Level2 Pk-Pk, PAM4 Level1 Pk-Pk and PAM4 Level0 Pk-Pk

PAM4 Level RMS is a measure of the maximum range of the amplitude variance sampled within a fixed-width vertical slice located at the center of the **Eye Aperture** at the 3, 2, 1 and 0 levels.

A histogram is constructed using the sampled portion of the eye diagram within the eye window. The histogram can be split algorithmically into four groups. The peak-to-peak amplitude of each group is then the **Level Pk-Pk**.

Level PkPk_{three} = Histogram PkPk_{top}

Level PkPk_{two} = Histogram PkPk_{uppermiddle}

Level PkPk one = Histogram PkPk lower middle

Level PkPkzero = Histogram PkPkbottom

Linearity

PAM4 Linearity

PAM4 Linearity is a measure of the variance in amplitude separation between PAM4 levels. The linearity is a value between 0 and 1.

PAM4 Linearity is determined as follows:

 $Linearity = \frac{Minimum(Eye23Height, Eye12Height, Eye01Height)}{Maximum(Eye23Height, Eye12Height, Eye01Height)}$

Lvl Deviation PAM4 Level Deviation

PAM4 Level Deviation is a measure of the variance in amplitude among PAM4 levels in an eye diagram. The level deviation is expressed as a percentage.

PAM4 Level Deviation is determined as follows:

$$Level \ deviation = \left(\frac{|Eye23Height - \frac{1}{3}V_{PkPk}|}{V_{PkPk}} + \frac{|Eye12Height - \frac{1}{3}V_{PkPk}|}{V_{PkPk}} + \frac{|Eye01Height - \frac{1}{3}V_{PkPk}|}{V_{PkPk}}\right)$$

Where V_{pkpk} is the **Peak-Peak**.

ES2 LVI ES1 LVI PAM4 ES2 LVI and PAM4 ES1 LVI

PAM4 ESx Level, or effective signal levels, is the average level of the two center symbols.

PAM4 ES2 Level is determined as follows:

$$ES2 \ Level = \frac{V_{two} - V_{average}}{V_{three} - V_{average}}$$
$$ES1 \ Level = \frac{V_{one} - V_{average}}{V_{zero} - V_{average}}$$

Where V_{three} , V_{two} , V_{one} and V_{zero} are the **Level Mean** for levels 3, 2, 1 and 0 respectively. $V_{average}$ is determined as follows:

$$V_{average} = \frac{1}{2} V_{PkPk}$$

Where V_{PkPk} is the **Peak-Peak**.

Evi Thickns PAM4 Lvl Thickns

PAM4 LvI Thickns, or level thickness, is a measure of the height of the overall eye due to channel response such as interference and distortion. Prior to measurement, the signal is averaged.

PAM4 Level Thickness is determined as follows:

Level thickness =
$$\frac{1}{4} \left(\sum_{i=0}^{3} \frac{\sigma_i}{V_{PkPk}} \right)$$

Where σ_i is the **Level RMS** of level i and V_{pkpk} is the **Peak-Peak**.

Peak-Peak PAM4 Peak-Peak

PAM4 Peak-Peak is a measure of the average swing amplitude between the highest and lowest levels, V_{zero} and V_{three} .

PAM4 Peak-Peak (V_{pkpk}) is determined as follows:

$$V_{PkPk} = V_{three} - V_{zero}$$

Overshoot
PAM4 Overshoot

PAM4 Overshoot is a measure of the ratio of the maximum value of the measured signal to its amplitude, expressed as a percentage. The waveform is scanned for the maximum value within the eye window, while the amplitude is measured in the **Eye Aperture**.

PAM4 Overshoot is determined as follows:

$$Overshoot = \frac{V_{max} - V_{three}}{V_{PkPk}}$$

Where V_{max} is the maximum voltage observed, V_{three} is the Level3 Mean and V_{pkpk} is the Peak-Peak.

PAM4 Undershoot is a measure of the ratio of the minimum value of the measured signal to its amplitude, expressed as a percentage. The waveform is scanned for the minimum value within the eye window, while the amplitude is measured in the **Eye Aperture**.

PAM4 Undershoot is determined as follows:

$$Undershoot = \frac{V_{min} - V_{zero}}{V_{PkPk}}$$

Where V_{min} is the minimum voltage observed, V_{zero} is the **Level0 Mean** and V_{pkpk} is the **Peak-Peak**.

7.4.1.9 PAM4 Optic Parameters

Average Power PAM4 Average Power

PAM4 Average Power is a measure of the mean transmission amplitude across all four levels.

PAM4 Average Power is determined as follows:

Average power =
$$\frac{P_{three} + P_{two} + P_{one} + P_{zero}}{4}$$

Where P_{three} is the average power for a 3 level, P_{two} is the average power for a 2 level, P_{one} is the average power for a 1 level and P_{zero} is the average power for a 0 level.

Extinct. Ratio PAM4 Extinct. Ratio

ps9400Aug-1

Menu

PAM4 Extinction Ratio is determined as follows

$$Extinction \ ratio = \frac{P_{three}}{P_{zero}}$$

Where P_{three} is the average power for 3 level and P_{zero} is the average power for 0 level.

DMA Outer PAM4 OMA Outer

PAM4 OMA Outer is a measure of the peak to peak amplitude of an optical PAM4 signal. It is analogous to **Peak-Peak** for electrical signals. Values are not derived from the eye diagram itself but from a run consecutive V_{three} and then V_{zero} signals.

PAM4 OMA Outer is determined as follows:

 $OMA \ Outer = P_{three} - P_{zero}$

Where P_{three} is the average power for 3 level and P_{zero} is the average power for 0 level.

7.4.1.10 View Define Parameters

View Defined Parameters

Setting **View Define Parameters** to **On** gives you a visual indicator of the calculation of the **Eye Window** placement. The **Eye Window** is green.

Setting the control to Off makes the Eye Window disappear.

7.4.1.11 Clear All Measurements

Clear All Measurements

Clicking **Clear All Measurements** removes all measurement results from the **Measurement Area** located at the bottom of the oscilloscope display.

7.4.2 Definition

Eye Diagra	m 🖪 Help X
Parameter	Definition
Define Parameter	ſS
Eye Boundary 1	Eye Boundary 2
Thresholds	
	50%-90%
	50%-80% Defined
Upper Threshold	Lower Threshold
80 % ▼ ▲ D ▼ ▲	20 % ▼ ▲ D ▼ ▲
Statistics	
Statistics	
Mode Mormal Window Exponential	Waveforms
Wfms in (Cvcle
64 Wfms	

The Measurement Definition Menu

7.4.2.1 Define Parameters

Define Parameters				
Eye Boundary 1 40 % Eye Boundary 2 60 % Eye Boundary 2 60 % Eye Boundary 2 60 % Eye Boundary 2 60 % Eye Boundary 3 Eye Boundary 2 Eye Boundary 3 Eye Boundary 3				
Thresholds XX 10%-50%-90% XX 20%-50%-80% User Defined				
Upper Threshold Lower Threshold				

The **Define Parameters** menu sets the measurement points (boundaries and thresholds) where the automatic measurements are made. The menu influences the measurement algorithm by allowing you to use the standard measurement points, or customize the measurements with user-defined selections.

7.4.2.1.1 Eye Boundary 1 and Eye Boundary 2



The **Eye Boundary 1** (left boundary) and the **Eye Boundary 2** (right boundary) variables set the time for the eye boundaries. These settings determine what horizontal portion of the eye will be used to generate histograms for eye diagram amplitude measurements. Both boundaries directly determine **One Level** and **Zero Level** values. You can use the instrument's default values of 40% and 60% for NRZ eye diagrams, and 47.5% and 52.5% for RZ eye diagrams, or you can enter the values you want for the boundaries.

Eye Boundary 1 allows you to set the percentage time for the left eye boundary, while **Eye Boundary 2** allows you to set the percentage time for the right eye boundary.

7.4.2.1.2 Thresholds



The **Thresholds** menu sets the upper, middle, and lower measurement points that the eye diagram measurements use for calculating the timing measurement results. For example, rise time is measured from the lower threshold to the upper threshold, while a RZ Pulse Width measurement is made between two middle thresholds.

Thresholds are not visible.

The three threshold choices are the standard measurement points:

• 10%-50%-90%

- 20%-50%-80%
- User Defined

The **Upper Threshold** and **Lower Threshold** variables are displayed when **User Defined** is selected. **Middle** threshold is fixed at the 50% level.

10%-50%-90% and 20%-50%-80%

These are two standard pulse measurement thresholds for all measurements. These standard thresholds are calculated as a percentage of the **One-Zero Level** value, while the **One Level** and **Zero Level** values are calculated from the eye diagram that is on the display.

10%-50%-90% means: Lower threshold = 10%, Middle threshold = 50% and Upper threshold = 90%. Use these thresholds for typical eye diagrams.

20%-50%-80% means: Lower threshold = 20%, Middle threshold = 50% and Upper threshold = 80%. Use these thresholds for eye diagrams with excessive ringing or overshoot.

Make sure that the eye diagram is expanded vertically and horizontally so that the instrument can accurately determine the **One Level** and **Zero Level** values of the eye. However, if too much of the **One Level** and **Zero Level** of the eye diagram is on the display, it may reduce the repeatability of your measurements. A good rule of thumb is to have two divisions of **One Level** and two divisions of **Zero Level**.

User Defined

You can use the User Defined setting to define thresholds for eye diagrams at the positions you want.


7.4.2.1.3 Upper Threshold and Lower Threshold



The **Upper Threshold** and **Lower Threshold** variables are displayed only when the **User Defined** option of the <u>Thresholds</u> menu is selected.

Upper Threshold can be set from 55% to 95%, while the Lower Threshold can be set from 5% to 45%.

7.4.2.2 Statistics

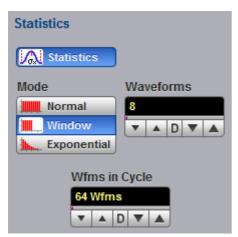

Click the **Statistics** menu to open an eye diagram calculation statistics menu.

Menu


7.4.2.2.1 Statistics

🔨 Statistics

On Turns on statistical calculation for the eye diagram.

Off Turns off statistical calculation for the eye diagram.

7.4.2.2.2 Mode

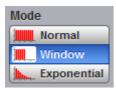

The Mode menu defines one of three modes for statistical calculations.

NormalEach of the acquired waveforms has equal influence on the eye diagram statistics. The
Waveforms & Weight variables are not active in this mode.WindowOnly the last specified number of acquired waveforms will have equal influence on the eye
diagram statistics. The Waveforms variable specifies the number of these influenced
waveforms.ExponentialEach of the acquired waveforms has a weighted influence on the result of the eye diagram
statistics. The Weight variable specifies the degree of this influence.

7.4.2.2.3 Waveforms & Weight



The **Waveforms** variable specifies the number of influenced waveforms when the **Window** is selected in the <u>Mode</u> menu. The **Waveforms** can be varied from 8 to 8192 in multiples of two.



The **Weight** variable specifies the degree of influence of the latest acquired waveform against more remote waveforms. The **Weight** variable is active when **Exponential** is selected in the <u>Mode</u> menu. The **Weight** can be varied from 8 to 8192 in multiples of two.

7.4.2.2.4 Waveforms In Cycle



The **Wfms in Cycle** variable determines how many acquired waveforms will be used for the one-measurement cycle in eye diagram calculations.

The variable can be adjusted from 64 to 1024 waveforms per one-measurement cycle.

7.5 Histogram Menu

🗼 Histogram

A **Histogram** is a probability distribution diagram that shows the distribution of acquired data from a source within a user-definable window. The information gathered by the histogram is used to perform statistical analysis on the source. You can display the histogram either vertically for voltage measurements or horizontally for timing measurements.

Histogram 🛛 🖪 Help 🔀	Histogram 🛛 🔝 Help 🗙
Setup Window/Scale	Setup Window/Scale
Axis Source Off Vertical Horizontal	Window Visible Set Default Windo Limits
Mode Weight	Left Limit Right Limit
Normal 32	-25 ns ↓ ▷ ▷ ↓ ▷ ↓ ▷ ↓ ▷ ↓ ▷ ↓ ▷ ↓ ▷ ↓ ▷ ↓ ▷ ↓
Run Until Stop Waveforms Waveforms Samples # of Waveforms 1000 wfm D V A	Top Limit 399.22 mV ▼▲D▼▲ Units V,T Absolute % Percent
Reset	Scale Scale Type Scale Mode ✓ Linear ✓ ✓ Logarithmic ✓ Scale Offset 20 %/div ✓ ● % ✓ ▲ D ▼ ▲ ● %

The Histogram menu

Histograms are derived from the instrument measurement database. The measurement database consists of all data samples displayed on the display graticule. Every time a display sample point is acquired at a display coordinate, the counter for that coordinate is incremented. As the total count increases, the range of hits also increases. The maximum count for each counter is 63 488. If the histogram is left on for a very long time, the database will become saturated.


The most common uses for histograms are measuring and characterizing noise or jitter on displayed waveforms. Noise is measured by sizing the histogram window to a narrow portion of time and observing a vertical histogram that measures the noise on an edge. Jitter is measured by sizing the histogram window to a narrow portion of voltage and observing a horizontal histogram that measures the jitter on an edge.

When the histogram is turned on, the instrument begins to build its measurement database. Then the following events occur:

- The histogram is displayed as a series of lines on the display graticule.
- The histogram data is analyzed.
- The results of the histogram are displayed on the <u>Measurement Area</u> of the display.

The histogram is displayed as a series of horizontal or vertical lines (depending on the axis selected in the **Axis** menu). Each line is the width of one pixel on the display graticule. Each line is carefully positioned on the display graticule within the histogram window and appears above the waveforms. Therefore, the source waveform may not be viewed through the histogram waveform.

The measurement database continues to build until the instrument stops acquiring data for the histogram.

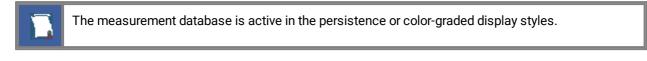

To avoid erroneous data, reset the measurement database by pressing the <u>Clear</u> button. Changing the vertical scale, offset, timebase scale, delay, and trigger settings will not reset the measurement database.

Histogram measurement results

You will see the histogram statistics listed in the <u>Measurement Area</u> of the GUI. These values are displayed on tabs.



The tabs only appear as one of the histogram measurements is performed. For example, if you perform a vertical histogram measurement on channel 1, only this tab will appear on the display.

The measurement database and the graticule display will clear when you perform the following actions:

- Switch between operating modes in the **Display** menu.
- Change vertical and horizontal scale and position.
- Click on the Clear Display button.

The **Measure tab** displays the following measurement statistics for each measurement:

- Scale Lists the display scale in hits per division or dB per division.
- **Offset** Lists the offset in hits or dB. Offset is the number of hits or dB at the bottom of the display, as opposed to the center of the display.
- Hits in Box The total number of samples included in the histogram box.
- Waveforms The number of waveforms that have contributed to the histogram.
- **Peak Hits** The number of hits in the histogram's greatest peak.
- **Pk-Pk** The width of histogram. For horizontal histograms, width is the time difference between the first and last pixel columns that contains data. For vertical histograms, width is the difference in time between the first and last pixel rows that contain data.

Median	50% of the histogram samples are above the median and 50% are below the median.
Mean	Mean is the average value of all the points in the histogram.
StdDev	The standard deviation (σ) value of the histogram.
Mean ±1 StdDev	The percentage of points that are within $\pm 1\sigma$ of the mean value.
Mean ±2 StdDev	The percentage of points that are within $\pm 2\sigma$ of the mean value.
Mean ±3 StdDev	The percentage of points that are within $\pm 3\sigma$ of the mean value.
• Min	Min is the minimum value of all the points in the histogram.
• Max	Max is the maximum value of all the points in the histogram.

• Max-Max

The width between the vertical histogram's greatest peak.



The measurement statistics reported will vary depending on the mode of operation selected.

Mean and Standard Deviation

The **PicoScope 9400A Series** oscilloscopes calculate the mean and standard deviation automatically. It does not rely on the assumption that the data is of a particular distribution to determine the sample mean or standard deviation. The microprocessor-controlled acquisition allows the oscilloscope to store and display every data point. Therefore, the sample mean and standard deviation are easily computed by the microprocessor using the following equations respectively:

$$\overline{X} = \frac{\sum_{i=1}^{n} X_{i}}{n}$$
$$\sigma = \sqrt{\frac{\sum_{i=1}^{n} (X_{i} - \overline{X})^{2}}{n-1}}$$

where: \overline{X} - mean, σ - standard deviation, *n* - number of samples, and *Xi* - value of each sample.

The mean for time histogram is the time from the trigger point (without taking into account minimum delay) to the sample average. The mean for voltage histograms is the average voltage with respect to the ground reference.

7.5.1 Setup			
uuup	Histogram Setup Axis Off Vertical Morizontal	Help X Window/Scale	
	Mode	Weight	
	Run Until Stop Waveforms	# of Waveforms	
	Re	set	


The Histogram Setup menu

7.5.1.1 Axis



The Axis function turns the display of the histogram off or orients the histogram vertically or horizontally.

- Off Removes the histogram and histogram value from display.
- Vertical Places the histogram at the left side of the graticule, which allows for voltage measurements.
- Horizontal Places the histogram at the bottom of the graticule area, which allows for timing measurements.

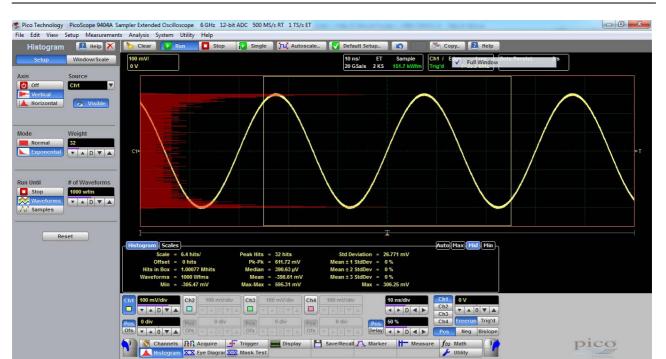

An example of the vertical histogram display



An example of the horizontal histogram display

7.5.1.2 Source



Histogram measurements can be made on only one source at a time. Select the source you want to measure using the **Source** menu. Be aware that even if the display shows only the most recent acquisitions, the measurement database keeps track of all display coordinates hit while the measurement database is building.

You can set the histogram source:

- Channel
- Function
- Waveform memory
- Spectrum

7.5.1.3 Visible

🔕 Visible

The **Visible** turns on or off the display of a histogram and histogram window. Turning off a histogram does not turn off the measurement process.

7.5.1.4 Mode



The Mode menu defines one of two modes that determine an algorithm for statistical calculation.


- Normal When the Normal mode is selected, each of the acquired waveforms has equal influence on the result of the statistical calculations on the histogram. The Weight variable is not active in this mode.
- **Exponential** When the **Exponential** mode is selected, each of the acquired waveforms has a weighted influence on the result of statistical calculations on the eye diagram. The **Weight** variable specifies the degree of this influence.

7.5.1.5 Weight



The **Weight** variable specifies the degree of influence of the nearest acquired waveform against more remote waveforms. The **Weight** variable is active when **Exponential** is selected in the **Mode** menu. The **Weight** can be varied from 8 to 8192 in multiples of two.

7.5.1.6 Run Until

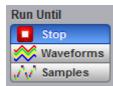

The Run Until menu allows you to determine when the acquisition of data stops.

- Stop
- You must press the **Stop** key to stop the acquisition of data.
- Waveforms
- After the number of waveforms is reached, acquisition stops.
- Samples After the number of samples is reached, acquisition stops.

7.5.1.7 # of Waveforms and # of Samples



- # of Waveforms. Sets the number of waveforms. After the selected number of waveforms is reached, acquisition stops.
- **# of Samples.** Sets the number of samples. After the selected number of samples is reached, acquisition stops.

7.5.2 Window

Window/Scale

Common uses for histograms are measuring and characterizing noise or jitter on displayed waveforms.

Noise is measured by sizing the histogram window to a narrow portion of time and observing a vertical histogram that measures the noise on a flat section of a waveform.

Jitter is measured by sizing the histogram window to a narrow portion of voltage and observing a horizontal histogram that measures the jitter on an edge.

The histogram window determines which region of the database will be used to construct the histogram. The instrument will use only this region of the database to calculate the histogram results.

To define the histogram window, choose **Window/Scale** from the **Histogram** menu. The histogram **Window** menu allows you to select a region of the database to include in the histogram. The **Window** menu opens the histogram window markers. The markers consist of:

- Two solid vertical lines (the Left Limit and Right Limit variables).
- Two solid horizontal lines (the Top Limit and Bottom Limit variables)

You can then define the size of the histogram window within the horizontal and vertical scale limits of the instrument.

Window			
Visible Set Default Winde			
Limits			
∯∕ Paired	±/→ Independent		
Left Limit	Right Limit		
-5 ns	5 ns		
Top Limit	Bottom Limit		
6.25 mV	-6.25 mV		
	▼ ▲ D ▼ ▲		
Units			
V,T Absolute			
% Percent			

The Histogram Window menu

7.5.2.1 Visible

\delta Visible

Visible is used to show histogram windows with both vertical and horizontal histogram limits.

Clicking Visible turns the display of the selection on or off.

7.5.2.2 Set Default Window

🔉 Set Default Windo

Sets the default histogram window for both vertical or horizontal histograms.

7.5.2.3 Limits



The Limits menu defines how the histogram window can be positioned with the Left Limit, Right Limit, Top Limit and Bottom Limit variables.

Paired

With the Paired method, the following conditions are used for positioning of the histogram window:

- The Left Limit variable changes the full histogram window to left or to right.
- The Right Limit variable changes the right limit of the histogram window to left or to right.
- The Top Limit variable changes the full histogram window up or down.
- The Bottom Limit variable changes the bottom limit of the histogram window up or down.

Independent

When the **Independent** is selected, each of the **Left Limit**, **Right Limit**, **Top Limit** and **Bottom Limit** variables changes the position of the corresponding limit independently.

7.5.2.4 Left Limit, Right Limit, Top Limit and Bottom Limit



The Left Limit, Right Limit, Top Limit and Bottom Limit variables allow you to use the histogram limits to select a region of the database.

When the <u>Independent</u> mode in the **Limits** menu is selected, the **Top Limit** and **Bottom Limit** variables move the vertical histogram limits vertically across the display, while the **Left Limit** and **Right Limit** variables move the horizontal histogram limits horizontally across the display.

When the <u>Paired</u> mode in the **Limits** menu is selected, the **Top Limit** variable moves the full histogram window up or down, and the **Left Limit** variable moves the full histogram window left or to right. At the same time the **Bottom Limit** variable moves the bottom limit of the histogram window up or down, while the **Right Limit** variable moves the right limit of the histogram window left or to right.

Because the database that the histogram is derived from is limited to the size of the graticule area, placing the histogram limits beyond the graticule area results in a histogram of only the graticule area.

For jitter measurements you would position the **Top Limit** and **Bottom Limit** histogram limits so that the histogram is built from a very narrow horizontal slice of the graticule area. For noise measurements, you would position the **Left Limit** and **Right Limit** histogram limits so that the histogram is built from a very narrow vertical slice of the graticule area.



The histogram window limits are only visible when the <u>Histogram</u> menu is opened.

The default setup positions of the histogram markers as follows:

- Left Limit < Right Limit.
- Bottom Limit < Top Limit.

The values of Left Limit and Bottom Limit cannot be made greater than the values of Right Limit and Top Limit by repositioning the limits. The histogram window is always the area inside the boundaries of all of Left Limit, Right Limit, Top Limit and Bottom Limit, regardless of the limit values.

You can use the mouse to click and drag the histogram limits to new positions: click and hold the left mouse button while the mouse pointer is on one of the limits, then drag the marker to the position you want and release the mouse button. Clicking and dragging a limit makes it easy to quickly move the limit to the desired waveform event.



The values of the limits and the position arrows are dependent upon the vertical and horizontal scale settings.

7.5.2.5 Units



The **Units** function lets you select how you want the <u>Left Limit, Right Limit, Top Limit and Bottom Limit</u> variables represented.

- Absolute Represents all limits in current unit.
- Percent Represents all limits as percentages of the full vertical or horizontal scale.


7.5.3 Scale

Window/Scale

Histograms are derived from the instrument measurement database. The histogram values correspond to a row or column in the database. The database that is used to construct the histogram is dependent upon the selected source. The instrument converts the row and column numbers to time (seconds) and amplitude (volts) values using the scaling values of the selected the database source. Therefore, the histogram results from each source vary depending on the scaling of the source.

Histograms are displayed as a series of lines (vertical or horizontal). The length of each line represents the frequency or number of hits of data on that row (or column) of the display. Zero hits correspond to the left edge of the graticule (vertical histogram), or the bottom edge of the graticule (horizontal histograms).

The histogram **Scale** menu gives you access to a second-level menu that allows you to set the scale of the histogram.

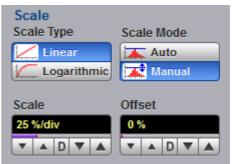

The Histogram Scale menu

7.5.3.1 Scale Type



The **Scale Type** menu defines how to display histogram data. Two options can be set from the **Scale Type** menu: **Linear** and **Logarithmic**.

- Linear Sets the display of the histogram results to the number of hits per division.
- Logarithmic Sets the display of the histogram results to dB.

7.5.3.2 Scale Mode



The Scale Mode menu determines how much of the histogram is displayed on the screen.

Auto

If the **Axis** menu is set to <u>Horizontal</u>, the **Auto** sets the base of the histogram to the bottom of the graticule area and displays the histogram using half of the graticule height.

If the **Axis** menu is set to <u>Vertical</u>, the **Auto** sets the base of the histogram to the left edge of the graticule area and displays the histogram using half of the graticule width.

Manual

Manual lets you window in on the histogram by allowing you to change the scale and offset settings. Depending on the setting of the <u>Scale Type</u> menu, the scale value is in either percent of a division or dB. By changing the scale, you can zoom in or out on the histogram. Offset allows you to pan across the histogram by moving the base of the histogram. Depending on the setting of the <u>Scale Type</u> menu, the offset value is also in either percent of peak or dB per division.

7.5.3.3 Scale



Linear scale

For the linear scale type, the scale is the percentage of the peak per division. For example, on a horizontal histogram, 20% places one-fifth of the histogram in each of eight divisions with the top of the peak (100%) at the middle of the display.

Logarithmic scale

For the log scale type, the scale is in decibels per division. The histogram is plotted according to the following formula:

$$dB = 201 \circ g_{10} \frac{X}{Peak}$$

where: X is the number of hits in a histogram row for vertical histograms, or the number of hits in a histogram column for horizontal histograms. *Peak* is the number of hits in the largest histogram column or row, and *dB* is the log value that gets plotted.

7.5.3.4 Offset



Linear offset

For the linear scale type, the offset is the percentage of the peak at the left edge or lower edge of the display. For example, on a horizontal histogram, an offset of 20% places 20% of the peak at the lower edge of the display. Therefore, 20% of the histogram will be below the display and the other 80% of the histogram will be above the lower edge of the display (displayed on the screen).

Logarithmic offset

For the log scale type, the offset is in decibels at the left edge or lower edge of the display. The histogram is plotted according to the following formula:

$$dB = 201 \circ g_{10} \frac{X}{Peak}$$

where: *X* is the number of hits per row for vertical histograms, or the number of hits per column for horizontal histograms. *Peak* is the number of hits in the peak, and *dB* is the log value that gets plotted.

This means 0 dB is at the peak of the histogram and the offset can only contain negative values. For example,

with a horizontal histogram, an offset of -20 dB places 10% or 10^{20} of the peak at the lower edge of the display.

-20

7.6 Marker Menu

🔨 Marker

Markers are movable lines on the display. You set their value by positioning them on the display. Their actual value, however, comes from internal data, so they are more precise than graticules. They use numeric readouts to present results.

You can drag markers to measure waveforms on screen.

Markers can be positioned on either:

- A selected waveform source (input channel, waveform memory, function or spectrum).
- Independently anywhere on the display graticule.

Markers allow you to make:

- Absolute vertical measurements (voltage, spectrum magnitude, spectrum phase).
- Ratiometric vertical measurements.
- Absolute horizontal measurements (timing, bit period, frequency).
- Ratiometric horizontal measurements.

The markers are display-limited, so you cannot move them off screen. Also, if you resize waveforms, the markers do not track. That is, a marker stays at its screen position, ignoring changes to horizontal and vertical scale and position.

Marker	🖪 Help X	
Туре		
Off	X-Marker	
	🗚 XY-Marker	
M1 Position	M1 Source	
-25 ns	Ch1 🔻	
M2 Position	M2 Source	
25 ns	Ch1 🔻	
Motion		
€/Inder	pendent	
Paired		
Reference Mode		
Reference Mode		
🕑 Refei	rence On	
Set R	eference	
- Jern		

The Marker menu

The **Marker** menu allows you to turn on and position calibrated colored markers on the display. For example, you can use the **M1 Position** (solid line) control to move the **X1** marker horizontal position. The position value of the marker will be displayed in the <u>Measurement Area</u> of the display.

Markers can be changed to a different color in the display menu. You can use the markers to make custom measurements or to use as visual reference points on the display.

To display the Marker menu, click the Marker button in the main menu.

Marker measurement results

The <u>Measurement Area</u> of the **GUI** displays the values of the marker positions and measurements on tabs. The marker position readout is based on the units of the source waveform. The marker resolution is limited to the resolution of the display. As you move a marker, its position is displayed in the **Measurement Area**. The horizontal value (X-axis) is the time delay from the left border of the display graticule and the vertical position (Y-axis) is measured with respect to the corresponding source ground.

Marker Scales XM1 = 4.39 ns YM1 = 92.68 mV dXM = 8.36 %	XM2 = 8.605 ns YM2 = -188.4 mV dXM = 30.1 °	dXM = 4.215 ns dYM = -281.08 mV dYM = 425 %	1 / dXM = 237.248 MHz dYM / dXM = -66.686 V / μs dYM = 12.6 dB	(Max)(Mid)(Min)

The following information is displayed for the selected source or waveform:

- XM1: Position of the M1 marker (solid line). The X-axis units may be displayed in seconds, Hz, bits.
- YM1: Position of the M1 marker (solid line). The Y-axis units depend upon the channel input, and may be displayed in volts, watts, amperes, phase degrees.

- XM2: Position of the M2 marker (dashed line). The X-axis units may be displayed in seconds, Hz, bits.
- YM2: Position of the M2 marker (dashed line). The Y-axis units depend upon the channel input; and may be displayed in volts, watts, amperes, phase degrees.
- **dXM:** The difference between the **M1** and **M2** marker values, if both markers are turned on. **dXM** is calculated as follows:

dXM = XM2 - XM1

where XM2 represents the dashed line marker, and XM1 represents the solid line marker.

If **XM1** is more positive than **XM2**, **dXM** will be a negative number, which can result in negative time interval measurements.

- 1/dXM: The instrument will also calculate and display the 1/dXM frequency value when both X-axis markers are turned on. If XM1 is more positive that XM2, 1/dMX will display a negative frequency.
- dYM: The difference between the YM1 and YM2 marker values, if both markers are turned on. dYM is calculated as follows:

dYM = YM2 - YM1

where YM2 represents the dashed line marker, and YM1 represents the solid line marker.

If YM1 is more positive than YM2, dYM will be a negative number.

7.6.1 Type

Туре	
Off	↓/ X-Marker
T. Y-Marker	🗱 XY-Marker

There are three types of markers:

- X-Markers (manual markers).
- Y-Markers (manual markers).
- Waveform markers.

Click the button for the marker type that you need.

Off

Removes the markers and marker value from display.

X-Marker

The X manual markers (XM1 and XM2 markers) are two vertical lines you can move horizontally. The XM1 is displayed as a solid line, and the XM2 is displayed as dashed line.

You can position the **X-Markers** anywhere on the display, which allows you to make custom measurements. The **X-Markers** track the time values as the time base scale is changed, which allows you to make accurate delay measurements. The position readout is based on the scale factors of the source waveform. Marker resolution is limited to the pixel resolution of the display.

Y-Marker

The Y manual markers (YM1 and YM2 markers) are two horizontal lines you can move vertically. The YM1 is displayed as a solid line, and the YM2 is displayed as a dashed line.

You can position the **Y-Markers** anywhere on the display, which allows you to make custom measurements. The **Y-Markers** track the voltage values as the vertical scale is changed, which allows you to make accurate voltage measurements. The position readout is based on the scale factors of the source waveform. Marker resolution is limited to the pixel resolution of the display.

Waveform Markers

The **XYM1** and **XYM2** are two waveform markers displayed as **X** symbols. Each marker is in effect both a horizontal and vertical marker. Neither of these markers can be moved off the waveform. The **XY-markers** track the waveform data in memory rather than on the displayed waveform. Because the waveform data in memory has a much greater resolution than the display, the measurements you make with the **XY-markers** are much more precise than measurements made with the manual markers. The **XY-markers** track the time as changes of the source signal. This allows you to make accurate delay measurements without having both markers on the display.

7.6.2 M1 Position and M2 Position

M1 Position			M2 Position						
-32	-32.1212 ns			-27.8182 ns					
◄	•	D	•		•	•	D	•	

You can use different methods to control the positions of the markers:

- Use the M1 Position and M2 Position spin boxes.
- Use the mouse to click and drag markers to a new position.
- Use the keyboard.
- Use the Pop-up Keypad for quickly entering numeric data using the mouse.

Manual X Markers

The **M1 Position** variable moves the **XM1** marker horizontally, and the **M2 Position** variable moves the **XM2** marker horizontally. The position of each marker is displayed in the same color as the markers.

You can make timing measurements using **X-markers** on the signal. The difference between the marker's positions is the timing measurement or **dXM**:

dXM = XM2 – XM1

If XM1 is more positive than XM2, dXM will be a negative number, which can result in negative time interval measurements. Also notice the 1/dXM value. If you are measuring the period of a signal with the X-markers, then 1/dXM is the frequency of the signal. You can also make a channel-to-channel skew measurement by placing the XM1 marker on one channel and the XM2 marker on another channel.

Manual Y-Markers

The **M1 Position** variable moves the **YM1** marker vertically, and the **M2 Position** variable moves the **YM2** marker vertically. The position of each marker is displayed in the same color as the markers.

You can make voltage measurements on the signal by placing the Y-markers on the signal.

The difference between the markers is the voltage measurement or **dYM**:

dYM = YM2 - YM1

If **YM1** is more positive than **YM2**, **dYM** will be a negative number. You can also make a channel-to-channel voltage measurement by placing the **YM1** marker on one channel and the **YM2** marker on another channel.

Waveform XY-Markers

The first **XY**-marker is controlled by the **M1 Position** variable and the second **XY** marker is controlled by the **M2 Position** variable. The position of each marker is displayed in the same color as the markers.

Each XY-marker has an YM position and XM position. Vertical measurements are made with the YM positions, and dYM is the difference between the YM positions (see dYM = YM2 - YM1). Timing measurements are made with the XM positions, and dXM is the difference between the XM positions (see dXM = XM2 - XM1). Notice 1/dXM. If you are using the markers to measure the period of a signal, then 1/dXM is the frequency of the signal. Also notice dYM/dXM. If you are measuring such parameters as the rise or fall of an impulse with the XY-markers, then dYM/dXM is the slope of the signal.

7.6.3 M1 Source and M2 Source



You may set the source for each marker:

- Channels.
- Functions.
- Waveform memories.
- Spectra.

For example, you could set the **M1 Source** to a waveform on **channel 1**, and the **M2 Source** to a waveform in **memory M1**. The scale used to position each marker on the display is based on the scale of the waveform source to which the marker is tied.



You cannot select a marker source that is turned off.

When you are placing markers on a waveform, make sure the source is set to that waveform.

7.6.4 Motion



There are two options for the way in which PicoScope 9400A moves the markers:

Independent

When **Independent** motion is selected you can move each marker independently. The **M1 Position** variable moves the **XM1**, or the **YM1**, or the **XYM1** marker. The **M2 Position** variable moves the **XM2**, or the **YM2**, or the **XYM2** marker.

Paired

When **Paired** motion is selected you can move both markers with the **M1 Position** variable simultaneously, while the difference between markers can be moved with the **M2 Position** variable.

7.6.5 Reference On

🕑 Reference On

The **Marker** menu provides ratiometric measurements. These measurements give results in such ratiometric units as %, dB, and degrees.

Ratiometric measurements require a reference for comparison.

You can set the reference:

- First adjust the markers to a predetermined positional difference representing an absolute reference or
 position the markers on a reference waveform to define a specific parameter such as peak-to-peak voltage or
 period.
- 2. When you click the <u>Set Reference</u> button, the ratiometric values for the reference in the Marker Measure tab become 100 %, 0 dB or 360°. These values are displayed in the same color as the markers.
- 3. When you change position of any marker, the results will be displayed in ratiometric values.

Click the Reference On button to select ratiometric measurements.

7.6.6 Set Reference

Set Reference

Clicking the **Set Reference** button sets the ratiometric values for the reference. As an example, they can be 100 %, 0 dB or 360°. These values are displayed in the same color as the markers. When you begin to change the position of any marker, the results will be displayed in ratiometric values.

7.7 Mask Test Menu

🔀 Mask Test

Mask Test 🛛 🔝 Help 🗙				
XXX Mask Test				
Compare with				
Ch1 Test				
Create Mask				
💽 Std Mask 🕞 Build				
Automask				
Fall Edit Mask				
Standard				
SONET/SDH				
Mask				
STM16/OC48 2.48832 Gbps				
Margins				
Margins 30 %				
▼ ▲ 0 ▼ ▲				
Alignment				
Run Until				
Stop				
Failed Waveforms				
Failed Samples				
Waveforms				
# of Waveforms Select Action				
1000 Wfm				
Save				
🏷 Erase Mask				
Recall User Mask				
Save User Mask				
The Mask Test menu				


There are industry standards that define the parameters for electrical and optical waveforms. Mask testing is a process you can use to verify that the displayed waveform complies with an industry-standard waveform shape or with the user-defined mask.

A mask is a template that consists of numbered, shaded regions on the instrument display screen. The input waveform must then remain outside these regions in order to comply with the industry standard. Any acquired data point that falls inside a mask margin appears in red.

The instrument has been designed to perform communication industry mask testing to a variety of test standards. Mask testing may be performed by a following simple procedure. This procedure loads one of several mask templates, automatically aligns the mask to the present waveform, and then determines the waveform's compliance to the mask. The size of the mask or the portion of the mask can be increased or decreased in a linear fashion to determine the waveform's margin of compliance. Both the user-defined and standard (factory-installed) masks can be stored to disk for rapid switching between instrument setups. Mask testing can also activate a variety of actions upon determining a test failure.

The Mask Test menu

7.7.1 Compare with

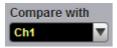

The **Compare with** menu determines which waveform the masks are compared against. You can select from any channel.

7.7.2 Test



After selecting a mask, you can enable mask counting and see the results of the count. To enable mask counting, click the **Test** button.

If mask testing is on, you can read the results listed in the <u>Measurement Area</u> of the GUI. These values are displayed on tabs. Notice that any acquired data point that falls inside a mask or a mask margin appears in red.

The Mask Test tab displays the relevant test results.

Mask Test Scale	5		Auto (Max) Mid (Min -			
Total Wfms			Margin = 30 %			
Failed Samples:	888.207 khits	Mask Hits	Margin Hits			
in Polygon 1:	197.899 khits	in Polygon 1: 130.073 khits	in Polygon 1: 67.826 khits			
in Polygon 2:	343.955 khits	in Polygon 2: 26.516 khits	in Polygon 2: 317.439 khits			
in Polygon 3:	346.353 khits	in Polygon 3: 47.97 khits	in Polygon 3: 298.383 khits			
Measurement Area of Mask Test						

7.7.3 Create Mask

Create Mask		
Std Mask 🕞 Build	Create Mask	Create Mask
Automask	Std Mask	Std Mask
Fall Edit Mask	Automask 🕞 Build	Automask
Standard	Falt Mask	Edit Mask
SONET/SDH		
Mask	Units Source	+ Add Polygon
STM16/OC48 2.48832 Gbps	Division Ch1	Delete Polygon
Margins	V,T Current	
Margins 30 %	Delta X Delta Y	Add Point
▼ ▲ 0 ▼ ▲	0.2 div 0.25 div	Delete Point
Alignment		🏷 Delete All

The Create Mask Menu

The Create Mask menu includes the following options:

- Select from industry-standard electrical and optical masks.
- Build an automask.
- Build a new user-defined mask.
- Edit any mask, and then save it to a memory.

7.7.3.1 Standard Mask

Create Mask
Std Mask 🕞 Build
Automask
Falt Mask
Standard
SONET/SDH
Mask
STM16/OC48 2.48832 Gbps
Margins
Margins 30 %
Alignment

Clicking the **Std Mask** allows you to select from a variety of standard telecommunication masks.

Choose a standard to access a list of masks used for electrical or optical waveforms.

Standard
ANSI T1.102
ANSI T1.102
CEI_OIF
Ethernet
Fibre Channel
ITU G.703
InfiniBand
PCI-Express
RapidIO
SFF
SONET/SDH
Serial ATA
USB
XAUI

The PicoScope 9400A Series supports several standards for data-comms and telecomms masks. They are:


- SONET/SDH
- Ethernet
- RapidIO
- Fibre Channel
- ITU G.703
- PCI Express
- ANSI T1.102
- InfiniBand
- Serial ATA
- XAUI
- SFF
- USB
- CEI_OIF

7.7.3.1.1 SONET/SDH Masks

Selecting the SONET/SDH standard opens the list of industry-standard masks.

Standard				
SONET/SDH				
Mask				
STM16/OC48	2.48832 Gbps 🔹 🔻			
STM0/OC1	51.84 Mbps			
STM1/OC3	155.52 Mbps			
STM3/OC9	466.56 Mbps			
STM4/OC12	622.08 Mbps			
STM6/OC18	933.12 Mbps			
STM8/OC24	1.2442 Gbps			
STM16/OC48	2.48832 Gbps			
FEC 2666	2.666 Gbps			
The list of industry-standard SONET/SDH masks (this list is model dependent)				

Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above. An example eye diagram with the **STM16/OC48** industry-standard mask is shown below.

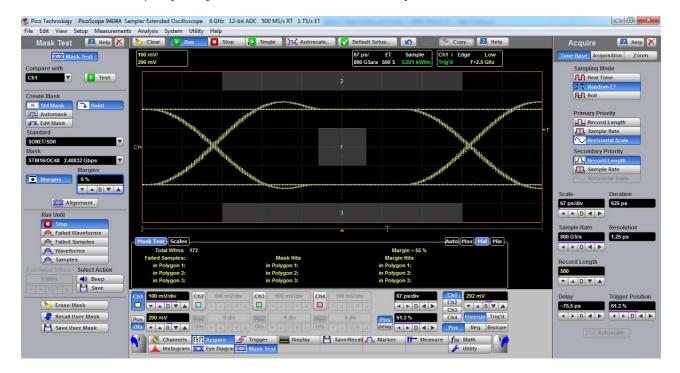

An example of eye diagram with the STM16/OC48 SONET/SDH mask

7.7.3.1.2 Ethernet Masks

Selecting the **Ethernet** standard opens the list of industry-standard masks. Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above.

Standard					
Ethernet					
Mask					
100BASE-BX/LX10 125 Mbp	s 🔻				
100BASE-BX/LX10	125 Mbps				
100BA SE-BX10	125 Mbps				
1000Base-CX Absolute TP2	1.25 Gbps				
1000Base-CX Absolute TP3	1.25 Gbps				
GB Ethernet	1.25 Gbps				
2xGB Ethernet	2.5 Gbps				
10GBase-CX4 Absolute TP2	3.125 Gbps				
The list of industry-standard Ethernet masks (this list is model dependent)					

7.7.3.1.3 RapidIO Masks

Selecting the **RapidIO** standard opens the list of industry-standard masks. Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above.

Standard		
RapidIO		
Mask		C1 >
RapidIO Serial Level I 1.25G Rx 1.2		
RapidIO Serial Level I 1.25G Rx	1.25	Gbps
RapidIO Serial Level I 1.25G Tx LR	1.25	Gbps
RapidIO Serial Level I 1.25G Tx SR	1.25	Gbps
RapidIO Serial Level I 2.5G Rx	2.5 0	Sbps
RapidIO Serial Level I 2.5G Tx LR	2.5 0	Sbps
RapidIO Serial Level I 2.5G Tx SR	2.5 0	Sbps
RapidIO Serial Level I 3.125G Rx	3.12	5 Gbps
RapidIO Serial Level I 3.125G Tx LR	3.12	5 Gbps
RapidIO Serial Level I 3.125G Tx SR	3.12	5 Gbps
The list of industry standard Danie		aalka

The list of industry-standard RapidIO masks

7.7.3.1.4 Fibre Channel Masks

Selecting the **Fibre Channel** standard opens the list of industry-standard masks. Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above.

Standard				
Fibre Channel				
Mask				
FC133 Electrical 132.8 M	bps 🔻			
FC133 Electrical	132.8 Mbps			
FC133 Optical	132.8 Mbps			
FC266 Electrical	265.6 Mbps			
FC266 Optical	265.6 Mbps			
FC531 Electrical	531.35 Mbps			
FC531 Optical	531.35 Mbps			
FC1063 Electrical	1.0625 Gbps			
FC1063 Optical	1.0625 Gbps			
FC1063 Optical PI Rev13	1.0625 Gbps			
FC1063E Abs Beta Rx	1.0625 Gbps			
FC1063E Abs Beta Tx	1.0625 Gbps			
FC1063E Abs Delta Rx	1.0625 Gbps			
FC1063E Abs Delta Tx	1.0625 Gbps			
FC1063E Abs Gamma Rx	1.0625 Gbps			
FC1063E Abs Gamma Tx	1.0625 Gbps			
FC2125 Optical	2.1231 Gbps			
FC2125 Optical PI Rev13	2.1231 Gbps			
FC2125E Abs Beta Rx	2.125 Gbps			
FC2125E Abs Beta Tx	2.125 Gbps			
FC2125E Abs Delta Rx	2.125 Gbps			
FC2125E Abs Delta Tx	2.125 Gbps			
FC2125E Abs Gamma Rx	2.125 Gbps			
FC2125E Abs Gamma Tx	2.125 Gbps			

The list of industry-standard Fibre Channel masks

7.7.3.1.5 ITU G.703 Masks

Selecting the **ITU G.703** standard opens the list of industry-standard electrical masks. Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above.

Standard	
ITU G.703	
Mask	
DS1 1.544 Mbps	
DS1	1.544 Mbps
2 Mb 120	2.048 Mbps
2 Mb 75	2.048 Mbps
DS2 110	6.312 Mbps
DS2 75	6.312 Mbps
8 Mb	8.448 Mbps
. 34 Mb	34.368 Mbps
DS3	44.736 Mbps
140 Mb 0	139.264 Mbps
140 Mb 1	139.264 Mbps
140 Mb 1 Inv	139.264 Mbps
155 Mb 0	155.520 Mbps
155 Mb 1	155.520 Mbps
155 Mb 1 Inv	155.520 Mbps

The list of industry-standard electrical ITU G.703 masks

7.7.3.1.6 PCI-Express Masks


Selecting the **PCI-Express** standard opens the list of industry-standard masks. Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above.

Standard	and in the second se
PCI-Express	in the second
Mask C1+	البيني المراجع
R1.0a 2.5G Add-in Card Transmitter	
R1.0a 2.5G Add-in Card Transmitter Non-Transition bit	2.5 Gbps
R1.0a 2.5G Add-in Card Transmitter Transition bit	2.5 Gbps
R1.0a 2.5G Exp.Card Host Non-Transition bit	2.5 Gbps
R1.0a 2.5G Exp.Card Host Transition bit	2.5 Gbps
R1.0a 2.5G Exp.Card Module Non-Transition bit	2.5 Gbps
R1.0a 2.5G Exp.Card Module Transition bit	2.5 Gbps
R1.0a 2.5G Exp.Card Transmitter Non-Transition bit	2.5 Gbps
R1.0a 2.5G Exp.Card Transmitter Transition bit	2.5 Gbps
R1.0a 2.5G Mobile Transmitter bit	2.5 Gbps
R1.0a 2.5G Receiver mask	2.5 Gbps
R1.0a 2.5G System Board Transmitter Non-Transition bit	2.5 Gbps
R1.0a 2.5G System Board Transmitter Transition bit	2.5 Gbps
R1.0a 2.5G Transmitter Non-Transition bit	2.5 Gbps
R1.0a 2.5G Transmitter Transition bit	2.5 Gbps
R1.1 2.5G Add-in Card Transmitter Non-Transition bit	2.5 Gbps
R1.1 2.5G Add-in Card Transmitter Transition bit	2.5 Gbps
R1.1 2.5G Cable Receiver End Non-Transition bit	2.5 Gbps
R1.1 2.5G Cable Receiver End Transition bit	2.5 Gbps
R1.1 2.5G Cable Transmitter End Non-Transition bit	2.5 Gbps
R1.1 2.5G Cable Transmitter End Transition bit	2.5 Gbps
R1.1 2.5G Express Module System Non-Transition bit	2.5 Gbps
R1.1 2.5G Express Module System Transition bit	2.5 Gbps
R1.1 2.5G Express Module Transmitter Path Non-Transition bit	2.5 Gbps
R1.1 2.5G Express Module Transmitter Path Transition bit	2.5 Gbps
R1.1 2.5G Receiver mask	2.5 Gbps
R1.1 2.5G System Board Transmitter Non-Transition bit	2.5 Gbps
R1.1 2.5G System Board Transmitter Transition bit	2.5 Gbps
R1.1 2.5G Transmitter Non-Transition bit	2.5 Gbps
R1.1 2.5G Transmitter Transition bit	2.5 Gbps

The list of industry-standard PCI-Express masks

7.7.3.1.7 ANSI T1.102 Masks

Selecting the **ANSI T1.102** standard opens the list of industry-standard electrical masks. Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above.

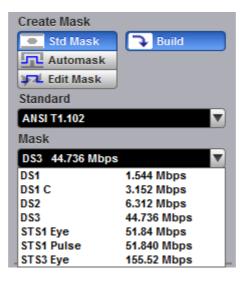

The list of industry-standard electrical ANSI T1.102 masks

7.7.3.1.8 Serial ATA Masks

Selecting the **Serial ATA** standard opens the list of industry-standard masks. Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above.

Standard			
Serial ATA			
Mask			C1+
Ext Length	n, 1.5G 250 Cycle, Rx	Mas 🔻	-
Ext Length	, 1.5G 250 Cycle, Rx	Mask 1.	5 Gbps
Ext Length	, 1.5G 250 Cycle, Tx	Mask 1.	5 Gbps
Ext Length	, 1.5G 5 Cycle, Rx Ma	ask 1.	5 Gbps
Ext Length	, 1.5G 5 Cycle, Tx Ma	ask 1.	5 Gbps
Gen1, 1.5G	250 Cycle, Rx Mask	1.	5 Gbps
Gen1, 1.5G	250 Cycle, Tx Mask	1.	5 Gbps
Gen1, 1.5G	5 Cycle, Rx Mask	1.	5 Gbps
Gen1, 1.5G	5 Cycle, Tx Mask	1.	5 Gbps
Gen1m, 1.5	5G 250 Cycle, Rx Mas	sk 1.	5 Gbps
Gen1m, 1.5	5G 250 Cycle, Tx Mas	sk 1.	5 Gbps
Gen1m, 1.5	5G 5 Cycle, Rx Mask	1.	5 Gbps
Gen1m, 1.5	5G 5 Cycle, Tx Mask	1.	5 Gbps
Ext Length	, 3.0G 250 Cycle, Rx	Mask 3	Gbps
Ext Length	, 3.0G 250 Cycle, Tx	Mask 3	Gbps
Ext Length	, 3.0G 5 Cycle, Rx Ma	ask 3	Gbps
Ext Length	, 3.0G 5 Cycle, Tx Ma	ask 3	Gbps
Gen1, 3.0G	250 Cycle, Rx Mask	3	Gbps
Gen1, 3.0G	250 Cycle, Tx Mask	3	Gbps
Gen1, 3.0G	5 Cycle, Rx Mask	3	Gbps
Gen1, 3.0G	5 Cycle, Tx Mask	3	Gbps
Gen1m, 3.0	OG 250 Cycle, Rx Mas	sk 3	Gbps
Gen1m, 3.0	G 250 Cycle, Tx Mas	sk 3	Gbps
Gen1m, 3.0)G 5 Cycle, Rx Mask		Gbps
Gen1m, 3.0)G 5 Cycle, Tx Mask	3	Gbps

The list of industry-standard Serial ATA masks

7.7.3.1.8.1 InfiniBand Masks

Selecting the **InfiniBand** standard opens the list of industry-standard masks. Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above.

Standard	
InfiniBand	
Mask	C1+
2.5G InfiniBand Cable mask 2.5 Gt	▼
2.5G InfiniBand Cable mask	2.5 Gbps
2.5G InfiniBand Driver Test Point 1	2.5 Gbps
2.5G InfiniBand Driver Test Point 10	2.5 Gbps
2.5G InfiniBand Driver Test Point 2	2.5 Gbps
2.5G InfiniBand Driver Test Point 3	2.5 Gbps
2.5G InfiniBand Driver Test Point 4	2.5 Gbps
2.5G InfiniBand Driver Test Point 5	2.5 Gbps
2.5G InfiniBand Driver Test Point 6	2.5 Gbps
2.5G InfiniBand Driver Test Point 7	2.5 Gbps
2.5G InfiniBand Driver Test Point 8	2.5 Gbps
2.5G InfiniBand Driver Test Point 9	2.5 Gbps
2.5G InfiniBand Receiver mask	2.5 Gbps
InfiniBand	2.5 Gbps

The list of industry-standard InfiniBand masks

7.7.3.1.9 XAUI Masks

Selecting the **XAUI** standard opens the list of industry-standard masks. Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above.

	Standard		
	XAUI		
	Mask		
	3.125Gb/s XAUI Far End	3.125 Gbp: 🔻	
	3.125Gb/s XAUI Far End	3.125 Gbps	
	3.125Gb/s XAUI Near End	3.125 Gbps	
	XAUI-E Far	3.125 Gbps	
	XAUI-E Near	3.125 Gbps	
T	he list of industry-standa	rd XAUI masks	\$

•

7.7.3.1.10 CEI_OIF


Selecting the **CEI_OIF** standard opens the list of industry-standard masks. Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above.

Mask	
CEI-11G-LR/MR 11.2	11.1982 Gbps 🔻
CEI-11G-LR/MR 11.2	11.1982 Gbps
CEI-11G-SR 11.2	11.1982 Gbps
 iwargins 	0 %

The list of industry-standard CEI_OIF masks

7.7.3.1.11 SFF

Selecting the **SFF** standard opens the list of industry-standard masks. Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above.

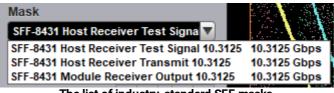

The list of industry-standard SFF masks

7.7.3.1.12 USB

Selecting the **USB** standard opens the list of industry-standard masks. Any of these masks may be recalled from memory and used to test a waveform to a specific industry standard listed above.

Mask	
USB 2.0 Low Speed 1.5	Mbps 🔻
USB 2.0 Low Speed	1.5 Mbps
USB 2.0 Full Speed	12 Mbps
USB 2.0 High Speed Far	480 Mbps
USB 2.0 High Speed Near	480 Mbps
USB 3.0 Gen1 5 Gb/s	5 Gbps
USB 3.1 Gen2 10 Gb/s	10 Gbps

7.7.3.1.13 Mask Margins



The **Margins** option is a part of each opened list of industry-standard masks. Mask margins are used to determine the margin of compliance for a standard mask. You can use both positive mask margins and negative mask margins. Positive mask margins determine how much larger you will be able to make the mask before violations will occur, while negative mask margins determine how much smaller you have to make the mask before violations no longer occur. You can then use this information to determine by what margin the waveform begins to fail to comply with industry standards.

To turn on the mask margins, check the **Margins** button on each opened list of industry-standard masks. After mask margins are enabled, use the **Margins** variable to adjust the percentage of margin you want, or use the <u>Pop-up Keypad</u> for quickly entering numeric data. You can enter a value between –100% and +100%. For example, if you want to verify that the waveform can comply with a standard mask with a 20% margin, set the margin value to 20%. You can then increase the size of the margin by increasing the percentage until violations occur.

The instrument displays the mask margins in a different color than the mask. As with a mask, any acquired data point that falls inside a mask margin appears in red. Two examples of positive and negative margins are shown in the figures below. Notice that positive margins appear outside the mask regions, while negative margins appear inside the mask regions.

An example of eye-diagram with +60% mask margin

7.7.3.1.14 Alignment

XX Alignment

The instrument can align the **Timebase Scale** to a selected industry-standard mask. To turn on the alignment option, click the **Alignment**.

7.7.3.1.15 Build or Edit

🔁 Build 🔁 Edit

Clicking the **Build** button builds a <u>Standard mask</u> or <u>Automask</u>.

Clicking Edit enters editing mode for a user-defined mask.

7.7.3.2 User-defined Masks


The **Mask Test** menu contains a mask-editing feature that allows you to create your own masks. These masks may be created using one of three methods:

- By using a reference waveform method (<u>Automask</u>). Masks are constructed by adding a <u>Delta X</u> and <u>Delta Y</u> tolerance around a reference waveform. This method is simple to use, though not as flexible as the polygon method.
- By using a polygon method for creating a unique new mask (<u>Edit Mask</u>). Using this method, polygons are created to mask off failure regions of the graticule. Up to eight polygons can be positioned in the graticule area, each with 3 to 512 sides. Very complex masks can be constructed by placing polygons within polygons. Similar to margin testing discussed above, this method allows testing of waveform failure rates to varying tolerances, because failures are listed individually for each polygon.
- By using a polygon method for modifying an existing mask (Edit Mask). This method involves the use of a reference waveform.

7.7.3.3 Automask

Create Mask			
Std Mask			
Automask	Suild		
Fall Edit Mask			
Units	Source		
Division	Ch1 🔻		
V,T Current			
Delta X	Delta Y		
0.2 div	0.25 div		

Clicking **Automask** opens a menu for using the reference waveform method. An example of the method for a noisy impulse is shown in the figure below.

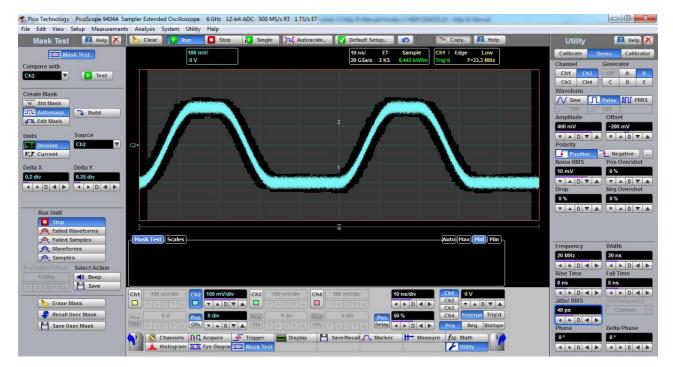


An example of Automask for a noisy pulse

7.7.3.3.1 Source



The **Source** function selects the channel, function, memory, or spectrum that the mask is scaled to.

7.7.3.3.2 Units

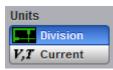

The **Units** function allows you to define <u>Delta X</u> and <u>Delta Y</u> in divisions or current source settings. Current is typically in volts and seconds or other appropriate units for the source.

7.7.3.3.3 Delta X

Delta X				
0.2 div				
◄	٠	D	۲	►

The **Delta X** variable defines the horizontal tolerance around the edges of the reference waveform.

7.7.3.3.4 Delta Y



The **Delta Y** variable defines the vertical tolerance around the edges of the reference waveform.

7.7.3.4 Edit Mask




The **Edit Mask** function gives you access to a menu that allows you to construct a new mask, or edit an existing one, using the polygon method. The procedure of editing a mask function brings up a set of brief instructions on how to construct a mask.


Mask editing procedure

The following is a simple procedure for editing the **OC48/STM16** standard mask into a user-defined mask.


1. Select the <u>STM16/OC48</u> standard mask from <u>Standard</u> and **Mask** menus.

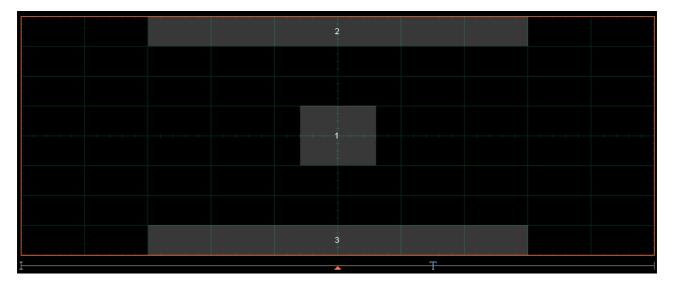

2. Click Edit Mask from Create Mask menu. Then click Edit Sedit

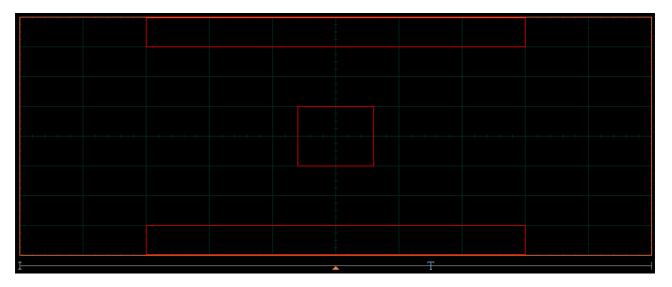


3. Click a polygon to select it, and click again on a vertex of the polygon. Note the square points on the selected polygon, which are yellow when selected, otherwise blue.

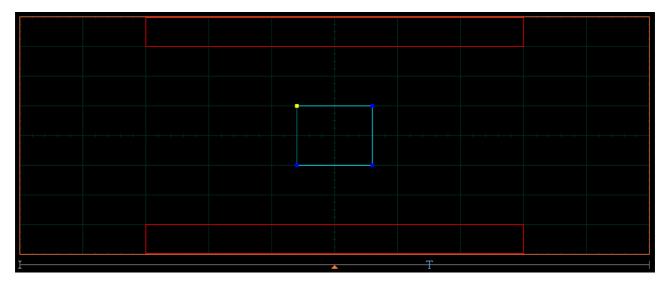


Menu

4. Click and hold the left mouse button on the selected point, then drag the mouse to move the point to the desired position. Release the mouse button when finished.

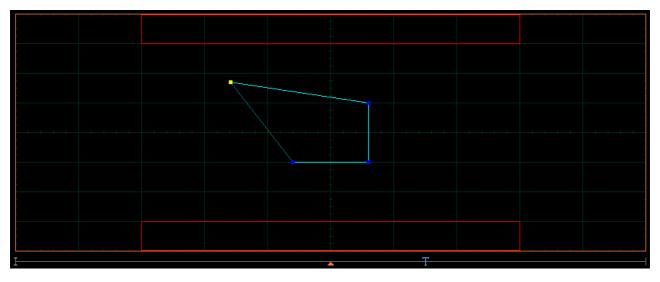

5. Click off the **Edit** button to get the edited mask as shown in the figure below.

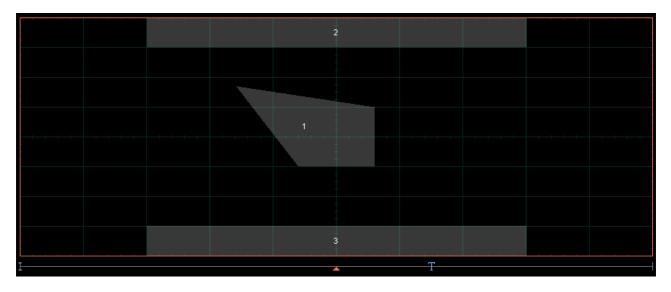


to Add Polygon

The Add Polygon function allows you to select one of the eight polygons that you want to create.


To add a polygon:

1. Click Edit Mask from Create Mask menu. Then click Edit 🕞 Edit

2. Click the **Add Polygon** button. To create the first point of the new polygon, click on the waveform area of the screen. Move the mouse to the second point of the new polygon, then click again. Continue for all new points. You will see lines connecting all the points of the polygon. To finish the construction, right-click anywhere on the display. The polygon is now built, and the mouse is free.

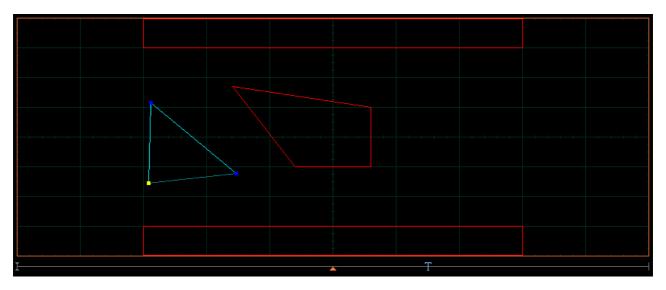

2. Click off the **Edit** button to get a mask with a new polygon. You may have up to eight polygons (see figure below).

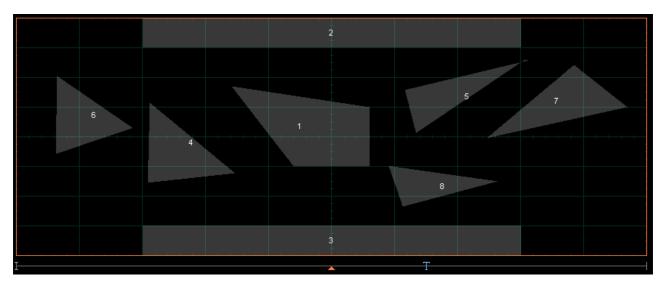


7.7.3.4.2 Delete Polygon

Delete Polygon


The **Delete Polygon** function allows you to delete one of the eight polygons.

To delete a polygon:


1. Click **Edit Mask** from **Create Mask** menu. Then click **Edit** Click on any vertex of the polygon you want to delete.

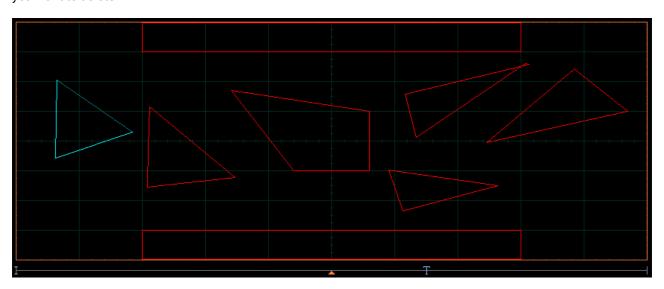

2. Click the **Delete Polygon** button. You will see the mask without the deleted polygon.

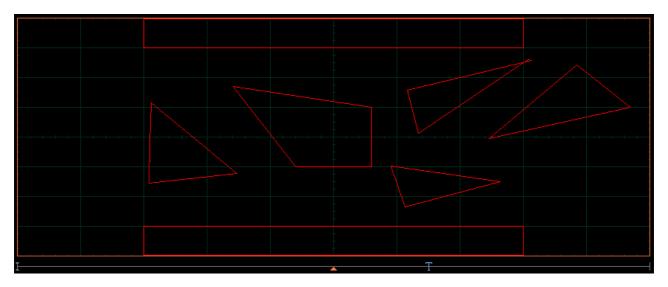

3. Click off the **Edit** button to get a mask without the deleted polygon (see figure below).

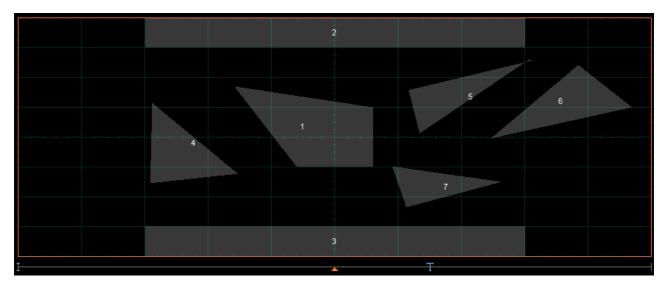


7.7.3.4.3 Add Point

+ Add Point


The Add Point function adds a point on the selected polygon in a Mask.

To add a point:


1. Click **Edit Mask** from the **Create Mask** menu. Then click **Edit** Click on the polygon that you want to edit, and then click on a vertex of the polygon.

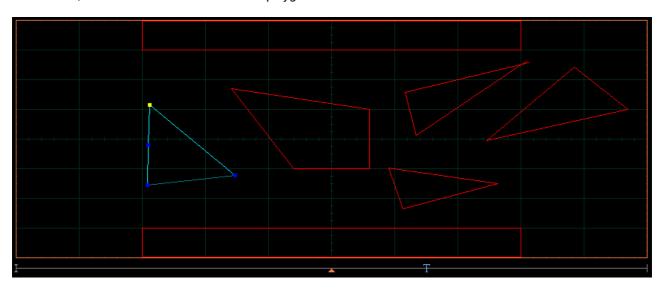


2. Click **Add Point**. A new point, highlighted in yellow, will appear counter-clockwise of the selected point. You can continue to edit this point.

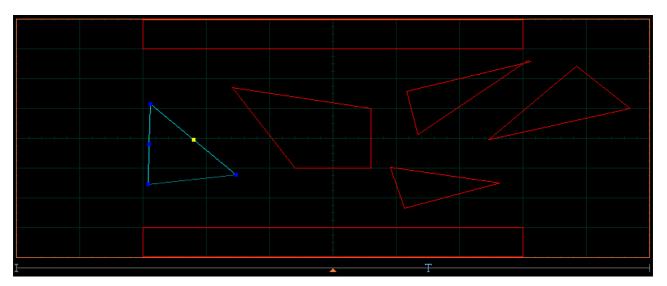

3. Click and hold the left mouse button on the new point, then drag the mouse to move it to the desired position. Release the mouse button when finished.

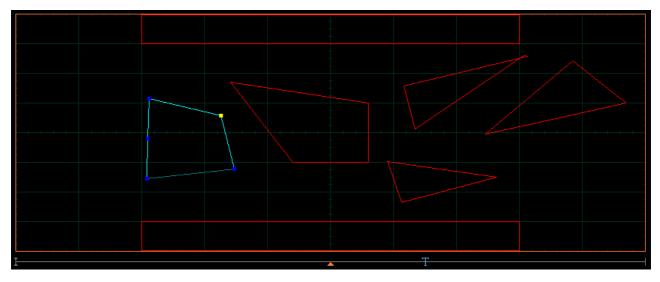

4. Click off the Edit button to get a mask with a polygon having an additional point (see figure below).

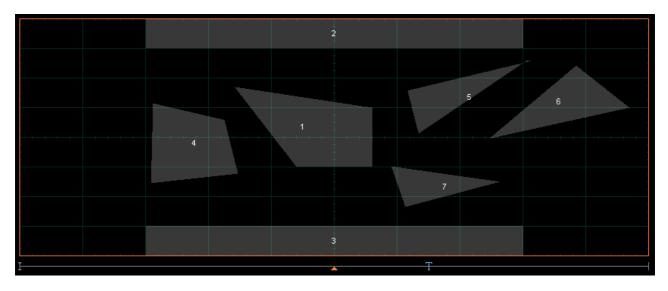


7.7.3.4.4 Delete Point

- Delete Point


The **Delete Point** function deletes a point on a selected polygon of a **Mask**.

To delete a point:

1. Click **Edit Mask** in the **Create Mask** menu. Then click **Edit** Click on the polygon that you want to edit, and then click on a vertex of the polygon.

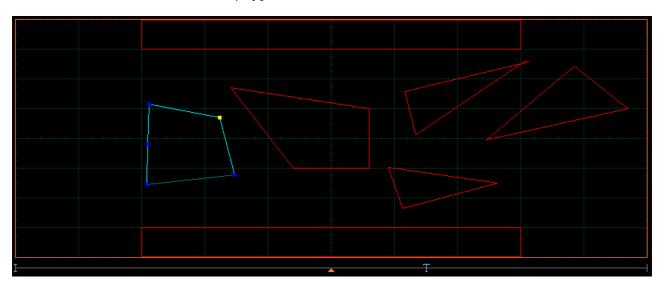

2. Click the **Delete Point** button. The point will be deleted.

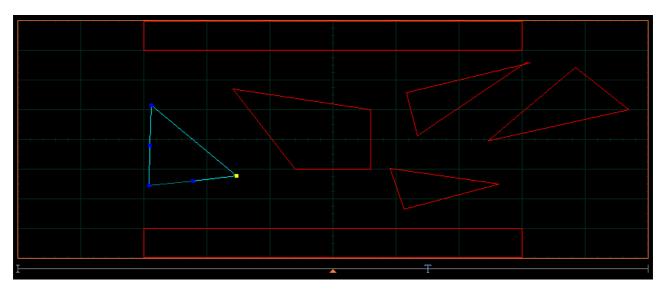

3. Click off the **Edit** button to get a mask with the modified polygon (see figure below).

		2			
			5	6	
	1	+			
4					
			7		
		3			
I			T		

7.7.3.4.5 Delete All

🏷 Delete All


The Delete All function allows you to delete the mask that you are editing.

To delete a mask with all polygons:

1. Click Edit Mask in the Create Mask menu. Then click Edit 🕞 Edit

2. Click Delete All. You will see the screen without masks.

7.7.4 Run Until

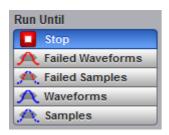

The five choices are:

- **Stop** Run the test until the Stop button is pressed.
 - Failed Waveforms Run until a set number of failed waveforms occur.
 - Failed Samples Run until a set number of failed samples occur.
 - Waveforms Run until a set number of waveforms occur.
 - Samples Run until a set number of samples occur.

Stop

The **Stop** function runs a mask test until the **Stop** button is pressed. Use **Stop** mode when you want the mask test to run continually and not stop after a fixed number of failures or acquisitions. For example, you may want the mask test to run overnight and not be limited by a number of failures or acquisitions.

Failed Waveforms

The **Failed Waveforms** function runs the mask test until a set number of failed waveforms are acquired. When **Failed Waveforms** is selected you can set the number of failures from the <u>**# of Failed Wfms**</u> variable.

Failed Samples

The **Failed Samples** function runs the mask test until a set number of failed samples are acquired. When **Failed Samples** is selected you can set the number of failed samples from the <u># of Failed Smpls</u> variable.

Waveforms

The **Waveforms** function runs the mask test until a set number of waveforms are acquired. When **Waveforms** is selected you can set the number of waveforms from the <u>**# of Waveforms**</u> variable.

Samples

The **Samples** function runs the mask test until a set number of samples are acquired. When **Samples** is selected you can set the number of samples from the <u>**# of Samples**</u> variable.

7.7.5 # of Failed Wfms, # of Failed Smpls, # of Waveforms and # of Samples



When **Failed Waveforms** in the **Run Until** menu is selected, the **# of Failed Wfms** variable sets the number of failed waveforms. After this number is reached, acquisition stops.

When **Failed Samples** in the **Run Until** menu is selected, the **# of Failed Smpls** variable sets the number of failed samples. After this number is reached, acquisition stops.

When **Waveforms** in the **Run Until** menu is selected, the **# of Waveforms** variable sets the number of waveforms. After this number is reached, acquisition stops.

When **Samples** in the **Run Until** menu is selected, the **# of Samples** variable sets the number of samples. After this number is reached, acquisition stops.

7.7.6 Select Action



One of two actions can be selected.

Веер

Beep produces an audio tone when any failure occurs.

Save

Save recalls the Windows **Save Waveform As Dialog** that allows you to select the type of format you want to save the waveform as. You can select one of three types of waveform formats:

- Binary format with **.wfm** extension.
- Verbose format with .txt extension.
- Y values formats with **.txty** extensions.

When a mask test is started, all waveforms that have data points sampled in the mask regions and margin regions (failures) are stored into the memory in the directory **Mask Test Files**.

7.7.7 Erase Mask

🏷 Erase Mask

The Erase Mask function allows you to erase the mask that is under test.

7.7.8 Recall User Mask

🥊 Recall User Mask 🛛

Clicking the **Recall User Mask** button recalls the **Windows Recall Mask** dialog. You can recall a saved mask from any drive on the computer. Saved masks have the extension .pcm.

7.7.9 Save User Mask

Save User Mask

Clicking the **Save User Mask** button recalls the Windows **Save Mask As Dialog**. You can save the mask to any drive on the computer. Saved masks have the extension **.pcm**.


7.8 Mathematics Menu

f⇔ Math

Waveform analysis

Once you have acquired or taken measurements on waveforms, the oscilloscope can mathematically combine them to create a waveform that supports your data-analysis task. For example, you can define math waveforms mathematically (+, -, ×, /). You can also differentiate or integrate a single waveform.

The **PicoScope 9400A** supports mathematical combination and functional transformation of the waveforms that it acquires. The figure below shows this concept.

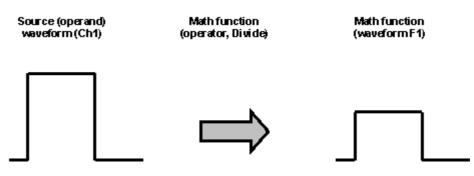

Functional transformation of an acquired waveform

Create math waveforms to support the analysis of your channel and reference waveforms. By combining and transforming source waveforms and other data into math waveforms, you can derive the data view that your application requires.

The **Mathematics** menu allows you to define up to four math functions. Each function consists of a math operator and operands. A function is calculated on data adjusted by the calibration factor from a selected source(s), and a new waveform (called a function) is generated by the computation. You can place markers on functions, make measurements on functions, or store functions to waveform memories.

Mathematics Help X Function Scaling Zoom	Mathematics I Help X Function Scaling Zoom	
♥ On ♥ Visible Category Image: Second state stat	Complex Scale Magnitude Re Real Magninary	Mathematics 2 Help X Function Scaling Zoom Z1 Z2 Z3 Z4 Enable
Operator + Add - Subtract × Multiply ÷ Divide [x] Ceil [x] Floor [x] Fix [x] Round [x] Absolute x Invert	Scale Type	Main / Zoom Zoom Area 50 % / 50 % Combined 25 % / 75 % Separate 0 % / 100 % Separate
(*+*)/2 Common ax+b Rescale Operand 1 Operand 2 Ch1 ▼ Constant Round To Constant 10 mV 400 m ▼ ▲ 0 ▼ ▲	100 mV ▼ ▲ D ▼ ▲ Position Offset 0 div 0 V ▼ ▲ 0 ▼ ▲	Horizontal Zoom Horizontal Factor 5 5 6 6 7 7 7 8 7 8 7 8 7 8 7 8 7 8 7 8 7 8
Multiplier Offset		Vertical Zoom Source
Actions for Function Image: Measure Image: Save Image: Label Image: Save		Vertical Factor Vertical Position

The Mathematics Menu

You can use the waveform math function capabilities to perform math operations on one or more source waveforms. For example, you can subtract channel two from channel one to make a differential measurement. Or, if one channel is measuring current and another channel is measuring voltage, you can use a function to multiply the two channels together and display the instantaneous power as a third waveform. This new waveform can then be measured with markers, or automatic measurements, such as Peak-Peak or AC RMS.

You can define up to four functions and, in most cases, a function may be used as a source for another function, so the PicoScope 9400A can perform more complex math operations. Select the function you want to define: F1 to F4. Select the operator and source(s) you want to use in the function. If the sources you have selected are active, the scope is triggered, and you will see the display update as you configure the function.

When a function is calculated, it can be displayed on the screen, evaluated with the PicoScope 9400A measurement features, stored in memory or to disk, or used as the source for another function. All math operators, such as invert, subtract, multiply, and divide, are post-processing algorithms so functions are calculated only after their sources have been acquired. All waveform math functions operate on waveform data that is on the display.

7.8.1 Function

Mathematic	CS Help 🗙 ling Zoom			
F1 F2	F3 F4			
Category ★: Arithmetic → Trigonometry → Bit Operation f & Formula Editor Operator	Σ Miscellaneou			
+ Add × Multiply x Ceil Fix Fix Absolute (***) Common	Subtract Divide Solution Floor Solution Round Toret ax+b Rescale			
Operand 1 Ch1 Round To	Operand 2 Constant Constant 400 m			
Multiplier	▼ ▲ 0 ▼ ▲ Offset 0 ▼ ▲ ▼ ▲ 0 ▼ ▲			
Actions for Function Image: Measure Image: Save Image: Save Image: Save				

The Math Function Menu

7.8.1.1 Select



The Select menu allows you to select function F1 to F4.

Clicking the F1-F4 options:

- Selects one of the functions.
- Assigns the function soft keys to the selected function.

7.8.1.2 On



Clicking the On:

- Turns the calculation for selected function.
- Changes the label from on to off or vice versa.



You can display all four functions on the screen at the same time.


7.8.1.3 Visible

💿 Visible

Clicking the **Visible** button turns the display for the selection on or off. Turning **Visible** off does not turn off the selected function. To turn off the selected function, use the <u>On</u> button.

Visible turns on or off the display of selected math waveform. Turning Visible off turns off the markers and defines parameters for the histogram window and eye window. However, turning Visible off doesn't turn off marker measurements, automatic measurements, histogram measurements, eye-diagram measurements or mask tests.

7.8.1.4 Category

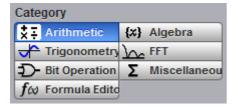

Math functions are are grouped by categories. Click on the selected **Category** to see all math operators belonging to that category.

There are seven categories used in the PicoScope 9400A Series:

- Arithmetic
- Algebra
- Trigonometry
- FFT
- Bit Operation
- Miscellaneous
- Formula Editor

7.8.1.5 Operators

Each Category has its list of math operators.

You can select any of the math functions as a math operator to act on the operand or operands. To see the resultant waveform, select one from the **Operator** menu. A waveform math operator is a math function that requires one or two, or maybe four, sources. The operators that involve two waveform sources are: **Add**, **Subtract**, **Multiply**, **Divide and Common**. The operators that involve one waveform source are: **Ceil**, **Floor**, **Fix**, **Round**, **Absolute**, **Invert and Rescale**.

ps9400Aug-1

Menu

Mathematics 🔝					
Function Sca	ling	Zoom			
F1 F2		F3 F4			
On 🕑		Visible			
Category					
Arithmetic	{X}	Algebra			
Trigonometry	h	FFT			
D- Bit Operation	Σ	Miscellaneou			
<i>f</i> ⊗ Formula Edito					
Operator					
+ Add	-	Subtract			
× Multiply	÷	Divide			
🔀 Ceil	[×]	Floor			
X Fix	[×]	Round			
X Absolute	x	Invert			
(X+)) Common	ax+b	Rescale			
Operand 1		rand 2			
Ch1 🔻		Ch2			
Round To	Round To Constant				
		400 m			
	-				
1 0					
V A D V A					

Mathematics categories and operators

7.8.1.5.1 Arithmetic Operators

Cate	Category				
×÷.	Arithmetic	{ X }	Algebra		
<u></u> →	Trigonometry	\mathbf{M}	FFT		
Ð	Bit Operation	Σ	Miscellaneou		
f∞	Formula Edito				
Oper	ator				
+	Add	-	Subtract		
×	Multiply	÷	Divide		
[z]	Ceil	[×]	Floor		
[%]	Fix	[×]	Round		
×	Absolute	x	Invert		
(x+y)	Common	ax+b	Rescale		

Below is a description of the twelve arithmetic operators.

Add

Adds, point by point, operand 1 and operand 2 voltage values. You can use **Add** to look at the common-mode component of differential waveforms.

Subtract

Subtracts, point by point, operand 2 from operand 1. You can use **Subtract** to make a differential measurement or to compare two waveforms.

Multiply

Multiplies, point by point, operand 1 and operand 2. Use Multiply to make electrical power measurements.

Divide

Divides, point by point, operand 1 by operand 2 voltage values. You can use **Divide** to measure the ratio of any two signals, for example the output voltage divided by the input voltage of an amplifier circuit.

Ceil

The **Ceil** function takes the smallest integer not less than the expression. You can use the **Round To** control.

Floor

The **Floor** function takes the largest integer not greater than the expression. The oscilloscope takes a lowest Y value for each X coordinate. You can use the **Round To** control.

Fix

The Fix function returns the integer portion of a number. You can use the Round To control.

Round

The **Round** function is used to round a numeric field to the number of decimals specified. You can use the **Round To** control.

Absolute

The **Absolute** value function makes positive all vertical values of the waveform data points on operand 1. The results provide the vertical plot data for a waveform. The horizontal scale is not changed.

Invert

Inverts the voltage values, point by point, of the waveform on operand 1. You can use **Invert** to compare the input and output of an inverting amplifier.

Common

The Common operation adds operand 1 and operand 2 voltage values and divides by 2, point by point.

Rescale

This function rescales the source values by a factor a and an offset b (Y=aX+b).

7.8.1.5.2 Algebraic Operators

Cate	Category				
×÷.	Arithmetic	{X}	Algebra		
÷	Trigonometry	\mathbf{M}	FFT		
Ð	Bit Operation	Σ	Miscellaneou		
f⊗ Formula Edito					
Operator					
e ^x	Exp (e)	ln X	Log (e)		
10^x	Exp (10)	lg X	Log (10)		
ax	Exp (a)	log X	Log (a)		
d/dx	Differentiate	\$f (x)	Integrate		
x ²	Square	٧x	Square Root		
\mathbf{x}^3	Cube	x^a	Power (a)		
x	Inverse	1x.y2	SqRt of the St		

Below is a description of the fourteen algebraic operators.

Exponent (e)

The natural logarithm base e is raised to an exponent equal to the vertical value of a waveform data point of operand 1. Thus **Exponent (e)** exponentiates each point of the waveform. The results provide the vertical plot data for a waveform. The horizontal scale is not changed.

Exponent (10)

The base 10 is raised to an exponent equal to the vertical value of a waveform data point of operand 1. Thus **Exponent (10)** exponentiates each point of the waveform. The results provide the vertical plot data for a waveform. The horizontal scale is not changed.

Exponent (a)

The base *a* is raised to an exponent equal to the vertical value of a waveform data point of operand 1. Thus **Exponent (a)** exponentiates each point of the waveform. The results provide the vertical plot data for a waveform. The horizontal scale is not changed. Use the **Base** control to select the *a* value.

Logarithm (e)

Takes the natural logarithm (base e) of the absolute vertical value of each waveform data point of operand 1. The natural logarithm results provide the vertical plot data for a waveform. The horizontal scale is not changed.

Logarithm (10)

Takes the base-10 logarithm of the absolute vertical values in the waveform record of operand 1. The results provide the vertical plot data for a waveform. The horizontal scale is not changed.

Logarithm (a)

Takes the base-*a* logarithm of the absolute vertical values in the waveform record of operand 1. The results provide the vertical plot data for a waveform. The horizontal scale is not changed. Use the **Base** control to select the *a* value.

Differentiate

Calculates the discrete derivative of the vertical value of the waveform data points of operand 1. You can use **Differentiate** to measure the instantaneous slope of a waveform. The horizontal scale is not changed. This may be used to measure, for example, the slew rate of an operational amplifier.

Integrate

Calculates the integral of the vertical values of the waveform data points of operand 1. The results provide the vertical plot data for a waveform. The horizontal scale is not changed. This function can be used to calculate the area in volt-seconds under a pulse or other waveform.

Square

The Square operator calculates the square of the input signal.

Square Root

The **Square Root** operator calculates the square root of operand 1.

Cube

The **Cube** operator calculates the cube of the input signal.

Power (a)

The **Power (a)** operator calculates operand 1 raised to the power of *a*. Use the **Exponent** control to select the *a* value.

Inverse

```
The Inverse operator calculates the function Y = 1/X.
```

Square Root of the Sum

The Square Root of the Sum operator calculates the square root of the sum of the squares of two signals.

7.8.1.5.3 Trigonometric Operators

Category				
X Arithmetic	{x} Algebra			
Trigonometry				
D- Bit Operation	∑ Miscellaneou			
f Formula Edito				
Operator				
Sine	ASine			
A Cosine				
+ Tangent	ATangent			
+ Cotangent	ACotangent			
H SineH	V CosineH			
TangentH	CotangentH			

Below is a description of the twelve trigonometric operators. There are four standard trigonometric functions, four inverse trigonometric functions, and four hyperbolic functions.

You can use the **Radian/Vert div** control with many of the trigonometric operators to set the scaling of vertical divisions to radians.

Sine

The **Sine** operator calculates the function Y = sin α X, where α is defined by the **Radian/Vert Unit** (V, A, W) control.

Cosine

The **Cosine** operator calculates the function Y = $\cos \alpha X$, where α is defined by the **Radian/Vert Unit** (V, A, W) control.

Tangent

The **Tangent** operator calculates the function Y = tan α X, where α is defined by the **Radian/Vert Unit** (V, A, W) control.

Cotangent

The **Cotangent** operator calculates the function $Y = \cot \alpha X$, where α is defined by the **Radian/Vert Unit** (V, A, W) control.

ArcSine

The **ArcSine** operator calculates the function Y = $\arcsin \alpha X$, where α is defined by the **Radian/Vert Unit** (V, A, W) control.

ArcCosine

The **ArcCosine** operator calculates the function Y = $\arccos \alpha X$, where α is defined by the **Radian/Vert Unit** (V, A, W) control.

ArcTangent

The **ArcTangent** operator calculates the function Y = arctan α X, where α is defined by the **Radian/Vert Unit** (V, A, W) control.

ArcCotangent

The **ArcCotangent** operator calculates the function Y = arccot α X, where α is defined by the **Radian/Vert Unit** (V, A, W) control.

SineH

The **SineH** operator calculates the hyperbolic sine function $Y = \sinh(X)$.

CosineH

The **CosineH** operator calculates the hyperbolic cosine function $Y = \cosh(X)$.

TangentH

The **TangentH** operator calculates the hyperbolic tangent function Y = tanh(X).

CotangentH

The **CotangentH** operator calculates the hyperbolic cotangent function $Y = \operatorname{coth}(X)$.

7.8.1.5.4 FFT

Category						
Arithmetic	{X}	Algebra				
Trigonometry	$\overline{\mathbf{b}}$	FFT				
D- Bit Operation	Σ	Miscellaneou				
<i>f</i> ⊗ Formula Edito						
Operator						
		T (Complex)				
Operator	IFF	T (Complex) FT Phase				

The **FFT** menu allows you to control the operation of the FFT (Fast Fourier Transform), including spectrum selection and display, and also a choice of six FFT windowing functions. Refer to the **Scaling** menu for formatting a spectrum with different complex scales, and also for scaling and positioning it.

7.8.1.5.4.1 FFT Basics

The **PicoScope 9400A Series** displays and measures signals in the time domain where the vertical axis is amplitude and the horizontal axis is time. This is the best way to view most waveforms. However, there are times when you want to know the frequency content of a waveform.

In 1807 the French mathematician Jean Baptiste Fourier developed the Fourier series and Fourier transform to solve thermodynamics problems. Using the Fourier series, any periodic waveform can be constructed by adding a DC term to a series of sine and cosine terms. You can use the Fourier transform to mathematically relate the time domain and the frequency domain.

The Discrete Fourier Transform (DFT) is used to convert sampled time domain waveform data into the frequency domain. However, the DFT is slow because it requires a large number of calculations. This led to the development of the Fast Fourier Transform (FFT), which runs faster than the DFT on digital computers.

When an FFT, or Fast Fourier Transform, is added to an instrument, signals can also be displayed in the frequency domain. The frequency domain allows you to see the frequency content of a signal. FFT functionality added to an instrument allows you to analyze a signal from two different, but complementary, points of view: the frequency domain and the time domain. The FFT process mathematically converts the standard (in this case repetitive) time-domain signal into its frequency components, providing spectrum analysis capabilities. Being able to quickly look at a signal's frequency components and spectrum shape is a powerful research and analysis tool.

FFT is an excellent troubleshooting aid for:

- Finding crosstalk problems.
- Finding distortion problems in analog waveforms caused by non-linear amplifiers.
- Adjusting filter circuits designed to filter out certain harmonics in a waveform.
- Testing impulse responses of systems.
- Identifying and locating noise and interference sources.

The FFT display shows the amplitude for each frequency component in your waveform on the vertical axis, and frequency on the horizontal axis. The figure below illustrates what an FFT does. The FFT transforms a time record of N samples into a frequency record of N points from 0 Hz to Fs, where Fs is the sampling frequency. The resolution or the spacing between the points in the frequency record is Fs/N.

🔹 Pico Technology PicoScope 9404A Sampler Extended Oscilloscope 6 GHz 12-bit ADC 500 MS/s RT 1 TS/s ET 🔄 🖂 😰						
File Edit View Setup Measurements Analysis System Utility Help						
Acquire 🛛 🔝 👪	🗞 Clear 🚺 Run 🔲 S	top 👔 Single 🚺 🛄 Autoscale	🔽 Default Setup 👔	🔁 🛅 Copy 🔝 Help	Mathematics 🔳 💷 🔀	
Time Base Acquisition Zoom Acquisition Mode	100 mV/ 0 V		5 µs/ RT Avg 16 50 MSa/s 2.5 KS 740 Wfm		Function Scaling Zoom	
Average Average Min-Max Envelope Min Envelope Min Anx Envelope M Peak Detect If High Resolution If Segmented					Complex Scale Magnitude Re Real Magnitude	
Average N 15 T & D T &	Ft-		n (second an et Marting of Participation of the second		Scale Type Linear Logarithmic Scale 15 dBV/div C A D V A	
Run Until	Channel 1 15 dBV/	div 0 V	5 µs/div -2	Auto(Max) Fiel Min Play + Position 5 ps Hz	Position Offset 0 div • A 0 V A • A 0 V A	
			0 div Pos Delay • D •	Ch4 Freerun Trig'd		

The 1 MHz sine-wave signal shown in both the Time Domain and the Frequency Domain

The frequency Fs/2 is a unique frequency referred to as the Nyquist frequency. At the Nyquist frequency there are exactly two samples on every cycle of the input signal. Signals above the Nyquist frequency become aliased, which means that they appear as signals of a lower frequency, because there are not enough sample points on each cycle of the signal to determine the correct frequency.

It turns out that the points above Fs/2 are mirror images of the points below Fs/2. They are not displayed because they do not provide any additional information. Therefore, N time samples results in N/2 displayed frequency points.

You can use the FFT capability to display both the magnitude and the phase, or the real and the imaginary parts of the frequency components of the signal, using a linear or decibel vertical scale.



Use the **Scale** menu for further magnification and spanning of the FFT, and for selecting the Complex Scale of the display.

You can perform an FFT on any waveform. The record length of the waveform can be up to 32 768 points. Because the **PicoScope 9400A Series** performs FFT calculations on a complex trace record, you should use the shortest record length that provides adequate resolution, as FFT waveforms update slowly at long record lengths.

The **PicoScope 9400A Series** offers a choice of six FFT windowing functions, which modify the time-domain data to minimize "leakage" of energy across frequency components.

The five automated measurements FFT Magnitude, FFT Delta Magnitude, THD (Total Harmonic Distortion), FFT Frequency, and FFT Delta Frequency are intended for FFT waveforms. You can also use the markers to make magnitude and phase measurements on frequency domain traces.



Use the Measure and Marker menus for further spectral measurements of FFT waveforms.

FFT Resolution

Amplitude Resolution

Amplitude resolution is influenced by the windowing function used and the vertical adjustment of the time domain waveform. For maximum amplitude resolution, the time domain waveform should be adjusted so that it is centered vertically on the graticule and is tall as possible without going beyond the graticule, above or below.

Frequency Range and Resolution

The range and resolution of the frequency spectrum displayed by the **PicoScope 9400A Series** are determined by the sample rate and record length. The sample interval is determined by the timebase and record length. You can increase the record length for better FFT resolution but all points must be on the display for them to be included in the FFT calculation. The FFT calculation time will also increase because more waveform samples must be processed.

The FFT's resolution is expressed as follows:

FFT Resolution = Effective sample rate / Record length

The FFT frequency range before scaling will be from 0 Hz to one half of the sample rate. Ensure that the sample rate is at least twice the highest anticipated frequency component of the waveform source you are measuring. Otherwise, the measurement results will exhibit aliasing and any measurements will be inaccurate.

The FFT's frequency range is expressed as follows:

FFT Frequency Range = Effective sample rate / 2

FFT Aliasing

Aliasing occurs when the input signal includes components at frequencies higher than the Nyquist frequency. These frequency components appear in the FFT waveform display as peaks at lower frequency. The higher-frequency components are reflected around the Nyquist frequency. For example, a frequency component 1 GHz above the Nyquist frequency will appear as a peak 1 GHz below the Nyquist frequency in the FFT waveform display.

You can eliminate aliasing by setting the effective sampling rate to be at least twice the highest frequency in the input signal. Increasing the record length or decreasing the timebase scale will increase the effective sampling rate.

7.8.1.5.4.2 FFT Operators

Category						
X Arithmetic	{X}	Algebra				
Trigonometry		FFT				
D- Bit Operation	Σ	Miscellaneou				
f ⊗ Formula Edito						
Operator						
		T (Complex)				
Operator	IFF	T (Complex) FT Phase				

Below is a description of the six FFT operators.

FFT (Complex)

The **FFT (Complex)** operator calculates the function Y = FFT (X). This is a complex function that can be used as a source for a further **Inverse FFT**. The **Scaling/Complex Scale** menu provides selection of the display format of a waveform that has a complex value. You can select either **Magnitude**, **Phase**, **Real** or **Imaginary** complex scale.

Inverse FFT (Complex)

Inverse FFT calculates the time-domain function from its frequency-domain data (spectrum). Only a complex function can be used as a source for **Inverse FFT**.

FFT Magnitude

The peak signal amplitude is represented on a linear scale, in the same units as the input signal. You can choose **Vertical Zoom**, **Vertical Position**, **Horizontal Zoom** and **Horizontal Position** to provide complete control over the spectrum magnitude.



to reduce the DC components in the FFT spectrum of the

FFT Phase

signal.

The **FFT Phase** is measured with respect to a cosine whose maximum occurs at the left-hand edge of the screen, at which point it is 0°. Similarly, a positive-going sine wave starting at the left-hand edge of the screen has $a -90^{\circ}$ phase. You can display phase data as a function of frequency in degrees.

Your source waveform record may have a noise component with phase angles that randomly vary from $-\pi$ to $+\pi$. This noise could make the phase display unusable. In such a case, use phase suppression to control the noise. You can reduce the noise phase for magnitudes below a threshold level by using the **Phase Suppression** and **Suppression Level** controls. The **Suppression Level** control allows you to adjust the phase suppression level. You specify the phase suppression level in dB with respect to a peak having maximum amplitude among other peaks. If the magnitude of the frequency is greater than this threshold, then its phase angle will be displayed. FFT magnitudes below this level will have their phase set to zero.



FFT Real

The **FFT Real** operator displays the linear magnitude of the real part of the spectral magnitude only. This is useful if you process the spectrum off-line and transform it back into a time-domain trace. You could save the real spectrum into a waveform memory.

FFT Imaginary

The **FFT Imaginary** operator displays the linear magnitude of the imaginary part of the spectral magnitude only. This is useful if you process the spectrum off-line and transform it back into a time-domain trace. You could save the imaginary spectrum into a waveform memory.

7.8.1.5.4.3 FFT Windows


Windowing is a technique that compensates for some of the limitations of FFT analysis. The FFT operation assumes the time record repeats infinitely. Unless there is an integral number of cycles of the sampled waveform in the record, a discontinuity is created at the end of the record.

A pure sine wave transforms into a single spectral component, but a discontinuity in the time domain causes a frequency-domain widening or spreading out of the waveform, referred to as "spectral leakage". Two figures below show a sine wave FFT with and without leakage.

A solution to the leakage problem is to force the waveform to zero at the beginning and end of the time record so that no transient is present when the time record is replicated. This is done by multiplying the time record by a window function, which produces its own effect in the frequency domain. However, the effect produced by the window function is a big improvement over using no window function at all.

Windowing Process

The process of windowing the data is shown below. The FFT time domain record is multiplied point by point with the FFT window. When the Hann or Blackman/Harris window is used, the data point amplitudes taper to zero at the end of the record.

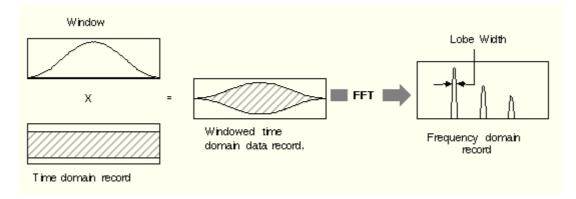

Multiplying the time domain data record by a window



When using windows, be sure that the most interesting parts of the signal in the time domain record are positioned in the centre of the window so the tapering does not cause significant errors.

Types of FFT Window

The window type defines the bandwidth and shape of the equivalent filter associated with the FFT processing. The **PicoScope 9400A Series** provides a rectangular FFT window, which does not taper the time domain data, and five tapering FFT windows of different shapes.

The six supported FFT window functions are:

- Rectangular window
- Hamming window
- Hann window
- Flattop window
- Blackman-Harris window
- Kaiser-Bessel window



Remember that windows work by weighting points in the middle of the waveform record higher than those at the ends of the record.

Each time-domain FFT windowing function corresponds to a filter in the frequency domain. Each frequency domain filter has a high central lobe, or passband, whose width determines how well adjacent frequency components can be resolved. The height of the side lobes surrounding the central lobe determines how much leakage can occur.

Equations for the FFT Windows

Four windows used in the **PicoScope 9400A Series** (Hamming, Hann, Flattop, and Blackman-Harris) are derived from a cosine series. The window type is obtained by substituting the correct coefficients for the cosine terms into the following equation:

$$Tn = \sum_{i=0}^{m} \left\langle a_i \cos\left[\frac{2\pi}{N}\left(n - \frac{N-1}{2}\right)\right] \right\rangle$$

where: Γn is the window data area, a is the array of window coefficients, N is the window length, m is the window order, *i* is the index to the window coefficient array, and n is the index to the window data array. n = 0 to N-1.

The table of correction coefficients for different FFT windows indicates the values to substitute into equation to obtain the various windows.

Correction coefficients for different FFT windows

Coefficients	Rectangular	Hamming	Hann	Flattop	Blackman- Harris	Kaiser- Bessel
М	0	1	1	2	3	3
a0	1.0	0.543478	0.5	0.281	0.35875	0.40243
a1	0.0	0.456522	0.5	0.521	0.48829	0.49804
a2	0.0	0.0	0.0	0.198	0.14128	0.09831
a3	0.0	0.0	0.0	0.0	0.01168	0.00122
Highest side lobe	-13 dB	-43 dB	-32 dB		-94 dB	-69 dB
3 dB Bandwidth in bins	0.89	1.3	1.44		1.92	1.72
Scallop loss	3.96 dB	1.78 dB	1.42 dB		0.81 dB	1.02 dB
Zero Phase Reference	50%	50%	50%		50%	50%

For the Rectangular window: $\Gamma n = 1$.

The best window for a given application depends on various factors. Most measurements require the use of a window such as the **Hann** or **Flattop** windows, which are the appropriate windows for typical frequency analysis measurements. Choosing between different windows involves a trade-off between frequency resolution and amplitude accuracy.

For harmonic analysis of continuous-time signals, the best window choice depends on the signal characteristics and on the particular characteristics that are of most interest. The use of **Blackman-Harris**, **Kaiser-Bessel**, **Hann** or **Hamming** windows typically makes observation of harmonics easier.

The rectangular window can be typically used for impulse response testing since the beginning points are usually zero and the data tapers to zero at the end of the record. The beginning points are zero because the impulse is normally placed in the centre of the time-domain record at the zero-phase reference point. Other windows can be used if desired. If phase is not important, the impulse can be placed at the beginning of the record. For this case, the window must be **Rectangular**.

The rectangular window (also referred to as the Uniform window) is effectively no window because the samples are left unchanged. All points in the record are multiplied by 1. In the frequency domain, the filter shape is sin(x)/x.

RECTANGULAR	


Time-domain characteristics for rectangular window

The rectangular window is useful for transient signals and signals where there are an integral number of cycles in the time record. It is the best window to use when you want to examine the frequency spectrum of a non-repetitive signal. Also, it can be typically used for impulse response testing since the beginning points are usually zero and the data tapers to zero at the end of the record. The beginning points are zero because the impulse is normally placed in the centre of the time domain record at the zero phase reference point. Other windows can be used if desired. If phase is not important, the impulse can be placed at the beginning of the record. For this case, the window must be rectangular.

The rectangular window generally gives the best frequency resolution because it results in the narrowest lobe width in the FFT output record. It gains frequency resolution at the expense of amplitude accuracy if the frequency of the signal being observed has a non-integer number of cycles in the FFT time record. Signals not in this class show varying amounts of spectral leakage and scallop loss, which can be corrected by using one of the other windows.

Although the rectangular window has the potential for severe leakage problems, in some cases the waveform data in the time record has the same value at both ends of the record, thereby eliminating the transient introduced by the FFT. Such waveforms are called self-windowing. Waveforms such as sine bursts, impulses and decaying sinusoids can all be self-windowing.

The **Hamming** window is a bell-shaped window. It has lower side lobes adjacent to the main lobe than, for example, the **Hann** window.

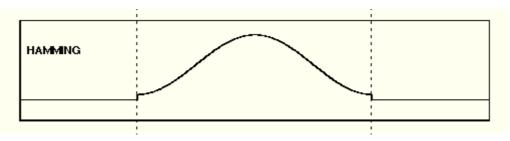


Time-domain characteristics for Hamming window

The **Hamming** window tapers the data to smaller values, but not to zero. It decreases the amount of energy spillover into adjacent frequency bins, increasing the amount of amplitude accuracy at the expense of decreasing the frequency.

Use the **Hamming** window for resolving frequencies that are very close to the same value with somewhat improved amplitude accuracy over the rectangular window.

The **Hann** (or **Hanning**, or **cosine**) window is a bell-shaped window, and it looks like the first half of a sine wave. The **Hann** window multiplies the points in the center of the record by 1 and multiplies the points at the start and the end of the record by zero. It decreases the amount of energy spillover into adjacent frequency bins, increasing the amount of amplitude accuracy at the expense of decreasing the frequency resolution because of wider lobe widths. The shape of the **Hann** window is a compromise between amplitude accuracy and frequency resolution.

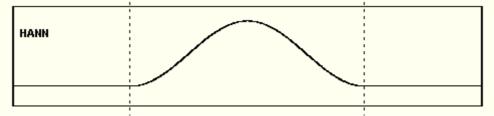

Time domain characteristics for Hann window


The **Hann** window is useful for frequency resolution and general-purpose use. Even though the overall shape of the time-domain signal has changed, the frequency content remains basically the same. The spectral line associated with the sinusoid spreads out a small amount in the frequency domain. It is good for resolving two frequencies that are close together or for making frequency measurements. The **Hann** window also improves amplitude accuracy.

The **Hann** window, compared to other common windows, provides good frequency resolution at the expense of somewhat less amplitude accuracy.

The **Flattop** window has a fatter (and flatter) characteristic in the frequency domain. The flatter top on the spectral line in the frequency domain produces improved amplitude accuracy, but at the expense of poorer frequency resolution when compared with the **Hann** window.

The flattop window is the best window for making accurate amplitude measurements or frequency peaks.

A **Blackman-Harris** window is a bell-shaped window. It reduces the leakage to a minimum, has the widest pass band (lowest frequency resolution) and lowest side lobes. It decreases the amount of energy spillover into adjacent frequency bins, increasing the amount of amplitude accuracy at the expense of decreasing the frequency resolution because of wider lobe widths.

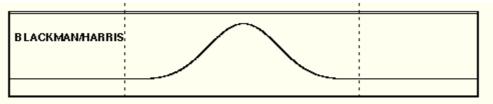

Time domain characteristics for Blackman-Harris window

The **Blackman-Harris** window is the best window for measuring the amplitude of frequencies but worst at resolving frequencies. This window is especially good for viewing a broad spectrum.

This window has resolution bandwidths and scallop losses close to the Blackman-Harris window. Choose the **Kaiser-Bessel** window to view the signal characteristics you are interested in.

7.8.1.5.5 Bit Operation

Bit Operation defines a logical combination of up to four sources. The sources are channels, memories and functions.

Below is a description the of seven bit operations and some auxiliary controls.

Category	
Arithmetic	{x} Algebra
Trigonometry	FFT
Bit Operation	Σ Miscellaneou
<i>f</i> ⇔ Formula Edito	
Operator	
=D- AND	D- XOR
D NAND	
D- OR	-[>> NOT
Operand 1	Operand 2
Ch1 🔻	Ch1 🔻
Operand 3	Operand 4
Ch1 V	Ch1 🔻
Threshold 1	Threshold 2
50 mV	50 mV
Threshold 3	Threshold 4
50 mV	50 mV
	T A O T A

The Bit Operation menu

- AND a logical AND, conjunctive combination.
- NAND a logical NOT AND.
- **OR** a logical OR, disjunctive combination.
- NOR a logical NOT OR.
- XOR a logical exclusive OR.
- NXOR logical negation of exclusive OR.
- **NOT** a logical negation.

Operand 1 - Operand 4

Up to four sources (operands) can be used to define the logic combination. The sources are channels, memories and functions.


Threshold 1 - Threshold 4

Use these controls to set the threshold level for the logic definition of a 1 (one) or 0 (zero) on any source. Each source can have a threshold level set which determines when a voltage value is consider to be a 1 (one) or 0 (zero). A value is considered a 1 when your waveform's voltage level is greater than the threshold level and a 0 when your waveform's voltage level is less than the threshold level.

Inverse Operand

You can invert the polarity of any source to define the necessary logic combination.

7.8.1.5.6 Miscellaneous Operators

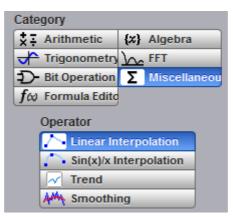

The Miscellaneous Operation menu

Below is a description of the four miscellaneous operators:

Interpolation

When the sample density falls to less than one sample per display column, the oscilloscope can calculate intermediate points to display a waveform. This process is called interpolation.

Linear Interpolation

Draws a line between consecutive waveform data points. It gives an analog look to a digitized waveform. For example, you can see steep edges on waveforms, such as square waves.

Sin(x)/x Interpolation

Uses a sin(x)/x digital filter that improves the reconstruction of the waveform. The reconstruction is done by adding data points between the acquired data points. This function improves accuracy of measurements. It is important for waveforms that can be band limited to $\frac{1}{4}$ of the current effective sample rate.

For each interpolation method use the **Upsample to** control to increase density factor from 2 to 256 points by which to interpolate (upsample).

You can also interpolate waveforms in <u>Scaling</u> mode where the waveforms can be zoomed and positioned vertically and horizontally.

When the PicoScope 9400A acquires a signal in **Equivalent Time Sampling** mode, the effective sampling rate is very high. For example, a 1 Gb/s signal with 1000 samples per unit interval will have a sample resolution of 1 ps that is equivalent to a 1 THz sampling rate. Normally, interpolation would never be needed. In some cases when a lower number of samples per bit are acquired, interpolation is helpful to view the signal. The interpolation is very helpful for **Real Time** sampling mode.

Trend

Trend represents the evolution of timing parameters as line graphs whose vertical axes are the value of the parameter, and horizontal axes the order in which the values were acquired. The information obtained from applying timing parameters can then be analyzed using the trend.

The following trend parameters can be used: Period, Frequency, Positive Width, Negative Width, Rise Time, Fall Time, Positive Duty Cycle, Negative Duty Cycle. Use the **Trend Parameter** control to select the trend parameter.

Smoothing

This allows reduction of unwanted noise and jitter on the signal with a simple, moving-average filter. N-point smoothing can be done with up to a 51-point filter. The number of points N can be selected by the **Smooth Length** variable.

The **Smooth Length** variable defines the number of points N in the moving-average filter used for the smoothing operator. N-point smoothing can be selected from 3 up to 51 points.

7.8.1.5.7 Formula Editor

The **Formula Editor** option allows you to create an arbitrary function of one or more inputs, waveform memories or other formulas. Click **Edit** to enter a new formula or edit an existing one.

Mathematics	🔝 Help 🗙
Function Scalin	ig Zoom
F1 F2	F 3 F 4
On	💿 Visible
Category	
Arithmetic {	x} Algebra
Trigonometry	∽ FFT
D-Bit Operation	Σ Miscellaneou
f ⊗ Formula Edito	
F1=	
	_
	_
Edit	
Edit	

The Mathematics menu with the Formula Editor option selected

FormulaEditor_SmA ×										
F1 = Ch1/2										<u>_</u>
F1[0] = -0.129285165083641										
Category	Algebra Function	ns	Sourc	е			chbl	Digits		
Algebra	Cube (x ³)	Ln	Ch1	Ch2	Ch3	Ch4	+	-	×	1
Trigonometry	Differentiate	Lg	F1	F2	F3	F4	7	8	9	^
	Exp (e)	Log (a)	M1	M2	M3	M4	4	5	6	pi
	Exp (10)	Power (a)					1	2	3	е
	Exp (a)	Square (x ²)		0			0			
	Integrate	Square Root		0]]	(
Inverse SqRt of the Sum Insert Measurement										
Del \leftarrow \leftarrow \rightarrow \rightarrow Clear Cancel OK										

Formula Editor with algebraic functions

The formula editor above shows the algebraic functions that are displayed by default. Click **Trigonometry** to display the trigonometric functions:

Menu

FormulaEditor_SmA											
F1 = Sin (Chl)							<u></u>				
F1[0] = -0.255698671033835							5				
Category	Trigonometry Fu	nctions	Sourc	е			chbD	ligits			
Algebra	Sine	Cotangent	Ch1	Ch2	Ch3	Ch4	+	-	×	1	
Trigonometry	ASine	ACotangent	F1	F2	F3	F4	7	8	9	^	
	Cosine	SineH	M1	M2	M3	M4	4	5	6	pi	
	ACosine	CosineH	Measu	romoi	ata		1	2	3	е	
	Tangent	TangentH					0		,	_	
	ATangent	CotangentH		0			1]	()	
Insert Measurement											
$\begin{array}{c c} \text{Del} & \longleftarrow & \longleftarrow & \longrightarrow & \text{Clear} & \text{Cancel} & \text{OK} \end{array}$											

Formula Editor with trigonometric functions

7.8.1.6 Operand 1 - 4



The instrument performs math functions on the source(s) (operands) you select. The math operator is performed either on operand 1, or on operand 1 and operand 2, or on operands 1 to 4. The number of operands used depends on the math operator you select. For example, **Add** requires two operands while **Invert** requires only one operand.

The **Operand 1 to 4** controls let you select from channels, functions, waveform memories or constants.

You should be aware of some conditions of the math function menu:

- If the operand waveforms have different record lengths, the function uses the shortest record length. The instrument finds the nearest point in the longer waveform record that corresponds to the current point in the shorter record. It then performs math functions on those points and skips non-corresponding points in the longer record.
- If two operands have the same timebase scale, the resulting function has the same timebase scale, which results in the proper time scale for the function.
- If two operands have different horizontal scale settings (possibly when using a waveform memory as a operand) the resulting function has the same horizontal scale as operand 1.
- Constant operands have the same time scale as the associated waveform operand.
- You can use each function as an operand for another function. This allows you to construct equations with a large number of operators and operands.

If you select a math operator that uses more than one operand, select source 2 from the **Operand 2** drop down list box. When the **Constant** option is selected in the **Operand 2** drop-down list box the **Constant** variable becomes active. You can use the **Constant** variable to control the value of operand 2 from –100 million to 100 million.

7.8.2 Scaling

The **Scaling** menu lets you control vertical magnification and positioning without affecting the channels and timebase scaling controls.

Mathematic Function Sca	cs (ling	Zoom
F1 F2		F3 F4
ပံ On	2	🕥 Visible
Vertical	I Sca	aling
Complex Scale		
Magnitude	φ	Phase
Re Real	Im	Imaginary
Scale Type	1	
Linear	<u>۲</u>	Logarithmic
Scale 100 mV V 🔺 [0 🔻	
Position	Offs	set
0 div	0 \	/
V A O V A	•	

The Scaling menu for complex waveforms

7.8.2.1 Complex Scale



The Complex Scale menu selects the display format of a waveform that has a complex value. The options are:

- Magnitude.
- Phase.
- Real.
- Imaginary.

Magnitude

The peak signal amplitude is represented on a linear or logarithmic scale, in the same units as the input signal. You can choose to display data in dB or linear mode. You may display the real or imaginary parts of the spectral magnitude only. The **Vertical Position** control gives complete control over the vertical position of the spectrum.

ps9400Aug-1

Menu

Phase

Phase is measured with respect to a cosine whose maximum occurs at the left-hand edge of the screen, at which point it is 0°. Similarly, a positive-going sine wave starting at the left-hand edge of the screen has a -90° phase. You can display phase data as a function of frequency in degrees. You can zero the noise phase for magnitudes below a threshold level.

Real

Displays the linear magnitude of the real part of the spectral magnitude only. This is useful if you process the spectrum off-line and transform it back into a time-domain trace. You could save the real spectrum into a waveform memory.

Imaginary

Displays the linear magnitude of the imaginary part of the spectral magnitude only. This is useful if you process the spectrum off-line and transform it back into a time-domain trace. You could save the imaginary spectrum into a waveform memory.

7.8.2.2 Scale Type



The **Scale Type** menu allows you to set the scale of the vertical display. Vertical units can be either linear or logarithmic.

- Linear Sets the display to the current source value. Usually this is volts, but it may also be watts or amperes.
- Logarithmic Sets the display of the results to dB. Use the Vertical Position to set what vertical position in the magnitude spectrum will be zero dB.

The following equation applies:


$$dB = 20\log_{10}\left(\frac{|X|}{X_{ref}}\right)$$

where: X is a complex data point in the spectrum, and Xref is the reference value equal to 1 V.

7.8.3 Zoom

The **Zoom** menu allows you to select one from four zoom areas, and to zoom and position any of the selected zoom areas horizontally or vertically.

For more details see Zoom Menu.

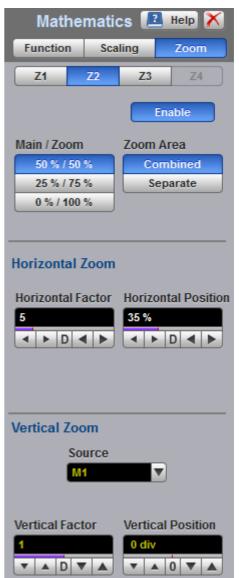

The Zoom Menu

Menu

7.9 Measure Menu

H Measure

With automatic measurements, you just press a few buttons and the sampling oscilloscope does the calculations for you. Because these measurements use the waveform record points directly, they are more accurate than markers or graticules.

Measurements cover voltage, timing, and FFT. Amplitude measurements are made on vertical parameters, typically voltage. They include such parameters as **Maximum**, **Peak-Peak** and **Middle**. Timing measurements are made on horizontal parameters, typically seconds or hertz. They include such parameters as **Period**, **Width** and **Rise Time**. FFT measurements are made on both vertical and horizontal parameters, typically volts and hertz. They include such parameters as **FFT Magnitude** and **FFT Frequency**. Measurements made on two channels can include amplitude and timing parameters.

Meesuwe	🔝 Help 🗙	Maaaaa	🔝 Help X
Measure	neip 🔨	Measure	neip 🔨
Parameter Defin	nition Limit Test	Parameter Def	inition Limit Test
Display	Mode	Display	Mode
Off	🔁 Repetitive	Off	🔁 Repetitive
Parameters	1 Single-Shot	Parameters	1 Single-Shot
Statistics	Single	Statistics	Single
Source		Source	
Ch1 🔻	b Clr Statistics	Ch1 🔻	CIr Statistics
Trace-to-trac	e Measurements	Trace-to-trac	e Measurements
X Parameters			
Period	🔨 Neg Cross	Source 2	
Frequency	Burst Width	Ch1 V	1
Fos Width	Cycles)
Neg Width	_∫∓ Time@Max		
🖌 Rise Time	⇒∫ Time@Min	Delay Parameters	
🕆 Fall Time	→ F Pos Jitter pp	Delay 1R-1R	Delay 1R-1F
SL Pos DCycle	→ Pos Jitter rm	Delay 1F-1R	Delay 1F-1F
Neg DCycle	→ 🛨 Neg Jitter pp	Delay 1R-nR	Delay 1R-nF
🖍 Pos Cross	→ Neg Jitter rm	Delay 1F-nR	Delay 1F-nF
Y Parameters			
	f√ dc RMS	Phase Parameter	rs
Minimum	₩ Cycle dc RMS	My Phase Degre	My Phase Radian
🖵 Тор	f√ ac RMS	My Phase %	
Base	ff Cycle ac RMS	(
Peak-Peak	Pos Oversho		
The Amplitude	Leg Oversho	Gain Parameters	
Hiddle	₩ Area	红 Gain	红 Gain dB
Hean	/ C ycle Area		
Cycle Mean			
👩 View Defir	ned Parameters	🔕 View Defi	ned Parameters
Clear All N	leasurements	Clear All I	Measurements
Frequency Meter F	Parameter	Frequency Meter	Parameter
Frequency	Period	Frequency	Period

Measure Parameter Defi	Help 🗙	Measure Parameter Defin	Help 🗙
Method	Top 272 mV	Conditions Parameter	On
Method	▼ ▲ D ▼ ▲ Base -253 mV	1 - Amplitude 2 - Neg Width 3 - Pos Width 1 - Ac RMS (Cl Mode	(Ch1) 2 (Ch1) 3
Thresholds Threshold	Upper Threshold 90 % V A D V A	Center	Delta % Std Deviation
User Defined	Middle Threshold	Current Mea	V,W User Defined User Defined Delta
% Percent V,W Vert Unit Division	Lower Threshold	497 mV ▼ ▲ D ▼ ▲ Fail When	3 StdDev ▼▲D▼▲ Measure Not Foun
Margins Left Threshold	Mode Waveform Marker	Outside Outside Outside Outside Outside Outside	·ft: Ignore ·ft: Fail Pass
"f": Upper	Left Margin -1.678 ns ▼ ▲ D ▼ ▲	Run Until	ST # of Failures 10 failures
·ft: Upper ·ft: Middle Lower	Right Margin 322 ps A D V A	Action	
Statistics Waveforms 8 V A D V A	Mode	Select Action Beep Save Stop	Any Fail All Pass All Fail Any Pass

The Measure Menu

Each measurement relates to the source that was active when you selected that measurement. It remains displayed until you remove it. If you turn off the source that was selected for a measurement, only the last measured result will be displayed.


The PicoScope 9400A makes measurements after every trigger event, always maintaining continuity between the measurement results and the display. This makes sure that no aberration in the waveform under observation is missed.

You can set measurement markers (thresholds and margins) on the display as defined parameters to track the measurement results. This helps you verify that the oscilloscope is measuring the correct phenomena and to aid in windowing the waveform properly for measurement.

Measurement Results

The measurement readouts appear in the <u>Measurement Area</u> of the screen. These values are displayed on tabs. The readouts are continuously updated as the oscilloscope acquires new data or as you change settings. You can display as many as ten measurements of parameters, continuously updated, and as many as four statistics measurements at any one time.

Measure Scales		Auto Max Mid Min
Period (Ch1)	30.03 ns	
Frequency (Ch1)	33.3 MHz	
Pos Width (Ch1)	15 ns	
Rise Time (Ch1)	6.163 ns	
Fall Time (Ch1)	6.133 ns	
Maximum (Ch1)	305.4 mV	
Minimum (Ch1)	-305.4 mV	
Amplitude (Ch1)	600 mV	
Middle (Ch1)	6.226 µV	
Mean (Ch1)	-177.7 μV	

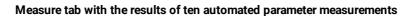

	Current	Total Wfms	Minimum	Maximum	Mean	Std Deviation
Period (Ch1)	30.03 ns	8	30.01 ns	30.06 ns	29.28 ns	0 s
Frequency (Ch1)	33.3 MHz	8	33.27 MHz	33.32 MHz	36.17 MHz	0 Hz
Pos Width (Ch1)	15 ns	8	14.88 ns	15.16 ns	17.32 ns	0 s
Rise Time (Ch1)	6.163 ns	8	6.005 ns	6.245 ns	3.551 ns	0 s
Fall Time (Ch1)	6.133 ns	8	6.006 ns	6.255 ns	6.278 ns	0 s
Maximum (Ch1)	305.4 mV	8	302 mV	307.8 mV	408.6 mV	0 V
Minimum (Ch1)	-305.4 mV	8	-307.9 mV	-302.2 mV	-260.5 mV	0 V
Amplitude (Ch1)	600 mV	8	590.6 mV	600 mV	596.5 mV	34.09 mV
Middle (Ch1)	6.226 μV	8	-2.296 mV	1.995 mV	-10.99 mV	0 V
Mean (Ch1)	-177.7 μV	8	-349.7 µV	-30.8 µV	-412.1 μV	506.1 µV

Measure tab with the results of ten statistic measurements

When the instrument cannot make the requested measurement, an **"Undefined**" error message is displayed instead of measurement results. Usually, this is because there are not enough sample points, there is no edge on the display, or the specified channel is turned off.

7.9.1 Parameter

Parameter

Measure	🖪 Help X		
Parameter Defin	nition Limit Test		
Display	Mode		
Off	C Repetitive		
Parameters	1 Single-Shot		
Statistics	Single		
Source	1 single		
Ch1 🔻	CIr Statistics		
Trace-to-trace	e Measurements		
X Parameters			
S Period	Neg Cross		
Frequency	Burst Width		
Pos Width	Cycles		
Neg Width	_∫∓ Time@Max		
F Rise Time	⇒∫ Time@Min		
Fall Time	→ F Pos Jitter pp		
S Pos DCycle	→ Pos Jitter rm		
Neg DCycle	→ ← Neg Jitter pp		
Pos Cross	→ Neg Jitter rm		
Y Parameters			
J Maximum	fv dc RMS		
Minimum	ff Cycle dc RMS		
Тор	↑ ac RMS		
Base	TT Cycle ac RMS		
Peak-Peak	Pos Oversho		
Amplitude	Leg Oversho		
H Middle	Area		
H Mean	↔ Cycle Area		
Cycle Mean	J		
🔊 View Defined Parameters			
Clear All Measurements			

The Parameter Menu

7.9.1.1 Display

Display		
Ċ	Off	
	Parameters	
	Statistics	

Two types of measurements are used in the PicoScope 9400A Series:

- Measurements of parameters (Parameters).
- Statistics measurements (Statistics).


Click on the option for the type of measurement that you require. **Off** removes measurement results, annotations and markers from the display.

Statistics

The **Statistics** function calculates the minimum, maximum, mean and standard deviation of the automatic measurement results. The current value and amount of measurements are also displayed.

When you turn **Statistics** on, the minimum, maximum, mean and standard deviation values start to accumulate at the same time. All results are continuously updated; the mean, standard deviation results are also calculated and continuously updated. Minimum and maximum are the absolute extremes of the automatic measurements. Mean and standard deviation calculate the mean and standard deviation of the automatic measurement results. Mean is the statistical average of all results for a particular measurement. Standard deviation measures the dispersion of those measurement results.

The figure below shows the mean and standard deviation more graphically. Standard deviation is represented by the Greek letter sigma (σ). For a Gaussian distribution, two sigma ($\pm 1\sigma$ from the mean) is where 68.3 % of the data points reside. Four sigma ($\pm 2\sigma$ from the mean) is where 95.4 % of the data points reside. Six sigma ($\pm 3\sigma$ from the mean) is where 99.7 % of the data points reside.

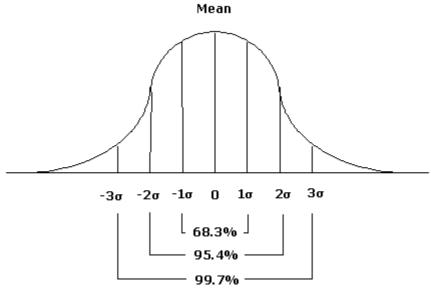

Standard deviation of a Gaussian distribution

$$\mu = \frac{\sum_{i=1}^{n} X_i}{n}$$

where: μ - mean, n – the number of measurements taken, Xi - measurement i-th result.

The standard deviation is calculated as follows:

$$\sigma = \sqrt{\frac{\sum_{i=1}^{n} (X_i - \overline{X})^2}{n-1}}$$

where: σ - standard deviation, n – the number of measurements taken, Xi - measurement i-th result, X-bar - the mean.

Click the **Definition** and use the **Statistics** menu for some statistics options.

7.9.1.2 Source



The Source drop-down list box selects the source you are measuring.

You can select as the source:

- Channel 1 through 4.
- Functions 1 through 4.
- Waveform memories 1 through 4.

The measurement readouts of each parameter will have the same color as the selected source.

7.9.1.3 Mode



Two modes are available for extracting parameters:

- **Repetitive**. This mode dynamically extracts the same number of parameters, based on successive acquisition sequences, and updates the measurements approximately every 100 ms (except at very slow repetition rates).
- Single-shot. Extracts up to ten parameters, based on the last acquisition, and displays the result.

7.9.1.4 Single



Clicking the **Single** button provides single-shot measurement of selected parameters.

7.9.2 X Parameters

The **X Parameters** are eighteen timing parameters used for pulse measurements. Once the **Top** and **Base** calculation is completed (according to the <u>Method</u> setting), most of the timing and amplitude measurements can be made.

X Parameters		
Period	🔨 Neg Cross	
Frequency	Burst Width	
<u> St</u> Pos Width	Sector Cycles	
Դ ⊾ Neg Width	_∫∓ Time@Max	
🗲 Rise Time	_∱ Time@Min	
🕆 Fall Time	⇒∕∓ Pos Jitter pp	
Pos DCycle	→ F Pos Jitter rm	
🚹 Neg DCycle	→ 🛨 Neg Jitter pp	
🖍 Pos Cross	→ Neg Jitter rm	



You can continuously update as many as ten parameter measurements, and as many as ten statistics measurements, at any one time.

The pulse measurement algorithms for **X Parameters** will only work when a single-valued signal is used, and no NRZ, RZ or PAM4 eye diagram is present on the screen. Measurements made on both NRZ, RZ and PAM4 eye diagrams will fail.

Period Period

Period is a measure of the time between the mid-threshold crossings of two consecutive edges of the same polarity. The **PicoScope 9400A** starts the measurement on the first edge on the leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the measurement region (right margin).

Because the detected edges can be either rising or falling, the period is determined as follows:

Period = Tcross3 - Tcross1

where *Tcross3* and *Tcross1* are the times of the first two consecutive crossings on the same slope at the midreference level.

If more than one period can be found within the margins, the scope measures the average period.

Frequency Frequency

Frequency is defined as the inverse of the period (1/period). Period is a measure of the time between the midthreshold crossings of two consecutive edges of the same polarity. The **PicoScope 9400A** starts the measurement on the first edge on the leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the measurement region (right margin).

Because the detected edges can be either rising or falling, the frequency is determined as follows:

Frequency = 1/Period = 1/(Tcross3 - Tcross1)

where *Tcross3* and *Tcross1* are the times of the first two consecutive crossings on the same slope at the midreference level.

If more than one period can be found within the margins, the scope measures the average frequency value.

Pos Width Pos Width

Pos Width (Positive Pulse Width) is a measure of the time from the mid-threshold of the first rising edge to the mid-threshold of the next falling edge. The **PicoScope 9400A** starts the measurement on the first edge on the leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the measurement region (right margin).

Positive pulse width is determined as follows:

Positive Width = Tcross2 - Tcross1

where Tcross1 and Tcross2 are the two consecutive horizontal crossings on the first positive pulse.

If more than one positive pulse width can be found within the margins, the scope measures the average value of the positive pulse width.

Neg Width Neg Width

Neg Width (Negative Pulse Width) is a measure of the time from the mid-threshold of the first falling edge to the mid-threshold of the next rising edge. The **PicoScope 9400A** starts the measurement on the first edge on the leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the measurement region (right margin).

Negative pulse width is determined as follows:

Negative Width = Tcross2 - Tcross1

where T_{cross1} and T_{cross2} are the two consecutive horizontal crossings on the first negative pulse.

If more than one negative pulse width can be found within the margins, the scope measures the average value of the negative pulse width.

Rise Time Rise Time

Rise Time is a measure of the time at the upper threshold minus the time at the lower threshold on the edge you are measuring on. It is a measure of the transition time of the data on the positive (rising) edge of a waveform. The **PicoScope 9400A** starts the measurement on the first edge on the leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the measurement region (right margin).

Rise Time is determined as follows:

Rise Time = Tcross(Upper Threshold) - Tcross(Lower Threshold)

where *Tcross(Upper Threshold*) is the time of crossing with the upper threshold, and *Tcross(Upper Threshold*) is the time of crossing with the lower threshold.

If more than one rise time can be found within the margins, the scope measures the average value of rise time.

The rise time will not be measured until the rising edge completes the transition through all three levels.

Fall Time Fall Time

Fall Time is a measure of the time at the lower threshold minus the time at the upper threshold on the edge you are measuring on. It is a measure of the transition time of the data on the negative (falling) edge of a waveform. The **PicoScope 9400A** starts the measurement on the first edge on the leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the measurement region (right margin).

Fall Time is determined as follows:

Fall Time = Tcross(Lower Threshold) - Tcross(Upper Threshold)

北京海洋兴业科技股份有限公司(股票代码:839145) | 电话:010-62178811 传真:010-62176619 | 网址:www.hyxyyq.com

where *Tcross(Upper Threshold*) is the time of crossing with the lower threshold, and *Tcross(Upper Threshold*) is the time of crossing with the upper threshold

If more than one fall time can be found within the margins, the scope measures the average value of rise time.

The fall time will not be measured until the falling edge completes the transition through all three levels.

Pos DCycle Positive Duty Cycle

Positive Duty Cycle is defined as the ratio of the positive pulse width to the period. This is the percentage of the period that the positive pulse width occupies. The **PicoScope 9400A** starts the measurement on the first edge on the leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the measurement region (right margin).

Positive Duty Cycle is determined as follows:

Positive Duty Cycle = (Positive Width / Period) × (100%)

If more than one positive duty cycle can be found within the margins, the scope measures the average value of all positive duty cycles.

The positive duty cycle will not be measured until the period and positive pulse width complete the transition through all three levels.

Neg DCycle Negative Duty Cycle

Negative Duty Cycle is defined as the ratio of the negative pulse width to the period. This is the percentage of the period that the negative pulse width occupies. The **PicoScope 9400A** starts the measurement on the first edge on the leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the measurement region (right margin).

Negative Duty Cycle is determined as follows:

Negative Duty Cycle = (Negative Width / Period) × (100%)

If more than one negative duty cycle can be found within the margins, the scope measures the average value of all negative duty cycles.

The negative duty cycle will not be measured until the period and negative pulse width completes the transition through all three levels.

Pos Cross Positive Crossing

Positive Crossing is defined as the time of the first positive crossing of the data sampled at the mid-reference level in the measurement region. The **PicoScope 9400A** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin).

Positive crossing is determined as follows:

Positive Crossing = Tcross

where Tcross is the horizontal coordinate of the first positive crossing.

Negative Cross Negative Crossing

Negative Crossing is defined as the time of the first negative crossing of the data sampled at the mid-reference level in the measurement region. The **PicoScope 9400A** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the display (right margin).

Negative crossing is determined as follows:

Negative Crossing = Tcross

where *Tcross* is the horizontal coordinate of the first negative crossing.

Burst Width Burst Width

Burst Width is defined as the time between the first and last crossings, either positive or negative, of the waveform at the mid-reference level in the measurement region. The **PicoScope 9400A** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the display (right margin).

Burst width is determined as follows:

Positive Width = TcrossL - TcrossF

where *TcrossL* is the horizontal coordinate of the last crossing, and *TcrossF* is the horizontal coordinate of the first crossing.

Cycles Cycles

Cycles is defined as the number of cycles of a periodic waveform between the mid-threshold crossings of two consecutive first and last edges of the same polarity. The **PicoScope 9400A** starts the measurement on the first edge on the leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the measurement region (right margin). The detected edges can be either rising or falling.

Time@Max Time@Maximum

Time@Maximum is a measure of the time of the first occurrence of the first data sample with the maximum signal level. The **PicoScope 9400A** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the display (right margin).

The **Time@Maximum** is position-independent. Therefore, the instrument uses the entire waveform on the display graticule to determine the maximum signal level.

Time@Min Time@Minimum

Time@Minimum is a measure of the time of the first occurrence of the first data sample with the minimum signal level. The **PicoScope 9400A** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the display (right margin).

Time@Minimum is position-independent. Therefore, the instrument uses the entire waveform on the display graticule to determine the minimum signal level.

Positive Jitter peak to peak

Positive Jitter peak to peak is a measure of peak-peak time variations of the rising edges of a pulse waveform at the middle threshold.

Positive Jitter peak to peak is determined as follows:

Positive Jitter peak to peak = Full width of the Horizontal Histogram in the Middle Threshold

→ Pos Jitter rm Positive Jitter RMS

Positive Jitter RMS is a measure of RMS time variations of the rising edges of a pulse waveform at the middle threshold.

The Positive Jitter RMS is determined as follows:

Positive Jitter RMS = 1σ (standard deviation) of the Horizontal Histogram in the Middle Threshold

Negative Jitter peak to peak

Negative Jitter peak to peak is a measure of the peak-peak time variations of the falling edges of a pulse waveform at the middle threshold.

The Negative Jitter peak to peak is determined as follows:

Negative Jitter peak to peak = Full width of the Horizontal Histogram at the Middle Threshold

Pt Neg Jitter rm Negative Jitter RMS

Negative Jitter RMS is a measure of the RMS time variations of the falling edges of a pulse waveform at the middle threshold.

Negative Jitter RMS is determined as follows:

Negative Jitter RMS = 1σ (standard deviation) of the Horizontal Histogram at the Middle Threshold

7.9.3 Y Parameters

The **Y Parameters** menu is a list of amplitude parameters. This list includes seventeen amplitude parameters used for pulse measurements. Once the **Top** and **Base** calculation is completed (according to the <u>Method</u> setting), most of the timing and amplitude measurements can be made.

Y Parameters			
J Maximum	f√ dc RMS		
Minimum	ft Cycle dc RMS		
Тор	f√ ac RMS		
Base	₩ Cycle ac RMS		
Peak-Peak	Pos Oversho		
☐ Amplitude	Leg Oversho		
Hiddle	₩ Area		
Hean	↔ Cycle Area		
Sycle Mean			



You can continuously update as many as ten measurement parameters, and as many as four statistics measurements at any one time.

The pulse measurement algorithms for **Y Parameters** will only work when a single-valued signal is used, and no NRZ, RZ or PAM4 eye diagram is present on the screen. Measurements made on both NRZ, RZ and PAM4 eye diagrams will fail.

J Maximum Maximum

Maximum is the voltage (or power) of the absolute maximum level of the measurement region. The maximum level is taken directly from the histogram data. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin).

🔔 Minimum 🛛 Minimum

Minimum is the voltage (or power) of the absolute minimum level of the measurement region. The minimum level is taken directly from the histogram data. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin).

Тор Тор

Top is the voltage of the statistical maximum level. Use the <u>Method</u> and <u>Thresholds</u> menus to customize the measurement threshold levels. **Top** may be equal to **Maximum** for many waveforms, such as triangle waveforms. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin).

Lase Base

Base is the voltage of the statistical minimum level. Use the <u>Method</u> and <u>Thresholds</u> menus to customize the measurement threshold levels. **Base** may be equal to **Minimum** for many waveforms, such as triangle waveforms. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin).

Peak-Peak Pea

Peak-Peak

Peak-Peak is a measure of the difference between **Maximum** and **Minimum** of a displayed waveform. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin).

Peak-Peak is determined as follows:

Peak-Peak = Maximum - Minimum

Amplitude Amplitude

Amplitude is a measure of the difference between the **Top** and **Base** of a displayed pulse waveform. Use the <u>Method</u> and <u>Thresholds</u> menus to customize the measurement threshold levels. Amplitude may be equal to **Peak-Peak** for many waveforms, such as triangle waveforms. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin).

Amplitude is determined as follows:

Amplitude = Top – Base

where Top is the statistical maximum level, and Base is the statistical minimum level.



Top value may be less than or equal to the maximum value of the waveform, while **Base** value may be greater than or equal to the minimum value of the waveform.

Hiddle

Middle is the computation of the middle point between the maximum and minimum amplitude peaks of the waveform over the measurement region. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin).

Middle is determined as follows:

Middle

Middle = (Maximum - Minimum) / 2

where *Maximum* is the voltage (or power) of the absolute maximum value of the waveform, and *Minimum* the voltage (or power) of the absolute minimum value of the waveform.

Mean Mean

Mean is the average mean of all the waveform data over the measurement region. The PicoScope 9400A Series starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin).

Mean is determined as follows:

$$Mean = \frac{1}{n} \sum_{i=1}^{N} V(i)$$

where *n* is the number of waveform points on screen and not the memory depth, *V(i)* is the voltage at the *i*-th point on screen.

Cycle Mean Cycle Mean

Cycle Mean is the averaged mean of all the waveform data of one cycle of the signal over the measurement region. The average of the data values is taken of an integral number of periods. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin). See also **Mean**.

You can customize this measurement to be made either on one waveform cycle or across all data on the display. The <u>Margins</u> menu sets the margin markers to show where the scope is making the automatic measurement. All calculations of the **Cycle Mean** value will be performed only inside these margins.

TT dc RMS DC RMS

DC RMS is the root-mean-square voltage of the waveform over the measurement region. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin). The instrument can make either AC or DC RMS measurements.

The DC RMS measurement is determined as follows:

$$dcRMS = \sqrt{\frac{\sum_{i=1}^{N} \left[V(i)\right]^2}{n}}$$

where: *n* is the number of waveform points on screen and not the memory depth, and *V(i)* is the voltage at the *i*-th point on screen.

Cycle dc RMS Cycle DC RMS

Cycle DC RMS is the averaged root-mean-square voltage of one cycle of the waveform value over the measurement region. The average of the data values is taken over an integral number of periods. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin). The instrument can make either cycle AC or DC RMS measurements. See also **DC RMS**.

You can customize this measurement to be made either on one waveform cycle or across all data on the display. The <u>Margins</u> menu sets the margin markers to show where the scope is making the automatic measurement. All calculations of the Cycle DC RMS value will be performed only inside these margins.

AC RMS

AC RMS is the root-mean-square voltage of the waveform less the mean value over the measurement region. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin). The instrument can make either AC or DC RMS measurements.

The AC RMS measurement is determined as follows:

$$acRMS = \sqrt{\frac{\sum_{i=1}^{N} [V(i) - Mean]^2}{n}}$$

where: *n* is the number of waveform points on screen and not the memory depth, *V(i)* is the voltage at the *i*-th point on screen, and *Mean* is an average mean voltage.

Cycle ac RMS Cycle AC RMS

Cycle AC RMS is the averaged root-mean-square voltage of one cycle of the waveform less the cycle mean value over the measurement region. The average of the data values is taken over an integral number of periods. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin). The instrument can make either AC or DC RMS measurements. See also **AC RMS**.

You can customize this measurement to be made either on one waveform cycle or across all data on the display. The <u>Margins</u> menu sets the margin markers to show where the scope is making the automatic measurement. All calculations of the **Cycle AC RMS** value will be performed only inside these margins.

Pos Overshot Positive Overshoot

Positive Overshoot is defined as the maximum distortion that follows a positive waveform edge transition. This distortion occurs after the edge crosses through the waveform threshold levels. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin). The instrument can make both positive and negative overshoot measurements.

Positive Overshoot is determined when the waveform edge is rising (upward slope), and is computed as follows:

Positive Overshoot = [(Maximum – Top) / Amplitude] × 100%

where: *Maximum* is the signal maximum, *Top* is the signal top value, and *Amplitude* is the signal amplitude.

Negative Overshoot

Negative Overshoot is defined as the maximum distortion that follows a negative waveform edge transition. This distortion occurs after the edge crosses through the waveform threshold levels. The **PicoScope 9400A Series** starts the measurement on the first leftmost portion of the measurement region (left margin) and stops the measurement on the rightmost portion of the display (right margin). The instrument can make both positive and negative overshoot measurements.

Negative Overshoot, determined when the waveform edge is falling, is computed as follows:

Negative Overshoot = [(Base - Minimum) / Amplitude] × 100%

where: *Minimum* is the signal minimum, *Base* is the signal base value, and *Amplitude* is the signal amplitude.



Area is the area under the curve of the waveform within the measurement region in vertical units multiplied by horizontal units, such as volt-seconds or watt-seconds. Area measured above ground is positive; area measured below ground is negative.

Area is determined as follows:

End
Area =
$$\int Waveform(t)dt$$

Start

In practice the PicoScope 9400A Series uses the following algorithm:

$$Area = \frac{\Delta t}{N} \sum_{i=1}^{N} V(i)$$

where: *N* is the number of waveform points on screen and not the memory depth, *V(i)* is the voltage at the i-th point on screen, and Δt is the measured region duration.

Cycle Area Cycle Area

Cycle Area is the averaged area under the curve for of one cycle the waveform within the measurement region in vertical units multiplied by horizontal units, such as volt-seconds or watt-seconds. The average of the data values is taken over an integral number of periods. Area measured above ground is positive; area measured below ground is negative. See also **Area**.

7.9.4 Trace-to-trace Measurements

Trace-to-trace Measurements


Clicking **Trace-to-trace Measurements** opens the list of parameters that can be measured with two signal sources.

Source 2			
Ch2 🔻			
Trace-to-trace Parameters			
5 Delay 1R-1R	5 Delay 1R-1F		
5 Delay 1F-1R	5 Delay 1F-1F		
5 Delay 1R-nR	5 Delay 1R-nF		
5 Delay 1F-nR	5 Delay 1F-nF		
👭 Phase Degree	🔊 Phase Radian		
🔊 Phase %	红 Gain		
红 Gain dB			

You can select as one of the sources:

- Channels 1 through 4
- Functions 1 through 4
- Waveform memories 1 through 4
- Any of the spectra

The list of measurements includes eight delay parameters, three phase parameters, and two gain parameters.

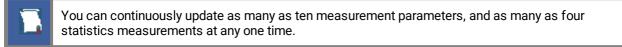

The pulse measurement algorithms for **X Parameters** will only work when a single-valued signal is used, and no NRZ, RZ or PAM4 eye diagram is present on the screen. Measurements made on NRZ, RZ and PAM4 eye diagrams will fail.

7.9.4.1 Source 2



When the **Trace-to-trace Measurements** menu is selected, the **Source** drop-down list box located on the first page of the <u>Measure</u> menu selects the reference source, while the **Source 2** drop-down list box located on the **Trace-to-trace Measurements** menu page selects the second source.

7.9.4.2 Delay

🛐 Delay 1R-1R	Delay 1R-1F
😼 Delay 1F-1R	5 Delay 1F-1F
🛐 Delay 1R-nR	5 Delay 1R-nF
🛐 Delay 1F-nR	5 Delay 1F-nF

Delay is defined as the time interval between the crossings of the two mid-reference levels on the two sources of the measurement. The **PicoScope 9400A** starts the measurement on the first edge on the leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the measurement region (right margin).

Delay is determined as follows:

Delay = Tcross2 - Tcross1

where: *Tcross2* is the horizontal crossing on the rising or falling edge of the second source, and *Tcross1* is the horizontal crossing on the rising or falling edge of the first (reference) source.

The delay will not be measured until the rising and falling edges on both sources complete the transition through all three levels.

You can select one of the eight delay options:


- **Delay 1R-1R** is the delay between the first rising edge on the reference source and the first rising edge on the second source
- **Delay 1R-1F** is the delay between the first rising edge on the reference source and the first falling edge on the second source
- **Delay 1F-1R** is the delay between the first falling edge on the reference source and the first rising edge on the second source
- Delay 1F-1F is the delay between the first falling edge on the reference source and the first falling edge on the second source
- **Delay 1R-nR** is the delay between the first rising edge on the reference source and the last rising edge on the second source
- Delay 1R-nF is the delay between the first rising edge on the reference source and the last falling edge on the second source
- Delay 1F-nR is the delay between the first falling edge on the reference source and the last rising edge on the second source
- **Delay 1F-nF** is the delay between the first falling edge on the reference source and the last falling edge on the second source

7.9.4.3 Phase

K Phase Degree M Phase Radian

Phase is the amount by which a waveform leads or lags another in time. It is defined between the first rising edge on the reference source and the first rising edge on the second source. The **PicoScope 9400A Series** starts the measurement on the first edge on the leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the measurement region (right margin).

The **Phase** is determined as follows:

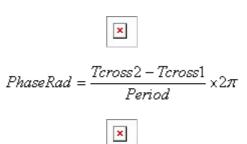

where: *Tcross2* - is a horizontal crossing on the first rising edge of the second source, *Tcross1* is a horizontal crossing on the first rising edge of the first (reference) source, and *Period* is a period value.

You can select one of three phase options:

- Phase Degree is a phase expressed in degrees, where 360° constitutes one waveform cycle
- Phase Radian is a phase expressed in radians, where one waveform cycle (360°) corresponds to 2π radians
- Phase % is a phase expressed as a percentage of one waveform cycle

Both the first (reference) and the second sources should have an equal period value when the phase measurements are performed.

7.9.4.4 Gain



红 Gain dB

Gain is the amplitude gain between two selected waveforms. The **PicoScope 9400A** starts the measurement on the first edge on the leftmost portion of the measurement region (left margin) and stops the measurement on the last edge on the rightmost portion of the measurement region (right margin).

Gain is determined as follows:

$$Gain = \frac{Amplitude2}{Amplitude1}$$


$$Gain_dB = 201 \circ g_{10} \left(\frac{Amplitude 2}{Amplitude 1} \right)$$

where: *Amplitude1* is the amplitude measurement of the first (reference) source, and *Amplitude2* is the amplitude measurement of the second source.

You can select one of two gain options:

- Gain is a gain expressed as an amplitude gain between the amplitudes of two waveforms
- Gain dB is a gain expressed in decibels

7.9.5 Counter

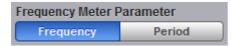

The counter provides frequency or period counter measurements on any of the input channels or the external prescaled trigger input.

With the internal trigger, the counter counts trigger level crossings within a certain amount of time (gate time) and displays the results in the trigger status area. With the external prescaled trigger, the counter counts threshold crossings on the prescaled signal within a certain amount of time (gate time) and displays the results in the same area.

The counter is asynchronous from the oscilloscope's acquisition system and is always acquiring. For frequency and period measurements, the numbers of digits softkey is not adjustable and is normally 7 digits.

7.9.6 View Defined Parameters

🔊 View Defined Parameters

The markers can be used to give you a visual indication of where you are manually setting the thresholds and margins. To use the markers to show the settings, click **View Defined Parameters**.

7.9.7 Clear All Measurements

Clear All Measurements

Clicking **Clear All Measurements** removes all selected measurements and all measurement results. This function is useful when measurements were performed with waveforms from different sources.

7.9.8 Definition

Definition

The **Definition** menu sets the measurement points (thresholds and margins) where the automatic measurements are made. These measurement points can be set to the same points for all waveforms (channel waveforms, function waveforms and waveform memories) or can be set differently for each individual waveform. The menu influences the measurement algorithm by allowing you to use the standard IEEE measurement points or customize the measurements with the user-defined selections. The **Definition** menu also includes the <u>Statistics</u> menu for some statistics options.


Measure	🖪 Help 🗙
Parameter Defin	nition Limit Test
Method	Top 305 mV
Method	
Histogram	Base
Min / Max User Defined	-305 mV
Thresholds	Upper Threshold
Threshold	80 %
10-50-90)%	
:::::::::::::::::::::::::::::::::::::::	Middle Threshold
User Defined	50 %
Unit	
% Percent	Lower Threshold
V,W Vert Unit	20 %
Division	
Margins	Mode
Left Threshold	Waveform Marker
Upper	Left Margin
Lower	-50 ns
Right Threshold	▼ ▲ D ▼ ▲
'f': Upper	Right Margin
Middle	50 ns
Lower	▼ ▲ D ▼ ▲
Statistics	Mode
Waveforms	Normal
8	Window
	Exponential

The Definition Menu

The **Definition** menu is different when you work in the time domain with signals or in the frequency domain with spectra.

Standard IEEE measurement points

The waveform drawing below shows some of the standard measurement points, thresholds, and parameters.

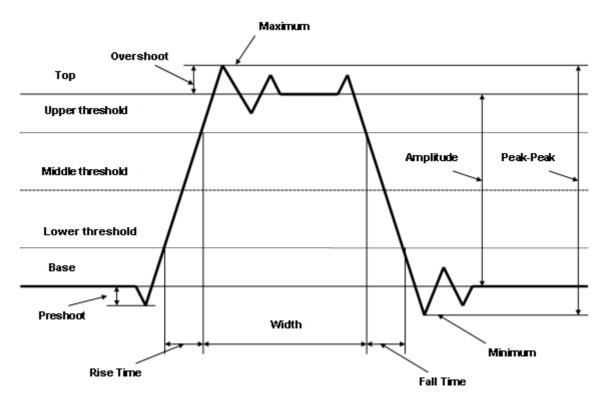

7.9.8.1 Method

Method	Тор	
	1.56 mV	
Method		
Histogram	Base	
🖵 Min / Max	-245 mV	
User Defined	V A D V A	

The Method Menu

7.9.8.1.1 Method



The **Method** menu sets the **Top** and **Base** vertical reference thresholds for amplitude measurements. It also sets the values from which the upper, middle and lower thresholds are calculated. The **Top** and **Base** variables are displayed when the **User Defined** method is selected. The three selections under the **Method** menu allow the user to choose the method for determining the **Top** and **Base** of the waveform.

- **Histogram.** The instrument calculates the top and base using the IEEE standards with a voltage histogram of the waveform that is on the display. The instrument finds the prevalent top and base voltage values. Make sure there is enough of the signal displayed on the screen so that the instrument can accurately determine the top and base values of the waveform. However, if too much of the top and base of the waveform are on the display, it may reduce the number of sample points on the edge of interest, which may reduce the repeatability of your measurements. A good rule of thumb is to have two divisions of top and two divisions of base.
- Min / Max. The absolute maximum (positive peak) of the targeted waveform is used as the **Top**, and the absolute minimum (negative peak) of the targeted waveform is used as the **Base**.
- User Defined. This method lets you set the top and base to a specific voltage value. The upper, middle and lower thresholds are then calculated from the voltage values you select. The User Defined method simplifies the threshold detection algorithm. The result is that the measurement throughput of the instrument is increased, because the instrument does not have to calculate the top and base values. After you selected the User Defined method, the Top and Base variables becomes active.


7.9.8.1.2 Top and Base



The **Top** and **Base** variables let you set the top and base to a specific voltage value. As an example, for a 200 mV/div vertical scale you can set the top and base voltage values from –798 mV to 798 mV in 25 mV (coarse) or 1.56 mV (fine) increments determined by the voltage range you are in.


Note that the top value cannot be less than the base value.

7.9.8.2 Thresholds

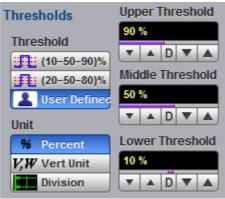

The Threshold Menu

7.9.8.2.1 Threshold

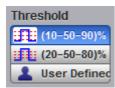

The **Threshold** menu sets the measurement points that the automatic measurements use for calculating the timing measurement results. The threshold points are upper, middle, and lower. For example, rise time is measured from the lower threshold to the upper threshold, while a width measurement is made between two middle thresholds.

The three threshold choices are the standard IEEE measurement points:

- 10%-50%-90%
- 20%-50%-80%
- User Defined

By default, the **PicoScope 9400A Series** uses the IEEE thresholds of 10%, 50% and 90% for pulse measurements. A rising or falling edge is only recognized after passing through all three thresholds. You can specify your own thresholds rather than using the IEEE standard 10%, 50% and 90% levels, but this can dramatically change the measurement results. Note how the rise and fall times will be faster for the same waveform using the 80%, 20% criteria instead of the 90%, 10% criteria. You may rely on the scope to automatically set top and base or redefine those levels yourself and use units of voltage instead of percent.

The Upper Threshold, Middle Threshold, and Lower Threshold variables are displayed only when the User Defined is selected in the Thresholds menu.

10%-50%-90% and 20%-50%-80%

These are two IEEE standard pulse measurement thresholds for all measurements. These standard thresholds are calculated as a percentage of the top-base values, and the top-base values are calculated from the waveform that is on the display.

10%-50%-90% means: Lower threshold = 10 %, Middle threshold = 50 %, Upper threshold = 90 %.


20%-50%-80% means: Lower threshold = 20 %, Middle threshold = 50 %, Upper threshold = 80 %.

Make sure that the waveform is expanded vertically and horizontally so that the instrument can accurately determine the top and base values of the waveform. However, if too much of the top and base of the waveform is on the display, it may reduce the repeatability of your measurements. A good rule of thumb is to have two divisions of top and two divisions of base.

User Defined

For waveform records or portions of waveform records on which you want to make custom measurements or define thresholds in units of volts, percents or divisions, you can use the **User Defined** setting. By using units of volts, you can fix the thresholds and compare different waveform records using exactly the same, fixed threshold points.

7.9.8.2.2 Unit

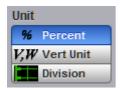

You can set the unit of measure for upper, middle, and lower thresholds to Percent, Vertical Unit or Division.

- **Percent.** This is calculated from the top-base values, and you can set the maximum percentage up to 200% in 1% (coarse) or 0.1% (fine) increments.
- Vertical Unit. This lets you set the thresholds to particular voltage (or watts) values regardless of the top-base values. For example, for a vertical scale of 200 mV/div you can set the voltage values from –797 mV to 797 mV in approximately 25 mV (coarse) or 1.56 mV (fine) increments determined by the voltage range you are in. Setting Vertical Unit to V, W simplifies the threshold detection algorithm. The result is that the measurement throughput of the instrument is increased, because the instrument does not have to calculate the voltage thresholds.
- Division. This lets you set the thresholds to particular voltage values regardless of the top-base values. For example, you can set the voltage values from -3.97 to 3.97 divisions in ¹/₈ division (coarse) or ¹/₁₂₈ division (fine) increments.

7.9.8.2.3 Upper, Middle and Lower Threshold



The Upper Threshold, Middle Threshold, and Lower Threshold variables are displayed only when User Defined is selected in the <u>Thresholds</u> menu. All variables can be selected for either Percent, Volt (or Watts), or Division.

The upper threshold value is always greater than the value of the middle threshold, and the middle threshold value is always greater than the value of the lower threshold. The instrument will not allow a threshold to cross over the adjacent threshold.


7.9.8.3 Margins

The **Margins** menu sets the left and right horizontal margins that the automatic measurements use for calculating measurement results. All calculations of measuring parameters can be performed only inside these margins.



The Margin Menu

The figure below demonstrates how correctly positioned margins can provide complicated user-defined horizontal measurements.

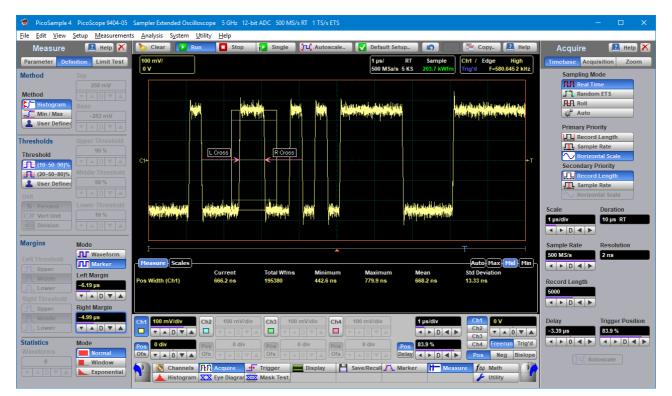

7.9.8.3.1 Margin Mode

Mode
Waveform
Marker

Two modes are used to set the margins:

- **Waveform.** Provides automatic setting of the left and right margins on any of the rising or falling edges of the selected waveform. The **Left Margin** and **Right Margin** variables provide positioning of both margins into any upper, middle or lower threshold with any rising or falling edge of the waveform.
- Marker. Provides manual setting of the left and right margins with the Left Margin and Right Margin variables.

7.9.8.3.2 Left Margin and Right Margin



You can set the left and right margins with the Left Margin and Right Margin variables.

When **Waveform** is selected in the **Mode** menu, both variables automatically set the margins on any rising or falling edge of selected waveform. With the **Left Margin** and **Right Margin** markers you can move the left and right margins from the 1st rising (edge) up to the 256th falling (edge).

Both variables set the margins at any point of the display manually when Marker is selected in the Mode menu.

7.9.8.3.3 Left Threshold and Right Threshold

Left Threshold	Right Threshold
'f'' Upper	TT Upper
Middle	Middle
Lower	Lower

The **Left Threshold and Right Threshold** variables select crossing points on the edge of the selected waveform. Both variables can be used only when **Waveform** is selected in the <u>Mode</u> menu.

- **Upper.** A margin will be placed on the upper threshold.
- Lower. A margin will be placed on the lower threshold.
- Middle. A margin will be placed on the middle threshold.


You can change values of upper, lower, and middle thresholds from the <u>Thresholds</u> menu.

7.9.8.4 Statistics



The **Statistics** menu includes modes and variables that determine the algorithm for a statistical measurement calculation. The **Statistics** menu is active only when the **Statistics** mode of the <u>Display</u> menu is selected.

7.9.8.4.1 Statistics Mode

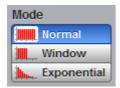

The Statistics **Mode** menu selects one of three modes that determine the algorithm for statistical measurement calculations.

- Normal. Each of the acquired waveforms has an equal influence on the result of the statistical measurement calculation. The **Waveforms** and **Weight** variables are not active in this mode.
- Window. Only a limited number of the recently acquired waveforms have an equal influence on the result of statistical measurement calculations. The <u>Waveforms</u> variable specifies the number of recently acquired waveforms used for statistical measurement calculations. Use the **Window** mode when measuring a waveform that is rapidly drifting.
- **Exponential.** Each of the acquired waveforms has a weighted influence on the result of statistical calculations on eye diagrams. Each subsequently acquired waveform has a greater influence than the preceding acquired waveforms. The <u>Weight</u> variable specifies the degree of this influence. Use the **Exponential** mode when measuring a waveform that is slowly drifting.

7.9.8.4.2 Waveforms



The **Waveforms** variable specifies the number of recently acquired waveforms used for statistical measurement calculations. The variable is active when **Window** is selected in the <u>Mode</u> menu. It can be varied from 8 to 8192 in multiples of two.

7.9.8.4.3 Weight



The **Weight** variable specifies the degree of influence of each recently acquired waveform against more remote waveforms. The variable is active when **Exponential** is selected in the <u>Mode</u> menu. **Weight** can be varied from 8 to 8192 in multiples of two.

7.10 Save/Recall menu

💾 Save/Recall

You can use any drive on the **PicoScope 9400A's** PC for the following save/recall tasks:

- To save or recall your acquired waveforms to or from the M1-M4 waveform memories
- To save your acquired waveforms to a drive
- To load your saved waveforms from a drive to the M1-M4 display memories
- To save current front-panel setups for later recall

Save/Recall 🛛 🖪 Help 🗙	Save/Recall 🛛 🖪 Help 🔀
Waveform / Setup Zoom	Waveform / Setup Zoom
Waveform Memory	Main / Zoom Zoom Area
M1 M2 M3 M4	50 % / 50 % Combined
	25 % / 75 % Separate
Visible Visible All	0 % / 100 %
Source Ch1 Save to M1	Add Zoom Zone
Disk	Zoom Zones
File Type File Name Mode	Z1 Z2 Z3 Z4
Waveform Manual	21 22 23 24
Source	Delete Zoom Zone Z2
Ch1 Save	Delete Zoom Zone ZZ
Save	Horizontal Zoom Z2
Load from Disk to M1	Horizontal Factor Horizontal Position
Visible DB Clear DB	5 35 %
Setup	
Recall Setup	Vertical Zoom Z2
Recall Default	Source
Recall Factory	Ch1
Recall Power Off	
	Vertical Factor Vertical Position
Save Setup	1 0 div
Save as Default	
Actions for Memory	
Measure f ω Math	
	Delete All Zoom Zones

The Save/Recall menu



The Waveform Memory Menu

The instrument allows you to save your acquired waveforms to any of the instrument's internal drives. You can recall these waveforms at a later time and display them on the instrument's display screen. The **Waveform Memory** menu allows you to save or recall a waveform into one of the waveform memories (**M1–M4**), intended for display.

7.10.1.1 Memory Select



The **Waveform Memory** allows you to save or recall a waveform into one of the waveform memories (M1–M4), intended for display.

When you recall a waveform from memory, it is displayed in the default color for that memory number. However, you can change the default color in the <u>Display/Color</u> menu. The default colors are:

- M1: red
- M2: yellow-gray
- M3: violet.
- M4: gray

The waveform memories are non-volatile so the data is not lost if you turn off the power, or set the instrument to the default settings. The **M1–M4** memories contain a single waveform record, including the horizontal and vertical scaling parameters. Therefore you can make parametric measurements on stored waveforms or use them as operands in a function. You can also recall the waveform for future comparison or analysis, save it to disk, or load it from a disk.

7.10.1.2 Visible

🕢 Visible

Clicking the Visible button turns the display for selected waveform memory on or off.

7.10.1.3 Visible All

Visible All

Clicking the Visible All button turns on the display of all four waveform memories.

7.10.1.4 Source



The **Source** menu allows you to choose the source of the waveform memory you intend to save into one of the waveform memories (M1–M4). You can choose between channels, functions, spectra, and memories as the waveform sources.

7.10.1.5 Save to Memory

Save to M1

Clicking the **Save to Memory** button copies the selected waveform to one of the selected waveform memories (**M1–M4**). When a waveform is saved to a memory, it overwrites any data that was previously stored in that memory. If the **Waveform Memory** menu for that memory is on, then the display is also updated.

Save to Memory saves only the current acquired data from the signal. Therefore, the recalled waveform will be displayed as a single trace. This method of saving the waveform is not the preferred process if you want to save a waveform that is using the measurement database (for example, saving a persistence or color-graded trace, or an eye diagram), and you want to recall the entire waveform.



Make sure the waveform to be saved exists; that is, your source must be a channel, an active math waveform, or an active waveform memory. Display the waveform in the timebase with which you want to save it.

7.10.2 Disk

Disk	Disk
File Type File Name Mode	File Type Run Until
Vaveform Manual	Waveform Stop/Single Butto
🛢 Database 👹 Auto	
Source	Source
Ch1 V Save	Ch1 V Save
Load from Disk to M1	Load Database
Visible DB Clear DB	Visible DB 🐼 Clear DB

The Disk Menu

The **Disk** menu allows you to save your acquired waveform or database as an arbitrary file to disk. You can load these waveforms at a later time into the waveform memory (**M1–M4**), and display them on the screen. Databases (**DB**) also can be loaded and displayed, but not via the waveform memory (**M1–M4**).

Save/recall capability is helpful when you want to:

- Recall a waveform for further evaluation or comparison with other waveforms.
- Extend the waveform-carrying capacity of the oscilloscope. It supports up to four channels, four waveform memories, and four math functions (including four spectra).

7.10.2.1 File Type



The File Type control selects how waveforms are stored to disk. Two options are available:

- Waveform File
- Database File

Waveform File

The **Waveform File** is used for storing the last record of the waveform data acquired by the instrument after the **Save** button was pressed. You can save acquired waveforms to a file, so that you can recall them at a later time and display them on the instrument's screen, and perform different measurements.

Database File

The **Database File** is used for storing the multiple-waveform database acquired by the instrument between clicking the **Save** button and later clicking any other control. The **Database File** is useful for saving database signals such as eye diagrams, and pulse waveforms for noise and jitter measurements with histograms. A histogram can also be saved with this mode. You can recall saved database files at a later time, display them on the instrument's screen with different display styles, and perform histogram measurements and mask tests.



Remember that the **PicoScope 9400A Series** uses the file extension **.wfm** for waveform files, and the file extension **.wdb** for database files.

7.10.2.2 Source



The **Source** control allows you to choose the source of the waveform you intend to save to disk. You can choose from channels, functions and memories.

7.10.2.3 File Name Mode



The File Name Mode control sets how the oscilloscope creates the name of the file. This control is enabled when the File Type control is set to Waveform:



The PicoScope 9400A Series uses two modes for generating file names:

- Manual
- Auto

ps9400Aug-1

Manual

The user enters the file name in the **Save Waveform As** dialog. This is also used as the base name when saving in **Auto** mode (see below).

Auto

In this mode, the PicoScope device assigns a file name consisting of a base name and a file number, separated by an underscore. The length of the file name is unlimited, while the file number must have five digits. For example, the instrument can assign the file name **abc_xxxxx.wdb** where **xxxxx** is a number from 00001 to 99999. Each time you save a waveform, the number in the file name is automatically incremented by one or by whatever is necessary to reach the next unused number. This ensures that the waveform will always be saved to a new file and protects you from inadvertently overwriting an existing file.

7.10.2.4 Run Until...



The **Run Until** control is enabled when **File Type** is set to **Database**. It allows you to determine when the acquisition of the waveform database stops.

- Stop Button. When this is selected, press <u>Stop</u> to stop the acquisition of the waveform database.
- **# of Acquisitions.** When the selected number of acquisitions is met, the acquisition of the waveform database is stopped. You can select any number from 1 to 10 million.

7.10.2.5 Save

💾 Save...

The Save button stores the selected waveform or waveform database to a disk.

Clicking the Save button does one of the following:

1. If Waveform File is selected in the <u>File Type</u> menu, while Manual is selected in the <u>File Name</u> menu. Clicking the **Save** button opens the Windows **Load Waveform** dialog box, which allows you select the type of format you want to save the waveform as.

You can select one of three types of waveform format:

- Binary format with .wfm extension
- Verbose format with .txt extension
- Y values formats with .txty extensions

The **Waveform Files** dialog box also allows you to create subdirectories, rename waveform files, or overwrite existing waveform files.

The **Save** feature saves only the current acquired data from the signal. Therefore, the recalled waveform will be displayed as a single trace. This method of saving the waveform is not the preferred process if you want to save a waveform that is using the measurement database (for example, saving persistence or color-graded traces, or eye diagrams), and you want to recall the entire waveform.



Remember to always copy important settings and waveforms to an external disk. If your original files are damaged or lost, you can restore the files from the backup disk.

Binary format

The binary format files (.**wfm** extension) stored using the internal format contain the vertical and horizontal scaling parameters of the original waveform. Therefore, when you recall a waveform into a waveform memory, you can still perform automatic measurements and use the markers. Because the internal format is binary, you cannot directly display its contents in a word processing or plotting program. However, you can convert the binary format file to a text file (.**txt**) for use in a spreadsheet or word processing program, by recalling a .**wfm** waveform and saving it in the text format.

Text format

The text format (**.txt**) is an ASCII text file format that uses alphanumeric characters to represent the voltage values of a waveform. This file format consists of a file header, which describes format (**.txt**) waveform horizontal and vertical scaling information and scope information. The header is followed by data, which consists of Y values separated by a carriage return and line feed. Text format files use four to five times more disk space than internal format files.

The text files are a convenient method for transferring waveforms to other software applications. You can import this file format into many spreadsheet or word processing programs.

Both


Both uses both internal and text formats. Two files are needed when you save waveform in both formats.



Ensure your waveform files have the file name extension **.wfm** or **.txt**. If you specify a different extension, the instrument automatically corrects the extension.



Make sure the waveform to be saved exists; that is, your source must be a channel, an active math waveform, or an active waveform memory. Display the waveform in the timebase with which you want to save it.

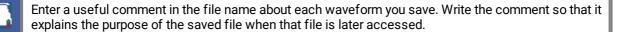

2. If *Waveform File* is selected in the <u>File Type</u> menu, while *Auto* is selected in the <u>File Name</u> menu.

Clicking the **Save** button stores your acquired waveforms, automatically incrementing a new number in a previous file name with its selected format(s).

3. If *Database File* is selected in the <u>File Type</u> menu.

Clicking the **Save** button opens the Windows **Load Waveform** dialog box, which allows you to select a file name. Only the **.cgs** file extension can be used in this case.

7.10.2.6 Load from Disk to Memory

🗜 Load from Disk to M1

The Load from Disk to Memory loads the selected file from a disk into one of the memories M1–M4. Clicking the Load from Disk to Memory button opens the Windows Load Waveform dialog box and allows you to select which subdirectory, waveform, and file format you want to recall.

You can select one of three types of waveform formats:

- Binary format with .wfm extension
- Text format with .txt extension
- Both formats with .wfm and .txt extensions

Setup
Recall Setup
Recall Default
Recall Factory
Recall Power Off
Save Setup
Save as Default
Actions for Memory
H Measure $f \otimes$ Math
Label

The Setup Menu

To save a current setup for later use, you can use any drive available to the PicoScope 9400A's PC. When you save a setup, all of PicoScope 9400A's settings, including measurements, markers, horizontal and vertical control settings, trigger configuration, color scheme, and math functions, are saved.

The Setup menu allows you to save and recall setups. You can use the setup memories when you want to:

- Save a series of setups to help automate a procedure. You can later recall a sequence of saved setups when you perform the procedure (for production test environments).
- Save and recall a setup that optimizes the instrument for displaying and analyzing certain signals.
- Compare waveforms by using more than one setup.
- Set the instrument to its default settings. These settings set the instrument to a known operating condition.
- Export a setup for sharing with a second instrument.

The number of setups you can save is limited only by the available space on the selected drive. Each setup uses approximately 30 kilobytes of disk space.

7.10.3.1 Recall Setup

🗜 Recall Setup..

You can recall a setup that you have previously saved on any drive of your PC.

The **Recall Setup** button sets up the front panel by recalling a front-panel setup from a selected setup memory. Use the standard Windows **Setup Files** dialog box. The dialog box opens and allows you to select which subdirectory and setup you want to recall.

Because recalling a setup will overwrite the instrument's existing configuration, you may want to save the existing setup first.

Look in:	Setup Files	💌 🗢 🖻 📩	III Y		
4	Name	^	Date modified	Size	
	🥁 ~SetpDefaul	tForDemo_PicoScope9404-05.set	01/02/2019 12:06	37 KB	
uick access	📓 ~SetpPwrOf	fForDemo_PicoScope9404.set	28/01/2019 11:07	36 KB	
	📓 ~ SetpPwrOf	fForDemo_PicoScope9404-05.set	25/04/2019 15:11	37 KB	
Desktop	📓 ~ SetpPwrOf	fForDemoPicoScope9404.set	04/01/2019 12:20	36 KB	
	📓 ~SetpPwrOf	fForLAN_IP=192.168.2.229_PicoScope9404-05.set	25/04/2019 16:40	37 KB	
	📓 ~ SetpPwrOf	fForUSB.set	04/01/2019 12:35	36 KB	
Libraries	📓 ~SetpPwrOf	fForUSB_PicoScope9404.set	04/01/2019 13:02	36 KB	
	📓 ~SetpPwrOf	fForUSB_PicoScope9404-05.set	25/04/2019 16:34	37 KB	
	📓 ~SetpPwrOf	fForUSB_PicoScope9404-16.set	19/02/2019 17:12	37 KB	
This PC					
Network					
	File <u>n</u> ame:		-	- <u>O</u> per	1
	Files of type:	Cotors Dia (toot)		Cano	_
	Files of type.	Setup File (*.set)	-		-
- Domo	mbor that the Di	coScope 9400A Series uses the file extensi	ion cot for sotur	filoo	

Remember to always copy important settings and waveforms to an external drive. If your original files are damaged or lost, you can restore the files from the backup drive.

7.10.3.2 Initialization

Initialization allows you to return the instrument to one of its default settings. The default settings place the instrument in a known operating condition. This known operating condition is used as a starting point in the service procedures. You may find it helpful to use this known operating condition when someone else has used the scope before you, or as a starting point when setting up the instrument to view signals.

Three initialization settings are:

- Default
- Factory
- Last Power Off

7.10.3.2.1 Recall Default

🤳 Recall Default 🚽

The **Recall Default** button returns the instrument to its default settings. This places the oscilloscope in a known operating condition. You may find it helpful to use this known operating condition when someone else has used

the oscilloscope before you. If you accidentally press **Recall Default**, use <u>Undo</u> to return the oscilloscope to the operating condition it was in before **Recall Default** was pressed.

7.10.3.2.2 Recall Factory

👎 Recall Factory 🚽

Clicking the **Recall Factory** button returns the instrument to the manufacturer's default setting. This places the oscilloscope in a known operating condition. You may find it helpful to use the default factory settings when initially setting up the instrument to view signals, or when someone else has used the scope before you. You may also use the default settings to troubleshoot unexpected instrument behavior.

Default Factory Setup Channels Select Ch1 Visible On (for all channels) 100 mV/div (for all channels) Scale Offset 0 V (for all channels) Position 0 div Bandwidth Full (for all channels) 0 s (for all channels, disable) Deskew **External Scale Mode** Off (for all channels) Acquire Scale A 10 ns/div Sample Rate 20 GS/s Sampling Mode Auto Acquisition Mode Sample Record Length 2000 points • Trigger - Edge Trigger Source Ch1 Level 0 V Style Edge Slope Positive Sensitivity High Mode Freerun Holdoff 2 µs Holfoff By Time Display - Style/Screen Var Persistence Style **Trace Mode** All Locked **Persistence Time** 2 s Single YT Format Graticule Full Save/Recall - Waveform/Setup Waveform Memory M1 File Type Waveform File Name Mode Manual

• Marker

Туре	Off
• Measure Display	Off
• Math - Function Select Category Operator Operand 1 Operand 2	F1 Arithmetic Add Ch1 Ch2
• Histogram Axis Source	Off Ch1
• Eye Diagram Measure Source	Off Ch1
Mask Test Create Mask	Std Mask

7.10.3.2.3 Recall Power Off

🗜 Recall Power Off

Clicking the **Recall Power Off** button returns the instrument to the last setting before the power supply was last switched off.

7.10.3.3 Save Setup..

💾 Save Setup..

The **Save Setup** button stores the present front-panel setup to a selected setup memory. To save a current setup for later use, you can use any available drive. Use the standard Windows **Setup Files** dialog box. You can create subdirectories or new setup files, or overwrite existing setup files from this dialog box. The **PicoScope 9400A** uses the file extension **.set** for setup files.



Enter a useful comment about each setup you save. Write the comment so that it explains the purpose of the saved file when that file is later accessed.

When you save a setup, all settings, including measurements, markers, horizontal and vertical control settings, trigger configuration, color scheme, and math functions, are saved to the disk file you have selected. The number of setups you can save is limited only by the available space on the drive. Each setup uses approximately 30 kilobytes of disk space.



Ensure your setup files have the extension **.set**. If you do not specify an extension, the oscilloscope supplies one automatically. If you use a different extension, the instrument may not recognize the file as a setup file, and therefore you may have trouble saving or finding the setup file.

To recall a setup you have previously saved, use the **Recall Setup** Recall Setup. button in the same menu.

Try to use the Save Setup button to save important setups!

Remember always to copy important settings and waveforms to an external disk. If your original files are damaged or lost, you can restore the files from the backup disk.

7.10.3.4 Save as Default

💾 Save as Default


Clicking the Save as Default button stores the present front-panel setup as the default setup.

You can recall the saved default setup by clicking the **Default Setup** button **Recall Default** in the <u>System</u> <u>Controls</u> area.

7.10.4 Zoom

The **Zoom** menu allows you to select one from four zoom areas, to zoom and position any of selected zoom area horizontally or vertically.

For more details see **Zoom Menu**.

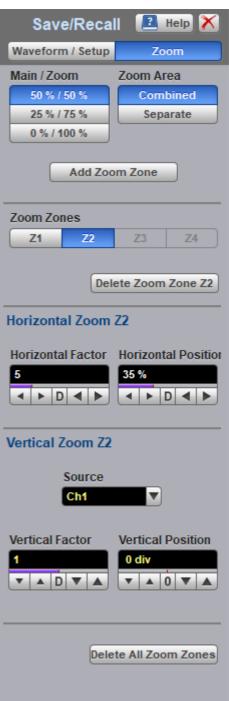

The Zoom Menu

7.11 Trigger Menu

+ Trigger

The scope trigger circuitry helps you locate the waveform you want to view. The oscilloscope uses a reference signal to determine precisely when to acquire data from the signal. The data can then be displayed as a function of time (relative to the reference signal). This reference signal is commonly referred to as a trigger.

The trigger event, when synchronized to the input signal, also defines the horizontal acquisition window. By choosing the trigger event and adjusting the horizontal position (delay between trigger event and the horizontal reference point) you control the location in the data stream (the input signal) from which the waveform record is taken.

The **Trigger** menu includes source, mode, style, level, sensitivity and holdoff controls.

Trigger 🛛 🔝 Help 🗙
Holdoff Mode Time Random Events Holdoff 2 µs I D I I
Mode Freerun Triggered
Settings
✓✓ Shared ✓ Independ
Style Style Style Source Style Edge Edge Edge Edge Clock Recovery Source
Ch1 Ch2 Ch3 Ch4
Level Slope OV V A OVA Bislope
Sensitivity
High Hysteresis
Low 70 % Variable Image: Constraint of the second

The Trigger menu

The **PicoScope 9400A Series** can trigger on events of interest in high-speed debug and validation applications. The trigger system provides trigger sensitivity up to 70 mV at 5 GHz allowing capture of glitches approximately 100 ps wide and trigger jitter to less than 1.5 ps RMS (for the PicoScope 9404A-25).

The **PicoScope 9404A Series** oscilloscopes can also be fitted with an **optional** factory-fitted clock recovery trigger up to 11.3 Gb/s (PicoScope 9404A-33, PicoScope 9404A-25), 8 Gb/s (PicoScope 9404A-16) or 5 Gb/s (PicoScope 9404A-06) for NRZ signals, with eye trigger jitter less than 2.9 ps RMS on all models.

The PicoScope 9404A-25 and 9404A-33 include a 20 GHz external prescaled trigger having sensitivity up to 200 mV peak to peak and trigger jitter to less than 1.5 ps RMS, while the PicoScope 9404A-16 includes a 16 GHz external prescaled trigger having trigger jitter to less than 2.0 ps RMS.

The trigger event establishes the time-zero point in the waveform record. All points in the record are located in time with respect to that point. The oscilloscope continuously acquires and retains enough sample points to fill the pre-trigger portion of the waveform record (that part of the waveform that is displayed before, or to the left of, the triggering event on screen). When a trigger event occurs, the oscilloscope starts acquiring samples to build the post-trigger portion of the waveform record (displayed after, or to the right of, the trigger event). Once a trigger is recognized, the digitizing oscilloscope will not accept another trigger until the acquisition is complete.

7.11.1 Holdoff Mode



Holdoff is a period of time. It disables the trigger circuit for a given period of time after the last trigger occurred. Use holdoff to obtain a stable trigger for repetitive, composite or complex waveforms. For example, if the number or duration of sub-signals is known you can disable them by choosing an appropriate holdoff value.

Time

Sometimes you can achieve a stable display of complex, repetitive waveforms by placing a condition on the time between each successive trigger event. The <u>Holdoff</u> control sets the amount of time that the scope waits before re-arming the trigger circuitry. For example, if you have a burst of pulses and want to trigger on the first pulse in the burst, you can set the holdoff time to be slightly longer than the burst width.

Random

This mode varies the trigger holdoff from one acquisition to another by randomizing the time value between triggers. The randomized time values can be between the values specified in the <u>Min Holdoff</u> time and <u>Max</u> <u>Holdoff</u> time fields. This mode ensures that the oscilloscope re-arms after each acquisition in a manner that minimizes or eliminates the likelihood of triggering at the beginning of a burst. Randomizing the holdoff increases the likelihood that the oscilloscope will trigger on different data phases of a multi-phase burst. This mode mixes up the traffic pattern the oscilloscope triggers on and is very effective when used on repeating patterns.

7.11.2 Holdoff, Min Holdoff, Max Holdoff

Holdoff	Min Holdoff	Max Holdoff
2 µs	2 µs	1 ms

Trigger **Holdoff** helps stabilize triggering. When you adjust the **Holdoff** control, the amount of time that the scope waits before re-arming the trigger circuitry also changes.

The **Holdoff** range is from 500 ns to 15 s in a 1-2-5-10 sequence. When fine mode is on, you can change holdoff time with 4 ns increment.

7.11.3 Mode



The trigger modes control the behaviour of the instrument when not triggered. The **Mode** menu lets you select between **Freerun** and **Triggered** modes.

Freerun

With the **Freerun** mode, the trigger circuit is armed and the instrument waits for up to 200 μ s for a trigger occur. If a trigger does not occur within 200 μ s, the instrument triggers itself, and the data that is acquired with the trigger is displayed on the screen. Use the **Freerun** mode when you are unsure how to setup the trigger menu to trigger the instrument, or for DC trigger signals. This mode forces the instrument to trigger, giving you glimpses of the signal, which then allows you to set up the instrument to display the signal.

For waveforms whose period is greater than 200 μ s the **Freerun** mode should not be used, because the scope's 200 μ s timeout will always occur before your waveform trigger. For waveforms whose period is lower than 200 μ s, the **Freerun** mode works similarly to the **Triggered** mode.

Use **Freerun** triggering when you are not using an external trigger and you want to view the waveform for amplitude information only. **Freerun** triggering allows the instrument to trigger as soon as the instrument is armed, and is asynchronous to the data. You can also use **Freerun** triggering to view a signal without any timing information. It is an easy way to examine the amplitude of a signal.

Triggered

In **Triggered** mode, the instrument displays data only after all of the trigger conditions are met. **Triggered** mode keeps the instrument from triggering and displaying data on the screen before a specific trigger event occurs. Use **Triggered** mode to update the display only when a trigger event occurs or for waveforms that have a fundamental period of less than 200 µs.

7.11.4 Settings



This feature determines how the oscilloscope applies trigger level, slope and hysteresis to the input channels.


Shared

Sets the trigger level, slope and hysteresis in common across all input channels. As an example, changing the trigger level of one channel changes the trigger levels of all input channels to the same level.

Independent

Allows you to set a unique trigger level, slope and hysteresis for each input channel. As an example, changing the trigger level on one channel does not affect the trigger level setting of the other input channels.

7.11.5 Style

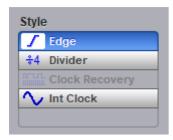

There are several different styles of trigger used in digitizing oscilloscopes. The **PicoScope 9400A Series** uses **Edge**, **Divided**, **Clock recovery**, **Internal clock** and **External Prescaler** styles.

Edge

Edge is the traditional and most often used style of trigger. You can use it with analog or digital signals. It identifies a trigger condition by looking for the slope (rising, falling or bislope), voltage level (trigger level) and hysteresis sensitivity of the source you select. When the trigger edge crosses a predefined threshold, the oscilloscope begins to sample and acquire data from the signal. By acquiring data from the input signal, the oscilloscope can reconstruct the waveform and display it on the display screen. Edge trigger has a DC to 2.5 GHz frequency range.

Divided

The **Divided** trigger extends the trigger frequency range up to 6 GHz. In this mode, the circuitry includes a low-jitter, high-speed frequency divider with division factor of 4. The divided signal is applied to the existing trigger circuitry. Slope, trigger level and hysteresis controls function as in the **Edge** style of trigger, and thus it will operate correctly on a sine wave input down to DC.

External Prescaler (PicoScope 9404A-33, 9404A-25 and 9404A-16 only)

Connect an external trigger source to the Prescaler Trigger Input connector. The External Prescale trigger source is prescaled (divided down by 8) before being applied to the trigger system. It has a trigger frequency range between 1 GHz and 20 GHz (for the **PicoScope-9404A-33** and the **PicoScope-9404A-25** models) and up to 16 GHz (for the **PicoScope 9404A-16** model). Use this selection for direct or prescaled triggering on higher frequency signals than those that can be triggered on with the internal trigger.

External Prescaled triggering is AC-coupled, 50Ω terminated, and has a fixed level of zero volts. Therefore, the instrument has no level or slope controls with this trigger source. If a trigger signal with a significant DC offset is used, the DC element is blocked. Certain trigger signals that reside at 0 V for a long time period and then have an occasional pulse (for example, a pattern generator pattern trigger) will not perform well.


Clock recovery (optional)

The **Clock recovery** trigger derives a timing reference directly from the NRZ waveform to be measured. The clock recovery trigger covers the most popular electrical standards used today from 6.5 Mb/s to 11.3 Gb/s bit (for the **PicoScope-9404A-33** and the **PicoScope-9404A-25** models), up to 8 Gb/s bit (for the **PicoScope-9404A-16** models), and up to 5 Gb/s bit (for the **PicoScope-9404A-06** models).

Internal clock

This style of trigger is used when oscilloscope performs auto-calibration, and for triggering the calibrator output.

7.11.6 Source

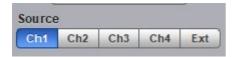

The trigger Source determines the source of the trigger signal. They are the most commonly used trigger sources and are available for all trigger styles.

Changing trigger sources while the instrument is running causes newly acquired data to overwrite existing waveforms that are on the display. However, if the instrument is stopped, changing the trigger sources does not change the display until the instrument starts running again.

7.11.7 Level



The **Level** variable specifies the voltage threshold that a signal must cross in order for the instrument to trigger on that signal. The trigger level determines the voltage level where the trigger point occurs. When the input signal crosses this voltage level, the instrument triggers.

The instrument has **Trigger Level Indicator** that shows the trigger level on the waveform record.

You can select the trigger level in one of three ways:

- By using the Level spin box.
- By using the Level spin boxes in the Permanent Controls area.
- By using the **Pop-up Keypad** to quickly enter numeric data using the mouse.
- Drag the the Trigger Level Indicator.

You can adjust the trigger level value between -1 V and 1 V in 10 mV steps (coarse increment) or 1 mV steps (fine increment). With manual or calculator data entry the increment is 0.1 mV.



Perform the <u>Autoscale</u> function if you want the instrument to automatically set the trigger level to the amplitude midpoint of the trigger signal.

The Level value changes automatically if the attenuation factor is changed.

7.11.8 Slope



The **Slope** menu specifies whether the instrument triggers on either the positive, negative, or both edges of the signal.

Positive

Triggers on an edge that transitions through and above the trigger level.


Negative

Triggers on an edge that transitions through and below the trigger level.

Bi-slope

Triggers on an either edge that transitions through and below the trigger level.

7.11.9 Sensitivity

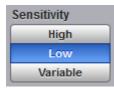

High

The triggering system has a high sensitivity trigger mode that lowers the hysteresis allowing the oscilloscope to trigger on higher frequency waveforms. High sensitivity should be used for waveforms above 100 MHz.

Low

The **PicoScope 9400A Series** triggering system is set, by default, to low trigger sensitivity. In this mode, hysteresis is used in the trigger circuit to prevent incorrect double triggering on low-bandwidth waveforms. This is the normal sensitivity of the instrument. Low sensitivity should be used for all waveforms 5 GHz or below in frequency.

Variable

You can vary the hysteresis value to control the trigger sensitivity.

7.11.10 Hysteresis



Hysteresis is the difference between the arming voltage and the trigger level voltage. It defines the minimum peak-to-peak waveform voltage that can cause a trigger. The waveform must cross both the arming level voltage and the trigger level voltage to generate a trigger event.

You can vary the Hysteresis to control the trigger sensitivity.

7.12 Zoom Menu

From the <u>Channels</u>, <u>Acquire</u> or Save/Recall menus, select the **Zoom** submenu, then assign and scroll the zoomed areas.

		Zoom Area
Main / Zoon	_	
50 % / 50	_	Combined
25 % / 75 % Separate		
0 % / 100	%	
_		
A	dd Zoo	m Zone
Zoom Zone	s	
Z1	Z2	Z3 Z4
	Del	ete Zoom Zone Z2
	-	70
Horizontal	Zoom	4
Horizontal F	antor	Horizontal Position
	actor	
6.993		28.275 %
11 11 17		
Vertical Zo	om Z2	
Vertical Zo	om Z2	
	om Z2 ource	
Sc		
Sc	ource	
So	ource h1	Vartical Position
Sc C Vertical Fac	ource h1	Vertical Position
So C Vertical Fac 2.4615	ource h1 tor	-4.62 div
Sc C Vertical Fac	ource h1 tor	
So C Vertical Fac 2.4615	ource h1 tor	-4.62 div
So C Vertical Fac 2.4615	ource h1 tor	-4.62 div
So C Vertical Fac 2.4615	tor	-4.62 div

The Zoom Menu

7.12.1 Zoom Select



Click **Z1–Z4** to set up each zoom zone. The controls under each tab apply only to that zoom zone.

7.12.2 Main / Zoom

Main / Zoom
50 % / 50 %
25 % / 75 %
0 % / 100 %

Main / Zoom defines the vertical dimension ratio between the main and zoom areas.

- 50% / 50%. Area for non-zoomed waveforms occupies upper 50% of vertical size, and area for zoomed waveforms occupies lower 50% of vertical size.
- 25% / 75%. Area for non-zoomed waveforms occupies upper 50% of vertical size, and area for zoomed waveforms occupies lower 50% of vertical size.
- 0% / 100%. 100% of vertical size is occupied by zoomed waveforms.

7.12.3 Zoom Area



Zoom Area defines how zoomed waveforms are displayed.

- Combined. All zoomed waveforms are displayed in one vertical area of the graticule.
- Separate. Zoomed waveforms are displayed in two vertical areas of the graticule. This mode is available only when exactly two zoom zones are defined.

7.12.4 Horizontal Factor



Horizontal Factor changes the zoom factor (or scale) in the zoom zone.

Horizontal factor can be changed from 1 to 2000 in 1-2-5 increments.

7.12.5 Horizontal Position


Horizontal Position				
60 %				
•	۲	D	•	►

Horizontal Position changes the position of the zoomed waveform in the zoom zone.

Horizontal position can be changed from 0% to 100%.

Menu

7.12.6 Vertical Zoom Source

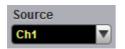

Zoom Source is used to select a source for the zoomed area.

7.12.7 Vertical Factor



Vertical Factor changes the zoom factor (or scale) in the zoom zone.

Vertical factor can be changed from 0.01 to 100 in 1-2-5 increments.

7.12.8 Vertical Position



Vertical Position changes the position of the zoomed waveform in the zoom zone.

Vertical position can be changed from -800 to 800 divisions.

Index

#

of Acquisitions 111
of Failed Smpl variable 207
of Failed Wfm variable 207
of Samples variable 207
of Waveforms variable 207

A

About... 84 Acquire Menu 99 Acquiring waveforms 13 Acquisition Mode 106 Acquisition tab 105 Acquisitions number of 111 Action menu 111 Add Point button 203 Add Polygon button 200 Air vents 12 Aliasing 218 All Color button 125 Alternating current symbol 9 Analysis menu 73 ANSI T1.102 masks list 191 Auto format 121 Automask Delta X variable 196 Delta Y variable 196 function 195 source list 195 units option 196 Automated measurements 19 Autoscale 82

B

Base variable 254 Beep 111 Bit operation 225 Blackman-Harris window 221, 224 Build Automask button 194

С

Calculator 80 Calibration 12 Caution symbol 9 Channel Bandwidth 93 Channel Deskew 93 Channel Display 90 Channel External Scale 95 Channel Input Coupling 94 Channel Input Impedance 94 Channel Invert 93 Channel Offset 91 Channel Position 92 Channel Scale 91 Channel Select 89 Channel Setup 89 Channels menu 87 Cleaning 12 Clear All Measurements 162, 251 Clear button 82 Color 124, 125, 126, 127 Color grade scale 127 Color Palette menu 126, 127 Complex Scale menu Imaginary 229 Magnitude 229 Phase 229 Real 229 Connect waveform dots 115 Connections 11,34 Contents 33 Copy button 84 Cosine window 224 Create Mask button 185

Channel Acquire 90

D

Damage 12 Default colors 127 Default Setup button 83 Define Parameters menu 164, 252 Delay 104 Delete Mask function 206 Delete Point button 205 Delete Polygon button 201 Demo mode 60, 84, 86 Direct current symbol 9 Disk Source menu 263 Disk... menu 262 Display area 61,123 menu 113, 120 persistence 115 Display Color menu 124 Displaying waveforms 13

ps9400Aug-1

Disposal symbol 9 Dots display 115 Drag 61 Dual YT format 121 Dual-Channel Delay parameter 248 Gain parameter 250 Parameters menu 248 Y Source menu 248

E

Edit Mask function 197 Edit menu 67 Electrical inputs 34 Electrical symbols 9 Environment 12 Erase Mask function 208 Ethernet interface 26 Ethernet masks list 188 External Scale Attenuation 96 External Scale Mode 96 External Scale Units 97 Eye Boundary variables 164 Eye Diagram Define Parameters menu 164 definition 163 Measure menu 131 menu 128 Mode menu 166 Parameter 130 Source menu 130 Statistics menu 165 Statistics on/off 166 Thresholds menu 164 View Define Param control 162 Waveforms variable 166 Weight variable 166 Eye diagram measurements 22 Eye window 131

F

FFT Basics 218 Menu 217 Operators 220 FFT Window Blackman-Harris 224 Cosine 224 Flattop 224 Hamming 223

```
Hann 224
Kaiser-Bessel 224
menu 221
rectangular 223
Fibre Channel masks list 189
File extensions 264, 265, 267, 270
File menu 62
File Name Mode menu 263
File Type menu 263
Filattop window 221, 224
Format menu 121
```

G

Graticule measurements 17 Graticule menu 123 Gray scaling 115 Ground reference indicator 61 Grounding 11

Η

Hamming window 221, 223 Hann (Hanning) window 221, 224 Help button 84 Help menu 77 Histogram 125 # of Samples variable 173 # of Waveforms variable 173 Axis control 170 menu 167 Mode 172 Offset variable 177 Run Until menu 173 Scale button 176 Scale Mode control 177 Scale Type control 176 Scale variable 177 Set default window 174 Setup menu 170 Source menu 172 Visible 172 Visible button 174 Weight variable 172 Window button 173 Window Display menu 174 Window Limit variables 175 Window Limits control 174 Histogram measurement 20 Holdoff 273 Holdoff Mode 273 Humidity 12

ps9400Aug-1

IEEE measurement points 252 Infinite persistence 115 Input range 10 Insulation symbol 9 Interface selecting 27 Interpolation 226 ITU G.703 masks list 189

K

Kaiser-Bessel window 221, 224

LAN connecting to 27 LAN interface 26 LAN oscilloscopes list of 30 LAN settings common 28 in PicoSample 4 30 in scope 29 LEDs 27 Left Margin variable 257 Left Threshold and Right Threshold menus 258 Load button 265 Lower Threshold variable 165, 256

M

M1 Position and M2 Position variables 181 M1 Source and M2 Source menus 182 Main menu 61,86 Mains voltage 10, 11 Margins menu 256 Margins Mode menu 257 Marker menu 178 Motion control 182 Reference control 183 Set Reference button 183 Type controls 180 Marker measurements 18 Mask 125 Alignment option 194 Margins control 193 Mask Test 23 Compare with menu 184

menu 184 Run Until menu 207 Select Action menu 208 Test option 185 Math zoom 231 **Mathematics** Algebraic operators 215 Arithmetic operators 213 Categories 212 Display menu 212 menu 209, 211 Operand menus 228 Operator menu 212 Select menu 211 Trigonometric operators 216 Visible button 212 Measure Display menu 237 menu 232 Source menu 238 X Parameters menu 239 Measurement area 78, 131 Measurements menu 72 Measuring waveforms 17 Method menu 253, 254 Middle Threshold variable 256 Miscellaneous operators 226

Ν

Network interface 26 Numeric values entering 80 Nyquist frequency 218

0

Order codes 33 Output 34

Ρ

Package contents 33 PAM4 154, 157, 161 PAM4 Optic Parameters 161 Parameter menu 236 Parameter Mode menu 238 PC requirements 8 Permanent controls 79, 123 Persistence 115 Persistence time 119 PicoSample 4 60 Place on Graticule menu 122 Pop-up keypad 80 Power cord 11

Q

Quad YT format 121

R

RapidIO masks list 188 Recall Setup button 267 Recall User Mask 208 Record Length 103 Rectangular window 221,223 Redo button 83 Refresh time 119 Repair 12 Reset all 120 Right Margin variable 257 Run button 82 Run Until menu 110,264

S

Safety 9 Safety symbols 9 Sample Rate and Resolution 103 Sampling Mode 101 Save function 264 Save Setup button 270 Save User Mask button 208 Save Waveform function 262 Save Wfms 111 Save/Recall menu 260 Scale Type menu 230 Scale and Duration 102 Scaling menu 229 Screen menu 120 Screen X= control 122 Screen Y= control 122 Segmented mode 106 Self-windowing 223 Servicing 12 Set Color menu 124, 127 Set on top menu 125 Setup menu 71,266 Initialization 267 Recall Default button 268 Recall Factory button 268

Recall Power Off button 270 Recall Setup button 267 Save as Default button 270 Save Setup button 270 Side menus 81, 124 Single button 82 Single Parameter button 238 Single YT format 121 SMA connectors 34 SONET/SDH Masks list 187 Source 126 Specifications 36, 58 acquisition 41 display 46 environmental 59 eye diagram 51 histogram 51 horizontal 40 inputs/outputs 57 marker 48 mask test 52 mathematics 50 measure 49 PC connection 58 physical characteristics 59 power requirement 58 save/recall 47 trigger 43 USB 58 Standard Mask button 186 Startup 60 demo mode 86 with PicoScope 9000 86 without Instruments 86 Startup mode 31 Static awareness 9 Statistics 237 menu 165, 258 Mode menu 258 Status area 81 Stop button 82 Storage 12 Style 114, 119 Style menu 115 System controls 81 System menu 74

Т

Temperature 12 Thresholds 164 menu 254, 255