

# PicoSource® PG900 Series

**USB** differential pulse generators



#### Three PicoSource models

Integrated 60 ps pulse outputs: PG911
Tunnel diode 40 ps pulse heads: PG912
Both output types: PG914
Integrated pulse outputs
Differential with deskew
60 ps transition time
2.5 V to 6 V amplitude
Tunnel diode pulse heads
Differential with deskew
40 ps transition time
200 mV amplitude

# **Advanced features**

Output deskew with 1 ps resolution
Low-jitter trigger input and output
User-variable pulse width
Internal trigger clock
Trigger hold-off
Configuration
USB 2.0 connected
Microsoft Windows compatible
Applications

TDR/TDT network and match analysis
Spectral and flatness measurements
Timing, jitter, and crosstalk
determination
Semiconductor testing
Impulse ultra-wideband radars
Laser diode drivers

www.hyxyyq.com

#### PicoSource PG900 Series

## **USB** differential pulse generators

The fast-transition pulse can stimulate a transmission path, device, or network with a broad-spectrum signal in a single instant. These signals, combined with differential capability, are valuable for making high-speed broadband measurements in many fields such as time domain reflectometry, semiconductor testing, gigabit interconnect and port testing, and in radar systems.

High-speed differential data is becoming the dominant measurement challenge in digital, computing, interconnect and telecommunications systems. Despite this need, cost-effective, fast-transition differential pulse generators were hard to find ... until now.

# **Key specifications**

#### PicoSource PG911 and PG914

- Integrated 50 Ω SMA(f) step recovery diode outputs
- < 60 ps single-ended pulse transition time</li>
- Two 2.5 V to 6 V variable amplitude outputs
- ±1 ns timing deskew in 1 ps steps
- 20 dB 10 GHz SMA(m-f) attenuators supplied fitted to SRD pulse outputs

#### PicoSource PG912 and PG914

- External 50 Ω N(m) positive and negative tunnel diode pulse heads
- < 40 ps pulse transition time</li>
- Fixed 200 mV output amplitude
- ±500 ps timing deskew in 1 ps steps
- Inter-series N(f)-SMA(m) adaptors included with pulse heads

#### All PicoSource PG900 models

- Differential outputs
- 200 ns to 4 µs pulse width
- Adjustable 1 µs to 1 s internal clock period
- Typical 3.0 ps RMS jitter relative to external trigger



# A versatile, portable pulse generator


The PicoSource PG900 Series of low-jitter triggered differential USB pulse generators offer a range of advanced features:

- The pulse outputs are optimized for broad spectral content (fastest transition time) to best suit spectral and time-domain transmission and reflectometry measurements
- The internal clock provides stand-alone, self-triggered operation
- Trigger input and output allow the pulse generators to source or respond to system triggers
- Differential outputs ensure that the proliferation of gigabit differential interconnects and systems (such as SATA, USB3, HDMI, Ethernet) can all be addressed

Essential to any differential measurement is the ability to adjust for small but significant velocity and path length differences that are bound to exist in any measurement setup. The PicoSource PG900 pulse generator outputs can each be adjusted (time-skewed) by 1 ns (integrated pulse outputs) or 200 ps (tunnel diode pulse heads) in 1 ps increments to deskew path differences before the measurement, or to deliberately stress a transmission path with timing skew.

Despite their small size and portability, PicoSource pulse generators have plenty of drive capability, with integrated step recovery diode outputs of up to 6 V pk each into 50  $\Omega$ . That's a powerful 12 V pk differential pulse amplitude to drive lossy paths or stress system ports. Outputs are adjustable in 10 mV steps down to 2.5 V pk. An adjustable amplitude limit is provided to protect sensitive devices, and 20 dB attenuators are supplied fitted to the pulse outputs for small-signal optimal match applications.

## Step recovery diode variable-amplitude pulse

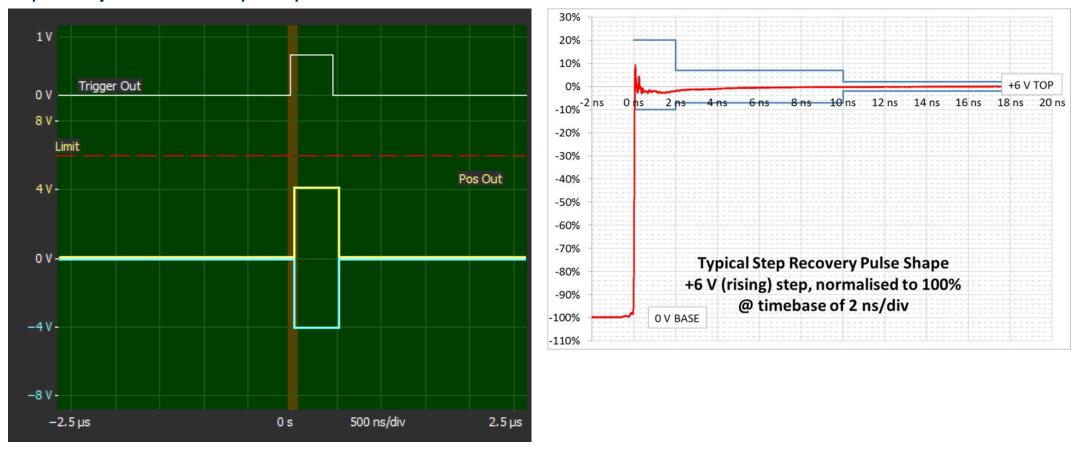

The positive (fast rise) and negative (fast fall) pulses are both ground-referenced and each pulses in opposite polarity to its selected amplitude. This amplitude (the "mark") is held for the selected pulse width and then returns to ground. Further pulses are prevented for the selected hold-off period and thereafter repeat at 40 ns after the next received trigger. When the internal clock is selected, the pulse repeats at the selected period and hold-off is inactive. An output trigger is generated 40 ns before every pulse, however initiated.

Pulse transition time is typically 55 ps and spectral content extends to 12 GHz.

The negative (fast fall) pulse can be selected for even faster transition time by selecting "fast" rather than "smooth" mode. Pulse aberration is compromised but transition time is typically 45 ps and spectral content extends to around 14 GHz.

## Tunnel diode head fixed-amplitude pulse




The positive (fast rise) and negative (fast fall) pulses are both DC offset referenced and each pulses in opposite polarity by its independent fixed amplitude. This amplitude (the "mark") is held for the selected pulse width and then returns to ground. Further pulses are prevented for the selected hold-off period and thereafter repeat at 40 ns after the next received trigger. When the internal clock is selected, the pulse repeats at the selected period and hold-off is inactive. An output trigger is generated 40 ns before every pulse, however initiated.

Pulse transition time is typically 40 ps and spectral content extends to 14 GHz.


## **Connection diagrams**

The following diagrams demonstrate differential and single-ended TDR and TDT setup options for a PicoSource pulse generator, PicoScope® 9300 Series sampling oscilloscope, and the device under test (DUT). In all setups shown, the PG911 or PG912 pulse generator can be replaced by a PicoSource PG914.

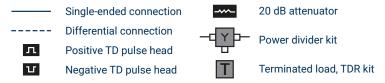


# **TDR applications**

PicoSource pulse generators can be used to realize time domain reflectometry with a PicoScope 9300 Series sampling oscilloscope without that function (PicoScope 9301, 9302, 9321 and 9341).

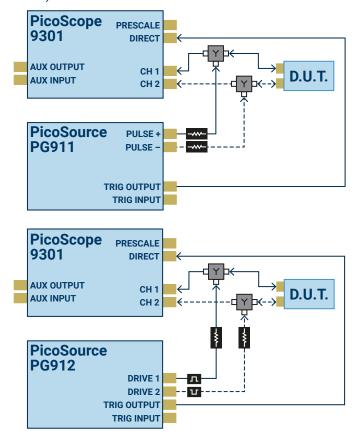


### **TDT applications**

PicoSource pulse generators can also be used to realize time domain transmission (TDT) with a PicoScope 9300 sampling oscilloscope without that function (PicoScope 9301, 9302, 9321, and 9341). They also offer the versatility of a remotely-placed signal generator for long line or installed system testing when used with any of the PicoScope 9300 models.

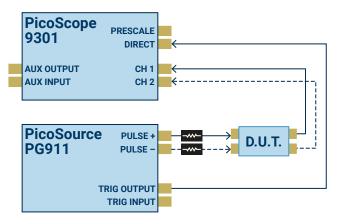

## TDT and crosstalk application

PicoSource pulse generators can be used with a PicoScope 9341 four-channel sampling oscilloscope for simultaneous time domain transmission and crosstalk assessment.

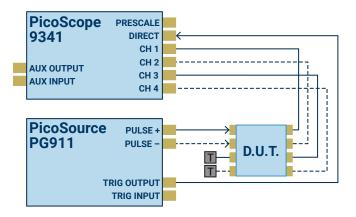

# Single-ended measurements


Single-ended measurements can be performed with a two-channel sampling oscilloscope. Differential measurements can also be tackled by first measuring transmission and then changing connections for crosstalk measurement. Unconnected ports should be correctly terminated in this case.

www.hyxyyq.com

## PicoSource PG900 pulse control software for Windows

PicoSource pulse generators are connected by USB, and controlled by the supplied PicoSource PG900 software. This straightforward application runs on Microsoft Windows and features a clear graphical display of the pulse, limits and trigger settings as they are applied. Default and user pulse settings can be saved for future use, and the software can be tested in demonstration mode.

PicoSource PG900 software can be downloaded from picotech.com/downloads.

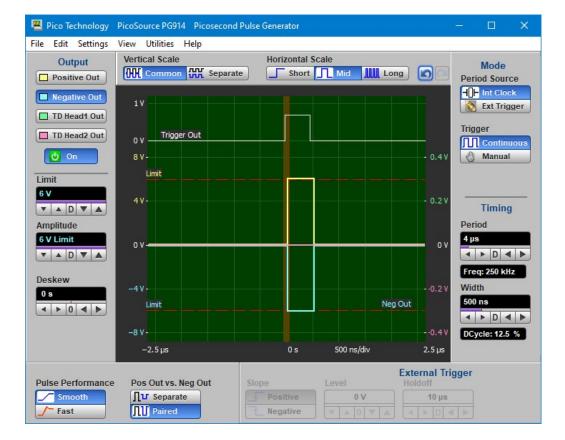

## Front and rear panels


#### PicoSource PG911




#### PicoSource PG912



### PicoSource PG914

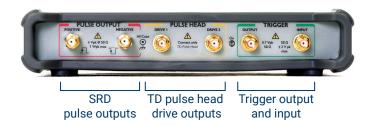

#### All models

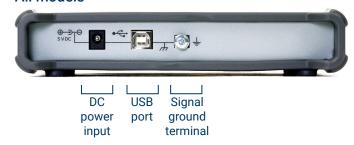

# PicoSource PG900 Series pulse generator specifications

PicoSource PG911 and PG914					
INTEGRATED STEP RECOVERY DIOD	DE PULSE OUTPUTS				
Pulse outputs	Positive-going (fast rise) and negative-going (fast fall) outputs returning to 0 V. Adjustable amplitude and timing parameters. Fast transition on leading edge.				
Output impedance	50 Ω				
Output connector	SMA(f)				
Output amplitude	Adjustable 2.5 V to 6 V in 10 mV steps				
Output accuracy	±10%				
Output amplitude limit	2.5 V to 6 V, adjustable in 100 mV increments				
Output protection limit	±10 V DC, or AC peak				
Duty cycle limit	50% maximum (for 2.5 V to 4 V amplitude) 20% maximum (up to 6 V amplitude)				
Differential deskew range	w range Adjustable in 1 ps steps over 2 ns range				
Pulse transition time	< 60 ps (10% to 90%)	< 50 ps (10% to 90%)			
	< +20%, -10% for first 2 ns	100. 100.			
Pulse aberrations	$< \pm 7\%$ to 10 ns $< \pm 2\%$ to (pulse width-50 ns)	< +40%, -10%			
Trailing edge transition time	< 8 ns (10% to 90%)				
PicoSource PG912 and PG914	(10% to 90%)				
DRIVE OUTPUTS WITH TUNNEL DIO					
Positive tunnel diode pulse head	Positive-going (fast rise) output on < 70 mV ped Fixed amplitude and adjustable timing parameter				
Positive turiner diode pulse riead	Fixed amplitude and adjustable timing parameters.  Fast transition on leading edge.				
	Negative going (fast fall) output on < −70 mV pe	edestal.			
Negative tunnel diode pulse head	Fixed amplitude and adjustable variable timing parameters.				
	Fast transition on leading edge.				
Output impedance	50 Ω ±2 Ω				
Output connector	N(m)				
Output amplitude	Fixed 200 mV				
Output protection limit	±0 V DC, or AC peak, except open or short circuit reflection of the source signal. No prolonged reverse bias allowed.				
Output accuracy	±25%				
Differential deskew range	Adjustable in 1 ps steps over 200 ps minimum, 300 ps typical				
Pulse transition time		< 40 ps (10 % to 90%)			
	< ±20%, for first 2 ns				
Pulse aberrations	$< \pm 7\%$ to 15 ns $< \pm 2\%$ to (pulse width – 50 ns)				
	> ±2% to (puise width = 50 fts)				

Trailing edge transition time	< 8 ns (10% to 90%)				
Dimensions (each pulse head)	80 mm x 28 mm x 25 mm				
Weight (each pulse head)	125 g				
All models and outputs					
PULSE TIMING					
Pulse trigger source	External input, manual single shot event or internal clock				
Jitter relative to leading edge	3.0 ps RMS typical. 3.5 ps RMS maximum.				
Post-trigger delay to pulse leading edge	Fixed 42 ns ±2 ns Allows leading-edge capture on sampling oscilloscopes				
Pulse width and accuracy	200 ns to 4 µs ±10% ±50 ns, adjustable in steps of 25 ns				
Pulse width jitter	< 150 ppm of width RMS				
External trigger hold-off	Adjustable 1 µs to 1.3 ms in steps of 200 ns, to maximum of 345 ms in steps of < 15 ppm				
INTERNAL CLOCK SPECIFICATION					
Period and accuracy	Adjustable 1 µs to 1 s, ±100 ppm ±10 ns in steps of 200 ns				
EXTERNAL TRIGGER INPUT SPECIFICATION					
Impedance	50 Ω ±1%				
Connector	SMA(f)				
Maximum input level	+16 dBm, or ±2 V DC or AC pk				
Bandwidth	1 GHz, DC coupled				
Trigger polarity	Selectable rising or falling edge				
Trigger level	Selectable -1 V to +1 V in steps of 1 mV				
Sensitivity	< 50 mV pk-pk DC to 100 MHz, rising linearly to 100 mV pk-pk at 1 GHz				
Minimum pulse width	500 ps at 100 mV pk-pk				
<b>EXTERNAL TRIGGER OUTPUT SPECIFIC</b>	EXTERNAL TRIGGER OUTPUT SPECIFICATION				
Trigger output pulse	Fixed amplitude and timing parameters, positive edge polarity, trigger is leading edge				
Impedance	50 Ω ±0.5 Ω				
Connector	SMA(f)				
Amplitude and offset	$>$ 700 mV fixed, on logic low of 0 V $\pm$ < 100 mV				
Pulse width	500 ns ±100 ns				
Trigger to trigger output delay	4 ns ±1 ns				
Trigger to trigger output jitter	2.5 ps RMS typical. 3 ps RMS maximum.				
Transition time	< 400 ps (10% to 90%)				

GENERAL SPECIFICATIONS			
AC to DC adaptor	5 V ±5% at 1.6 A, 8 W, universal plug (adaptor included)		
PC connection	USB 2.0 (USB 1.1 and USB 3.0 compatible), 1.8 m USB 2.0 lead included		
PC requirements	Windows XP SP3 to Windows 10		
Operating temperature range	+5 °C to +40 °C		
Storage temperature range	-20 °C to +50 °C		
Temperature range for stated specifications	+15 °C to +25 °C or T <sub>CAL</sub> (temperature of calibration) ±5 °C		
Operating humidity range	< 85% RH (non-condensing) at +35 °C		
Storage humidity range	< 95% RH (non-condensing)		
Altitude range	Up to 2000 m		
Pollution degree	2		
Ingress protection	IP20		
Dimensions (instrument)	190 mm W x 180 mm D x 40 mm H		
Weight (instrument)	560 g		
Compliance	FCC (EMC), CE (EMC and LVD)		
Warranty	5 years		

Specifications describe guaranteed performance over the stated temperature range and apply after the instrument's temperature has been stabilized in one hour of continuous operation. All specifications are subject to change without notice.

Factory calibration cycle. For optimum performance, the instrument should have a complete verification of specifications once every 12 months.



# R

# 北京海洋兴业科技股份有限公司(证券代码: 839145)

北京市西三旗东黄平路19号龙旗广场4号楼(E座)906室 邮编: 100096

电话: 010-62176775 62178811 62176785

企业QQ: 800057747 维修QQ: 508005118

企业官网: www.hyxyyq.com

传真: 010-62176619

邮箱: market@oitek.com.cn

购线网: www.gooxian.com



扫描二维码关注我们

查找微信公众号:海洋仪器

# Kit contents







PicoSource PG911 PicoSource PG912 PicoSource PG914

# **ALL KITS CONTAIN:**

PicoSource PG900 software disk • Quick Start Guide • AC to DC adaptor 5 V DC at 2 A, universal input USB 2.0 cable 1.8 m • PicoWrench RF combination wrench • Storage and carry case

Order code	Description	PG911	PG912	PG914
Not available separately	Positive 40 ps tunnel diode pulse head (attached to the device)		•	•
Not available separately	Negative 40 ps tunnel diode pulse head (attached to the device)		•	•
TA172	12 GHz N(f) to SMA(m) adaptor (2 pack)		•	•
TA173	10 GHz 20 dB SMA(m-f) attenuator (2 pack)	•		•
Not available separately	50 Ω coaxial SMA(m-m) pulse drive cable 60 cm (2 pack)		•	•